



Quick Operation Guide

While holding down the [DEMO/SONG] or [PIANO/VOICE] button, press one of the highlighted keys shown below to select a Demo Song or set a parameter. (Refer to Diagrams 1 and 2 below.)

1



Demo Songs												50 Preset Songs (50 greats for the Piano)												Song Data Loaded from the Computer																																																																																			
A [#] -1	B-1	C0	D0	F0	G0	A0	B0	C1	D1	E1	F1	F#1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7																																																								
Grand Piano 1 E.Piano 1 Harpsichord 1 Harpsichord 2 Pipe Organ 1 Strings												Grand Piano 2 E.Piano 2 Vibrphone Pipe Organ 1 Pipe Organ 2 Strings												Song No. 1 Song No. 3 Song No. 5 Song No. 6 Song No. 8 Song No. 10 Song No. 12 Song No. 13 Song No. 15 Song No. 17 Song No. 18 Song No. 20 Song No. 22 Song No. 24 Song No. 25 Song No. 27 Song No. 29 Song No. 30 Song No. 32 Song No. 34 Song No. 36 Song No. 37 Song No. 39 Song No. 41 Song No. 42 Song No. 44 Song No. 46 Song No. 48 Song No. 49 Song No. 50												Song No. 2 Song No. 4 Song No. 7 Song No. 9 Song No. 11 Song No. 14 Song No. 16 Song No. 19 Song No. 21 Song No. 23 Song No. 26 Song No. 28 Song No. 31 Song No. 33 Song No. 35 Song No. 38 Song No. 40 Song No. 43 Song No. 45 Song No. 47 Consecutive playback 1st song 2nd song 3rd song 4th song 5th song 6th song 7th song 8th song 9th song 10th song																																																																							
A-1 B-1 C0 D0 E0 F0 G0 A0 B0												C [#] 0 D [#] 0 F [#] 0 G [#] 0 A [#] 0 B0												C1 D1 E1 F1 G1 A1 B1												C2 D2 E2 F2 G2 A2 B2												C3 D3 E3 F3 G3 A3 B3												C4 D4 E4 F4 G4 A4 B4												C5 D5 E5 F5 G5 A5 B5												C6 D6 E6 F6 G6 A6 B6												C7											


2




Voices												Reverb Types												Damper Resonance												Reverb Depth												Octave Shift												Volume Balance (Dual mode)												Touch Sensitivity																																																																																																																																																																																																																																																																																																																																																																																																																																															
A [#] -1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	F#1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7																																																																																																																																																																																																																																																																																																																																																																																																																																																																			
Room												Hall 1												Stage												Off												On												0												1												3												4												5												6												8												9												10												11												12												13												15												16												17												18												19												20												Most suitable for the selected voice												-1 (Voice 1)												0 (Voice 1)												-1 (Voice 2)												0 (Voice 2)												+1 (Voice 1)												-6												-4												-2												-1												0												+1												+3												+4												+5												+6												Fixed												Medium												Hard											
A-1 B-1 C0 D0 E0 F0 G0 A0 B0												C [#] 0 D [#] 0 F [#] 0 G [#] 0 A [#] 0 B0												C1 D1 E1 F1 G1 A1 B1												C2 D2 E2 F2 G2 A2 B2												C3 D3 E3 F3 G3 A3 B3												C4 D4 E4 F4 G4 A4 B4												C5 D5 E5 F5 G5 A5 B5												C6 D6 E6 F6 G6 A6 B6												C7																																																																																																																																																																																																																																																																																																																																																																																																																							

Quick Operation Guide

- 3** While holding down the [METRONOME] button, press one of the highlighted keys shown below to set a parameter.

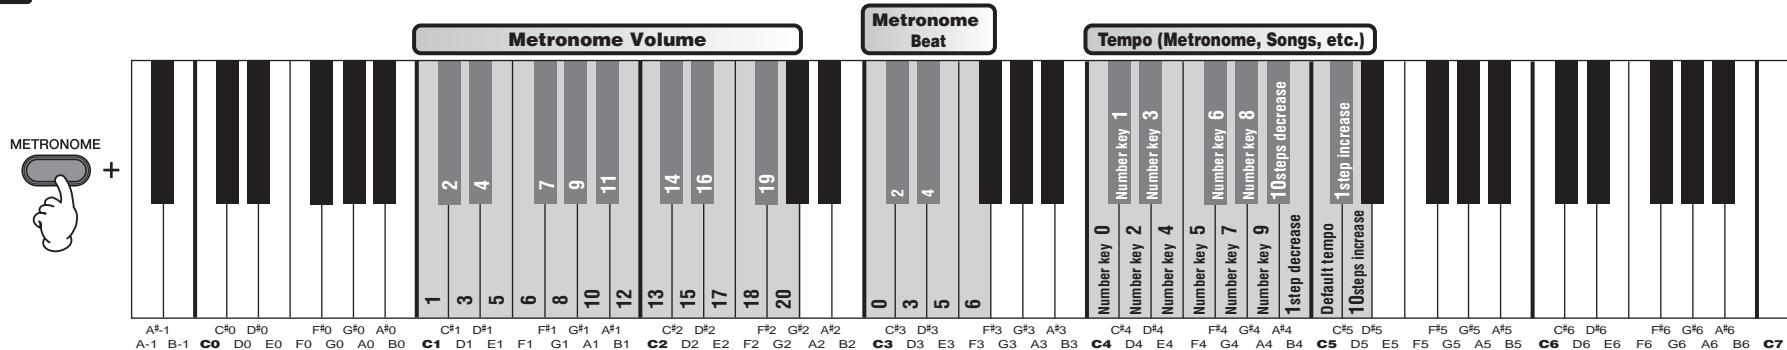

- 4** While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press one of the highlighted keys shown below to set a parameter.

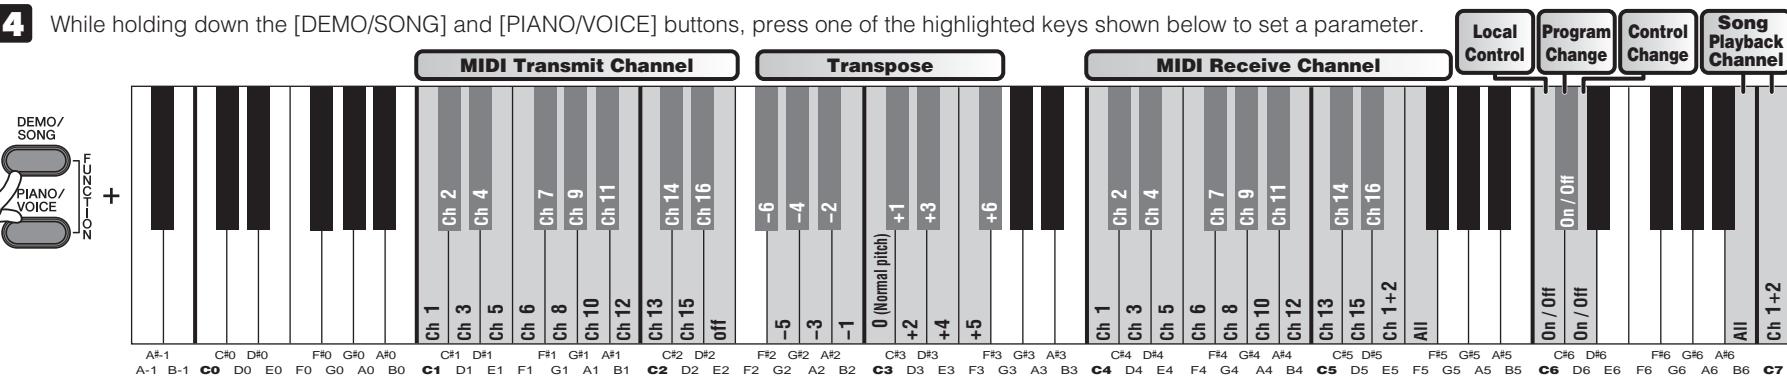

- 5** While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press the [+ R], [- L] or both buttons as shown below to fine tune the pitch of your instrument.

