


Remote control functions

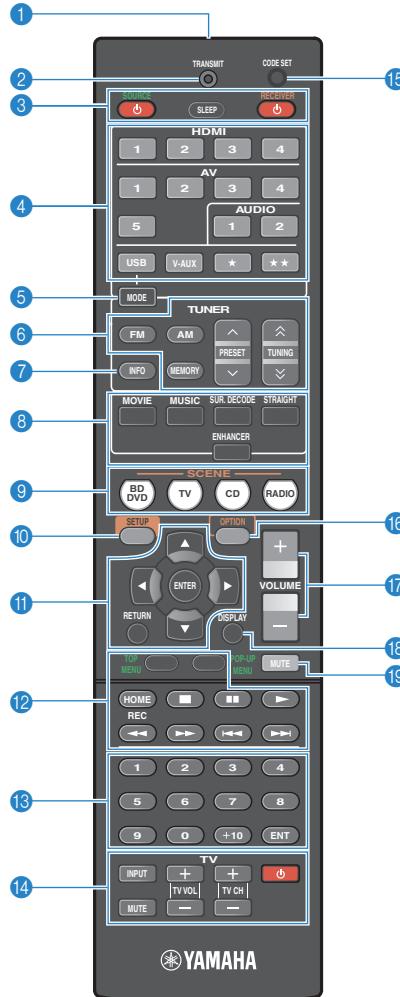

1 Remote control signal transmitter

Transmits infrared signals.

2 TRANSMIT indicator

Lights up when remote control signals are transmitted.

3 SOURCE key

Turns on/off an external device (p.3).

SLEEP key

Switches the unit to standby mode automatically after a specified period of time has elapsed (sleep timer). Press repeatedly to set the time (120 min, 90 min, 60 min, 30 min, off).

RECEIVER key

Turns on/off (standby) the unit.

4 Input selection keys

Select an input source for playback.

HDMI 1-4 HDMI 1-4 jacks

AV 1-5 AV 1-5 jacks

AUDIO 1-2 AUDIO 1-2 jacks

USB USB jack (on the front panel)

V-AUX VIDEO AUX jacks (on the front panel)

★/★★ Change the external device to be controlled without switching the input source.

5 MODE key

Switches between "Stereo" and "Mono" for FM radio reception.

Switches the iPod operation modes.

6 Radio keys

Operate the FM/AM radio.

FM Switches to FM radio.

AM Switches to AM radio.

MEMORY Registers FM/AM radio stations as presets.

PRESET Select a preset station.

TUNING Select the radio frequency.

7 INFO key

Selects the information displayed on the front display.

8 Sound mode keys

Select a sound mode.

9 SCENE keys

Select the registered input source and sound program with one touch. Also, turns on the unit when it is in standby mode.

10 SETUP key

Displays the setup menu.

11 Menu operation keys

Cursor keys Select a menu or a parameter.

ENTER Confirms a selected item.

RETURN Returns to the previous screen.

12 External device operation keys

Let you play back and select menus and perform other operations for external devices (p.3).

13 Numeric keys

Let you enter numerical values (p.3).

14 TV operation keys

Let you select TV input and volume and perform other TV operations (p.2).

15 CODE SET button

Registers remote control codes of external devices on the remote control (p.2).

16 OPTION key

Displays the option menu.

17 VOLUME keys

Adjust the volume.

18 DISPLAY key

Switches between the browser and playback screens during playback of the iPod or USB storage device.

Switches the display information for the external device (p.3).

19 MUTE key

Mutes the audio output.



- To operate external devices with the remote control, register a remote control code for each device before using (p.2).



Controlling external devices with the remote control

You can use the unit's remote control to operate external devices (such as BD/DVD players) if you have registered the remote control code of the external device.



- You cannot control an external device that does not have a remote control sensor.
- Ensure that the remote control ID of the external device is set to "ID1". If any other ID is selected, the remote control operations may not work properly.
- If the unit's remote control is without batteries for more than 2 minutes, the registered codes may be cleared. If this happens, insert new batteries and register the codes again.



- Under the unit's default settings, the amplifier code (Yamaha: 5098) is set for all the input selection keys. With this setting, you can control HDMI Control-compatible devices connected to the unit with the remote control. (This function may not work depending on the specification of the external device.)

Registering the remote control code for a TV

You can use the unit's remote control to operate a TV if you have registered its remote control code.



- You can also register your TV's remote control code to the unit's input selection keys (p.3). This would allow you to use the cursor keys or numeric keys to operate the TV (this function may not be available on some TV models).

1 See “List of remote control codes” (p.6) to find your TV's remote control code.



- If there are multiple remote control codes, register the first code in the list. If that does not work, try the other codes.

2 Press CODE SET using a pointed object such as the tip of a ballpoint pen.

The TRANSMIT indicator blinks twice.

Perform each of the following steps within 1 minute. Otherwise, the setting will be canceled. If this happens, repeat from Step 2.

3 Press TV ⏻.

4 Use the numeric keys to enter the 4-digit remote control code.


Once the remote control code is successfully registered, the TRANSMIT indicator blinks twice.

If it blinks six times, registration has failed. Repeat from Step 2.

■ TV operations

Once you have registered the remote control code for your TV, you can control it using the TV operation keys, regardless of the input source selected on the unit.

	INPUT	Switches the video inputs of the TV.
	MUTE	Mutes the audio output of the TV.
TV operation keys	TV VOL	Adjust the volume of the TV.
	TV CH	Switch the channels of the TV
	TV ⏻	Turns on/off the TV.

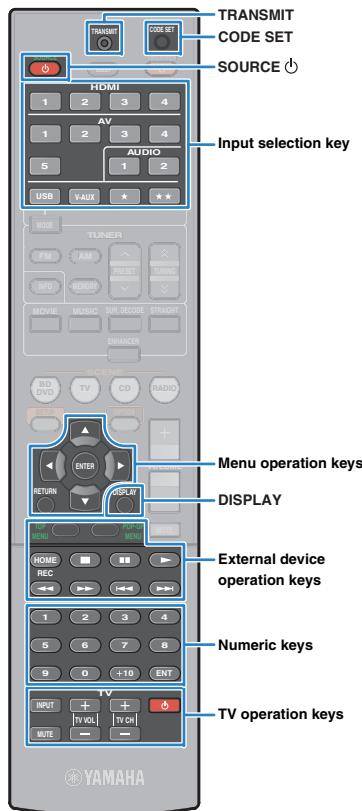

Registering the remote control codes for playback devices

You can use the unit's remote control to operate playback devices if you have registered their remote control codes. You can also use the input selection keys to change the playback devices that are controlled by the remote control, because their remote control codes are assigned to the input selection keys.



- If you assign the remote control code for an external device to the star (★ or ★★) key, you can operate the device with the remote control without switching the input source after pressing the star key.

1 See “List of remote control codes” (p.6) to find the remote control code for your playback device.



- If there are multiple remote control codes, register the first code in the list. If that does not work, try the other codes.

2 Press CODE SET using a pointed object such as the tip of a ballpoint pen.

The TRANSMIT indicator blinks twice.

Perform each of the following steps within 1 minute. Otherwise, the setting will be canceled. If this happens, repeat from Step 2.

3 Press the input selection key.

For example, press HDMI 1 to set the remote control code for the playback device connected to the HDMI 1 jack.

4 Use the numeric keys to enter the 4-digit remote control code.

Once the remote control code is registered successfully, the TRANSMIT indicator blinks twice.

If it blinks six times, registration has failed. Repeat from Step 2.



- For details on how to register a remote control code to a SCENE key, see “Changing the external device assigned to the SCENE keys” (p.4)


Playback device operations

Once you have registered the remote control code for your playback device, you can control it using the following keys after selecting the input source or scene.

SOURCE ⊖	Turns on/off the playback device.
Menu operation keys	Cursor keys Select an item.
	ENTER Confirms a selected item.
	RETURN Returns to the previous screen.
DISPLAY	Switches information on the display.
TOP MENU	Displays the top menu.
POP-UP MENU	Displays the pop-up menu.
HOME/REC	Displays the home menu. Starts recording.
External device operation keys	■ Stops playback.
	■■ Stops playback temporarily.
	▶ Starts playback of the selected song/video.
	◀ Searches forward/backward (by holding down).
	◀▶ Skips forward/backward.
Numeric keys	Enter numerical values.
TV operation keys	Control the TV (p.2).



- These keys work only if the corresponding function is available on your playback device and if the device can be operated with an infrared remote control.

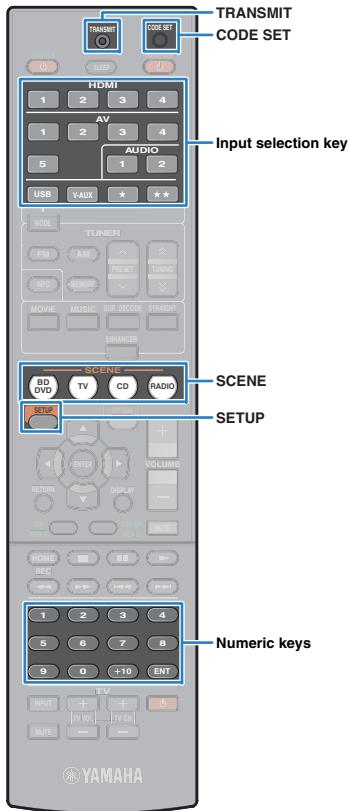

Changing the external device assigned to the SCENE keys

If you want to control your playback device after selecting a scene, follow the procedure below.

- 1 If you have not registered the remote control code for the device yet, follow “Registering the remote control codes for playback device” (p.3).**
- 2 Hold down the corresponding SCENE key and input selection key together for more than 3 seconds.**

Once the setting is successfully completed, the TRANSMIT indicator blinks twice.

If it blinks six times, the setting has failed. Repeat step 2.

Resetting remote control codes

You can reset a remote control code registered to each input selection key.


- 1 Press CODE SET using a pointed object such as the tip of a ballpoint pen.**
The TRANSMIT indicator blinks twice.
Perform each of the following steps within 1 minute.
Otherwise, the setting will be canceled. If this happens, repeat from Step 1.
- 2 Press the input selection key.**
- 3 Use the numeric keys to enter “5098”.**

Once the remote control code is reset successfully, the TRANSMIT indicator blinks twice.

If it blinks six times, resetting has failed. Repeat from Step 1.

To reset the remote control to factory default settings

- ① Press CODE SET using a pointed object such as the tip of a ballpoint pen.
- ② Press SETUP.
- ③ Use the numeric keys to enter “9981”.

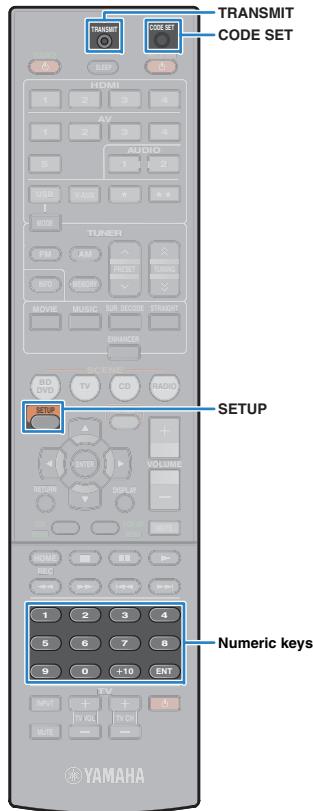

Changing the remote control ID of the remote control

Change the remote control's ID so that it matches the unit's remote control ID.



- Perform each of the following steps within 1 minute. Otherwise, the setting will be automatically canceled.

- 1 Press CODE SET on the remote control using a pointed object, such as the tip of a ballpoint pen.**
- 2 Press SETUP.**
- 3 Use the numeric keys to enter “5019” (ID1) or “5020” (ID2).**

Once the remote control ID is registered successfully, the TRANSMIT indicator blinks twice.

If it blinks six times, registration failed. Repeat from Step 1.



- The registered remote control codes are not cleared even if you change the remote control ID.
- You can change the unit's remote control ID in the “ADVANCED SETUP” menu. For details, refer to “Owner's Manual”.

List of remote control codes

TV		Arthur Martin	0321	Bush	0269, 0282, 0283, 0304, 0320, 0323, 0328, 0332, 0340, 0343, 0344, 0346, 0348, 0349, 0350, 0372, 0382, 0463, 0470, 0472	Crown	0058, 0161, 0171, 0179, 0320, 0323, 0343, 0349, 0350, 0351
A.R. Systems	0320	ASA	0339, 0347	Asberg	0171, 0320, 0350	CS Electronics	0277, 0340, 0342
Acme	0342	Astra	0343	byd:sign	0093	CTC Clatronic	0341
Acura	0323, 0343	Asuka	0277, 0282, 0337, 0340, 0342	Candle	0008, 0026, 0050, 0057	CTX	0205
ADC	0337	Atlantic	0277, 0320, 0342, 0349, 0350	Capsonic	0337	Curtis Mathes	0007, 0008, 0010, 0019, 0021, 0026, 0049, 0050, 0178
Admiral	0054, 0178, 0336, 0337, 0339, 0346, 0347	Atori	0323, 0343	Carena	0320	CXC	0058, 0179
Advent	0158	Auchan	0321	Carnivale	0050	Cybertron	0340
Adventura	0057	Audiosonic	0161, 0282, 0320, 0340, 0342, 0343, 0349, 0350	Carrefour	0344	Cytron	0152
Adyson	0277, 0282, 0342	AudioTon	0161, 0282, 0342	Carver	0010	Daewoo	0007, 0008, 0026, 0037, 0053, 0167, 0266, 0275, 0277, 0282, 0315, 0320, 0323, 0331, 0335, 0342, 0343, 0350, 0381, 0465
Agashi	0277, 0282	Audiovox	0058, 0179, 0194	Cascade	0320, 0323, 0343	Dainichi	0277, 0340
Agazi	0337	Ausind	0171	Casio	0367	Dansai	0277, 0282, 0320, 0337, 0349, 0350
Aiko	0277, 0282, 0320, 0323, 0342, 0343	Autovox	0171, 0282, 0337, 0339, 0342	Cathay	0320, 0349, 0350	Dantax	0161, 0349
Aim	0320	Aventura	0051	CCE	0183, 0282	Dawa	0320
Aiwa	0078, 0379	Awa	0277, 0282	Celebrity	0055, 0107	Daytron	0007, 0008, 0026, 0323, 0343
Akai	0050, 0055, 0109, 0159, 0181, 0277, 0282, 0320, 0323, 0340, 0343, 0349, 0350	Axion	0156	Celera	0039	De Graaf	0346
Akiba	0320, 0340	Baird	0282	Centurion	0320, 0349, 0350	Decca	0282, 0320, 0342, 0349, 0350
Akura	0320, 0323, 0337, 0340	Bang & Olufsen	0180, 0339	Century	0339	Dell	0145, 0245
Alaron	0277	Basic Line	0282, 0320, 0323, 0340, 0343, 0350	CGE	0161, 0171	Denver	0358, 0362
Alba	0161, 0277, 0320, 0323, 0340, 0342, 0343, 0344, 0349, 0351, 0372, 0382	Bastide	0282, 0342	Changhong	0039	Desmet	0320, 0349, 0350
Albatron	0140	Baur	0320, 0349	Chimei	0273	Diamant	0320
Alcyon	0171	Bazin	0282	Cimline	0323, 0343	Diamond	0277
Alleron	0059	Beko	0161, 0269, 0294, 0302, 0311, 0320, 0328, 0351	Citizen	0007, 0008, 0026, 0050, 0058	DiamondVision	0135, 0143
Allorgan	0282	Belcor	0008	City	0323, 0343	Dimensia	0049
Allstar	0320, 0350	Bell & Howell	0019, 0054	Clarion	0179	Disney	0219
America Action	0179	Benq	0097, 0242, 0361	Clarivox	0349	Dixi	0282, 0320, 0323, 0343, 0349, 0350
AMOI	0276	Beon	0320, 0349, 0350	Clatronic	0161, 0171, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350, 0351	Dream Vision	0461, 0498
Amplivision	0161, 0282, 0321, 0342	Best	0161	CMS	0277	DTS	0323, 0343
Amstrad	0320, 0323, 0337, 0340, 0343	Bestar	0161, 0320, 0350	CMS Hightec	0282	Dual	0282, 0320, 0342
Amtron	0058	Binatone	0282, 0342	Coby	0197	Dual-Tec	0342, 0343
Anam	0179, 0343	Blue Sky	0320, 0340	Colortyme	0008, 0026	Dumont	0008, 0030, 0062, 0282, 0339, 0341, 0342
Anam National	0052, 0058	Blue Star	0348	Commercial Solutions	0021	Durabrand	0031, 0051, 0179, 0215
Anglo	0323, 0343	Boots	0282, 0342	Concerto	0008, 0026	Dux	0349
Anitech	0171, 0320, 0323, 0337, 0343	BPL	0320, 0348	Concorde	0323, 0343	Dwin	0178
Anasonic	0161, 0168, 0320, 0323, 0341, 0343	Bradford	0058, 0179	Condor	0161, 0277, 0320, 0323, 0342, 0350, 0351	Dynatron	0320, 0349, 0350
AOC	0008, 0026, 0050, 0053	Brant	0322, 0345	Contec	0179, 0277, 0323, 0342, 0343, 0344	Dynex	0228, 0231
Apex	0039, 0111, 0217	Brillian	0182	Contec/Cony	0012, 0058	EIZO	0509
Arcam	0277, 0282	Brinkmann	0320	Continental Edison	0345	Elbe	0161, 0168, 0282, 0320
Arcam Delta	0342	Brionvega	0320, 0339, 0349, 0350	Cosmel	0323, 0343	Elcit	0339
Aristona	0320, 0349, 0350	Britannia	0277, 0282, 0342	Craig	0058, 0179	Electa	0348
		Brockwood	0008	Crosley	0010, 0037, 0171, 0339	ELECTRO TECH	0343

Electroband	0055, 0107	Fujitsu Siemens	0504, 0505, 0507, 0510, 0511	Harwood	0320, 0323	Intervision	0161, 0282, 0320, 0337, 0341,
Electrograph	0176	Funai	0051, 0058, 0059, 0112, 0113, 0115, 0118, 0119, 0179, 0337, 0488, 0489	Havermy	0178	Irradio	0342 0171, 0320, 0323, 0340, 0343,
Electrohome	0008, 0026, 0052, 0055			HCM	0282, 0320, 0323, 0337, 0342, 0343, 0348	Isukai	0349, 0350 0320, 0340
Element	0230			Hema	0282, 0323	ITC	0282, 0342
Elin	0277, 0320, 0323, 0342, 0349, 0350	Futuretech	0058, 0179	Hewlett Packard	0192	ITS	0277, 0320, 0340, 0348, 0350
Elite	0320, 0340, 0350	Galaxi	0320, 0351	Higashi	0277	ITT	0343, 0347
Elman	0341	Galaxis	0161, 0320	HiLine	0320	ITV	0320, 0343, 0349
Elta	0277, 0323, 0343	Gateway	0176, 0177, 0241	Hinari	0320, 0323, 0340, 0343, 0344, 0349, 0350	Janeil	0057
Emerson	0000, 0007, 0008, 0012, 0013, 0019, 0026, 0031, 0037, 0051, 0058, 0059, 0161, 0179, 0320, 0339	GBC	0323, 0343, 0344	Hisawa	0321, 0340, 0348	JBL	0010
Emprex	0154	GE	0008, 0021, 0023, 0026, 0027, 0031, 0034, 0049, 0052, 0056, 0209	Hisense	0247	JC Penney	0007, 0008, 0026, 0027, 0049, 0053, 0056
Envision	0008, 0026, 0050	Geant Casino	0321	Hitachi	0008, 0012, 0026, 0066, 0084, 0092, 0093, 0120, 0172, 0173, 0255, 0270, 0271, 0282, 0320, 0335, 0338, 0342, 0344, 0346, 0347, 0365, 0382, 0448, 0456, 0467, 0482, 0484, 0487	JCB	0055, 0107
Epson	0155, 0206, 0359	GEC	0282, 0320, 0342, 0347, 0349, 0350	Hornynphon	0320, 0350	Jensen	0008, 0026
Erres	0320, 0349, 0350	Geloso	0323, 0343, 0346	Hoshai	0340	JVC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375
ESA	0051	General Technic	0323, 0343	Huanyu	0277, 0342	Kaisui	0277, 0282, 0320, 0323, 0340, 0342, 0343, 0348
ESC	0282	Genexxa	0320, 0340, 0347, 0350	Hygashi	0277, 0282, 0342	Kamosonic	0342
Etron	0343	GFM	0128, 0227	Hyper	0277, 0282, 0323, 0342, 0343	Kamp	0277, 0342
Eurofeel	0282	Gibralter	0008, 0030, 0050, 0062	Hypson	0282, 0320, 0321, 0337, 0342, 0348, 0349, 0350	Kapsch	0347
Euro-Feel	0337	GoldHand	0277	Hyundai	0141	Karcher	0161, 0320, 0342, 0343, 0349
Euroline	0349	Goldline	0320	Iberia	0320	Kawasho	0008, 0026, 0055, 0277
Euroman	0161, 0277, 0282	GoldStar	0007, 0008, 0012, 0026, 0031, 0050, 0053, 0161, 0277, 0282, 0320, 0323, 0342, 0343, 0346, 0349, 0350	ICE	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350	KEC	0179
Euromann	0320, 0337, 0342, 0350	Goodmans	0246, 0272, 0282, 0320, 0323, 0337, 0343, 0344, 0349, 0350, 0462, 0473, 0477	ICeS	0277	Kendo	0161, 0320, 0341, 0346
Europhon	0277, 0282, 0320, 0341, 0342, 0350	Gorenje	0161, 0351	Ilo	0148, 0153	Kenwood	0008, 0026, 0050
Expert	0321	GPM	0340	IMA	0058	KIC	0282
Exquisit	0320	GPX	0129	Imperial	0161, 0171, 0320, 0347, 0350, 0351	Kingsley	0277, 0342
Fenner	0323, 0343	Gradiente	0240	Indiana	0320, 0349, 0350	KLH	0039
Ferguson	0322, 0345, 0349	Graetz	0347	Infinity	0010	Kloss Novabeam	0057, 0058
Fidelity	0277, 0320, 0342, 0346	Granada	0171, 0282, 0320, 0321, 0342, 0344, 0346, 0349, 0350	InFocus	0250, 0327, 0363, 0479, 0508	Kneissel	0161, 0168, 0320
Filsai	0282	Grandin	0340, 0343, 0348, 0349	Ingelen	0347	Kolster	0320, 0350
Finlandia	0346	Gronic	0282	Ingersol	0323, 0343	Konka	0340
Finflux	0171, 0282, 0320, 0339, 0341, 0342, 0349, 0350	Grundig	0160, 0161, 0171, 0310, 0320	Initial	0153	Korpel	0320, 0349, 0350
FIRST LINE	0342, 0343, 0350	Grunpy	0058, 0059, 0179	Inno Hit	0171, 0282, 0320, 0323, 0340, 0342, 0343, 0349, 0350	Kortting	0161, 0339
Firstline	0277, 0282, 0320, 0323	Haier	0157, 0233	Innovation	0337, 0343	Kosmos	0320
Fisher	0019, 0161, 0282, 0339, 0342, 0344, 0351	Halifax	0277, 0282, 0337, 0342	Insignia	0131, 0228, 0236, 0238	Koyoda	0343
Flint	0320, 0350	Hallmark	0008, 0026, 0031	Inteq	0030	KTV	0007, 0050, 0058, 0179, 0183, 0282, 0342
Formenti	0171, 0277, 0336, 0339, 0342, 0349	Hampton	0277, 0282, 0342	Interactive	0161	Kyoto	0277, 0282
Formenti/Phoenix	0277	Hanseatic	0161, 0168, 0282, 0320, 0323, 0342, 0343, 0344, 0349, 0350	Interbuy	0323, 0343	Lasat	0161
Fortress	0336, 0339	Hantarex	0320, 0323, 0343	Interfunk	0161, 0320, 0339, 0347, 0349, 0350	Lenco	0323, 0343
Fraba	0161, 0320	Hantor	0320	International	0277	Lenoir	0323, 0342, 0343
Friac	0161					Leyco	0320, 0337, 0349, 0350
Frontech	0282, 0323, 0337, 0343, 0346, 0347	Harman/Kardon	0010			LG	0031, 0053, 0066, 0116, 0117, 0140, 0161, 0164, 0175, 0195, 0269, 0277, 0282, 0300, 0309,
Fujitsu	0059, 0069, 0074, 0075, 0282	Harvard	0058, 0179				
Fujitsu General	0282						

LG/GoldStar	0317, 0320, 0323, 0328, 0342, 0343, 0346, 0349, 0350, 0366, 0368, 0377, 0466, 0471, 0478	Memphis	0323, 0343	Novatronic	0320	Phoenix	0161, 0277, 0320, 0339, 0349, 0350
Liesen	0164	Mercury	0320, 0323	Oceanic	0321, 0347	Phonola	0277, 0320, 0339, 0349, 0350
Liesenkotter	0349	Metz	0339	Okano	0161, 0320, 0351	Pilot	0007, 0008, 0050
Life	0320	Micromaxx	0008, 0026, 0031, 0050, 0053	Olevia	0102, 0199, 0200, 0207, 0222	Pioneer	0008, 0026, 0094, 0095, 0161, 0320, 0345, 0347, 0349, 0350, 0458, 0480
Lifetec	0337, 0343	Microstar	0337, 0343	Onwa	0058, 0179	Plantron	0320, 0323, 0337, 0350
Lloyds	0320, 0323, 0337, 0343	Midland	0007, 0021, 0023, 0027, 0030, 0056, 0062	Opera	0320	Playsonic	0282
Loewe	0161, 0168, 0265, 0320, 0330, 0352	Minerva	0171	Oppo	0130	Polaroid	0039, 0142, 0202, 0234
Loewe Opta	0339, 0349, 0350	Minoka	0320, 0350	Optimus	0017, 0019	Poppy	0323, 0343
Logik	0054	Mintek	0153	Optoma	0144	Portland	0007, 0008, 0026, 0053
Luma	0320, 0323, 0346, 0349	Mitsubishi	0008, 0026, 0031, 0053, 0066, 0084, 0093, 0098, 0150, 0178, 0289, 0320, 0339, 0344, 0350, 0376	Optonica	0178	Prandoni-Prince	0171, 0346
Lumatron	0282, 0320, 0346, 0349, 0350	Mivar	0161, 0168, 0171, 0277, 0282, 0342	Orbit	0320, 0350	Precision	0282, 0342
Lux May	0350	Monivision	0140	Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350	Prima	0157, 0243, 0323, 0343, 0347
Luxman	0008, 0026	Montgomery Ward	0376	Orline	0320	Princeton	0140
Luxor	0282, 0342, 0346	Mivar	0161, 0168, 0171, 0277, 0282, 0342	Osaki	0282, 0320, 0337, 0340, 0342	Prism	0023, 0056
LXI	0010, 0019, 0021, 0026, 0027, 0031, 0049, 0111	Monivision	0140	Oso	0340	Profex	0323, 0343
M Electronic	0342, 0343, 0345, 0347, 0349, 0350	Motion	0171	Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350	Profi-Tronic	0320, 0350
MAG	0096	Motorola	0052, 0178	Pael	0277, 0342	Proline	0320, 0350
Magnadyne	0339, 0341, 0349	MTC	0008, 0026, 0050, 0053, 0161, 0277	Palladium	0161, 0282, 0320, 0342, 0351	Proscan	0021, 0027, 0049
Magnafon	0171, 0277, 0341, 0342	Multi System	0349	Palsonic	0282	Prosonic	0161, 0277, 0282, 0320, 0342, 0349
Magnavox	0008, 0009, 0010, 0013, 0026, 0032, 0033, 0048, 0050, 0128, 0211, 0212, 0224, 0226, 0239	Multitech	0058, 0161, 0179, 0183, 0277, 0282, 0320, 0323, 0341, 0342, 0343, 0344, 0346, 0349	Panama	0277, 0282, 0320, 0323, 0337, 0342, 0343	Protech	0282, 0337, 0341, 0342, 0343, 0349, 0350
Magnum	0337, 0343	Murphy	0277, 0342	Panasonic	0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356, 0483, 0485, 0490	Proton	0008, 0012, 0026, 0031
Majestic	0054	NAD	0026, 0031, 0111	Panavision	0320	Protron	0196
Mandor	0337	Naonis	0346	Pathe Cinema	0161, 0168, 0277, 0321, 0342	PROVIEW	0096, 0246
Manesth	0282, 0320, 0337, 0342, 0349, 0350	NEC	0008, 0026, 0050, 0052, 0053, 0072, 0103, 0282, 0344	Pausa	0323, 0343	Provision	0320, 0349
Marantz	0008, 0010, 0026, 0050, 0204, 0320, 0349, 0350	Neckermann	0161, 0282, 0320, 0339, 0342, 0346, 0349, 0350, 0351	Penney	0021, 0023, 0031, 0050, 0111	Pulsar	0008, 0030, 0062
Marelli	0339	NEI	0320, 0349, 0350	Perdio	0277, 0320	Pye	0256, 0320, 0349, 0350, 0378
Mark	0277, 0282, 0320, 0323, 0349, 0350	Net-TV	0176	Perfekt	0320	Pymi	0323, 0343
Masuda	0282	Neufunk	0320, 0323	Philco	0008, 0009, 0010, 0012, 0026, 0050, 0052, 0053, 0161, 0171, 0320, 0339	Quandria Vision	0321
Matsui	0282, 0320, 0323, 0342, 0343, 0344, 0346, 0349, 0350, 0455	New Tech	0343, 0350	Philharmonic	0282, 0342	Quasar	0017, 0023, 0052, 0056
Matsushita	0017	New World	0340	Philips	0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	Quelle	0282, 0320, 0337, 0342, 0349, 0350
Maxent	0147, 0176	NewTech	0282, 0320, 0323	Philips Magnavox	0011, 0032, 0033	Questa	0344
Mediator	0320, 0349, 0350	Nicamagic	0277, 0342	RadioShack	0019, 0021, 0031, 0050, 0179, 0320	Radialva	0320
Medion	0320, 0337, 0343	Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350	RadioShack/Realistic	0007, 0008, 0012, 0026, 0049, 0058		
Megapower	0140	Nikko	0026, 0031, 0050	Radiola	0282, 0320, 0349, 0350		
Megatron	0026, 0031	Nobliko	0171, 0277, 0341, 0342	Radiomarelli	0320, 0339		
MElectronic	0277, 0282, 0320, 0323	Nokia	0347	Radiotone	0161, 0320, 0323, 0350		
Melvox	0321	Norcent	0201	Rank	0344		
Memorex	0019, 0026, 0031, 0053, 0054, 0137, 0215, 0323, 0343	Nordic	0282	RCA	0008, 0021, 0024, 0025, 0026, 0027, 0042, 0049, 0052, 0053, 0063, 0136, 0225		
		Nordmende	0339, 0345, 0347, 0350	Philips Magnavox	0019, 0031, 0050, 0179	Realistic	
		Nordvision	0349				

Recor	0320	Sentra	0323	Supra	0323, 0343	Tokai	0282, 0320, 0350
Redstar	0320	Serino	0277	Supre-Macy	0057	Tokyo	0277, 0342
Reflex	0320	Sharp	0000, 0001, 0002, 0003, 0007,	Supreme	0055, 0107	Tomashi	0348
Revox	0161, 0320, 0349, 0350		0008, 0012, 0026, 0060, 0088,	Susumu	0340	Toshiba	0018, 0019, 0040, 0041, 0046,
Rex	0337, 0346, 0347		0089, 0091, 0138, 0165, 0170,	Sutron	0323, 0343		0073, 0100, 0103, 0108, 0109,
RFT	0161, 0168, 0339		0178, 0198, 0229, 0262, 0278,	SVA	0151		0111, 0121, 0132, 0166, 0208,
Rhapsody	0277		0279, 0291, 0308, 0312, 0336,	Sydney	0277, 0282, 0342		0210, 0214, 0217, 0260, 0268,
R-Line	0320, 0349, 0350		0344, 0354, 0370, 0449, 0450,	Sylvania	0008, 0009, 0010, 0011, 0013,		0282, 0283, 0293, 0304, 0306,
Roadstar	0323, 0337, 0340, 0343		0451, 0464, 0474, 0476, 0481		0026, 0048, 0050, 0051, 0128,		0307, 0329, 0344, 0355, 0454,
Robotron	0339	Sheng Chia	0178		0227, 0253		0491
Rowa	0277, 0282	Shogun	0008	Symphonic	0051, 0058, 0062, 0128, 0179,	Totlevision	0007
Royal Lux	0161	Siarem	0320, 0339, 0341		0215	Towada	0282, 0347
RTF	0339	Sierra	0320, 0350	Syntax	0199	Trakton	0282
Runco	0030, 0050, 0062	Siesta	0161	Syntax-Brilliant	0199	Trans Continens	0282, 0320
Saba	0298, 0322, 0339, 0345, 0347	Signature	0054	Sysline	0349	Transtec	0277
Saisho	0282, 0323, 0337, 0342, 0343	Silva	0277	Sytong	0277	Trident	0282
Salora	0346, 0347	Silver	0344	Tandy	0178, 0282, 0336, 0340, 0342,	Triumph	0320
Sambers	0171, 0341	Singer	0321, 0339, 0341		0347	Uher	0161, 0171, 0320, 0347, 0350
Sampo	0007, 0008, 0026, 0050, 0176	Sinudyne	0320, 0339, 0341, 0349	Tashiko	0277, 0282, 0342, 0344, 0346	Ultravox	0277, 0320, 0339, 0341, 0342
Samsung	0004, 0005, 0006, 0007, 0008,	Skantic	0347	Tatung	0052, 0177, 0282, 0320, 0342,	Unic Line	0320
	0012, 0026, 0031, 0036, 0050,	Solavox	0347		0349, 0350	United	0349
	0053, 0076, 0077, 0079, 0114,	Sonitron	0161, 0282	TCM	0337, 0343	Universum	0161, 0171, 0282, 0320, 0337,
	0124, 0125, 0126, 0127, 0139,	Sonoko	0282, 0320, 0323, 0337, 0342,	Teac	0282, 0320		0349, 0350, 0351
	0161, 0183, 0185, 0190, 0191,		0343, 0349, 0350	Tec	0282, 0323, 0342, 0343	Univox	0320
	0258, 0264, 0277, 0282, 0320,	Sonorolor	0321, 0347	Technics	0017, 0023, 0056	Vector Research	0050
	0323, 0334, 0337, 0342, 0343,	Sontec	0161, 0320, 0349, 0350	TechniSat	0274, 0496, 0497, 0499	Vestel	0282, 0320, 0346, 0347, 0349,
	0349, 0350, 0351, 0373, 0453,	Sony	0038, 0044, 0045, 0047, 0055,	Techwood	0008, 0023, 0026, 0056		0350, 0351
	0468		0090, 0104, 0105, 0107, 0110,	TEDELEX	0282	Vexa	0320, 0323, 0343, 0349
Sandra	0277, 0282, 0342		0123, 0184, 0220, 0248, 0249,	Teknika	0007, 0008, 0010, 0012, 0026,	Victor	0015, 0344, 0350
Sansui	0043, 0109, 0320, 0350		0251, 0252, 0254, 0326, 0343,		0053, 0054, 0058, 0059, 0179	VIDEOLOGIC	0277
Sanyo	0008, 0019, 0068, 0070, 0071,		0344, 0371, 0374, 0457, 0475,	Teleavia	0345	Videologique	0277, 0282, 0340, 0342
	0099, 0161, 0168, 0223, 0237,	Sound & Vision	0340, 0341	Telecor	0282, 0320	VideoSystem	0320, 0350
	0277, 0282, 0288, 0295, 0323,	Soundesign	0008, 0026, 0031, 0058, 0059,	Telefunken	0320, 0322, 0345, 0350	Videotechnic	0277, 0282
SBR	0320, 0349		0179	Telegazi	0320	Vidikron	0010
Sceptre	0235, 0244	Soundwave	0320, 0349, 0350	Telemaster	0320	Vidtech	0008, 0026, 0031, 0053
Schaub Lorenz	0347	Squareview	0051	Telesonic	0320	Viewsonic	0176, 0203, 0232, 0364
Schneider	0282, 0316, 0318, 0320, 0333,	SSS	0008, 0058, 0179	Telestar	0320	Viking	0057
	0340, 0342, 0349, 0350, 0382	Standard	0282, 0320, 0323, 0340, 0342,	Teletech	0320, 0323, 0343, 0349	Viore	0148
Scotch	0026, 0031		0343, 0350	Teleton	0282, 0342	Visiola	0277, 0342
Scott	0008, 0012, 0026, 0031, 0058,	Starlite	0058, 0179, 0320, 0323, 0349	Televideon	0277	Vision	0282, 0320, 0350
	0059, 0149, 0179	Stenway	0348	Televiso	0321	Vizio	0008, 0177, 0218, 0242, 0500,
Sears	0008, 0010, 0019, 0021, 0026,	Stern	0346, 0347	Tensai	0282, 0320, 0323, 0340, 0343,	0501, 0502, 0503, 0506	
	0027, 0031, 0049, 0051, 0059,	Strato	0320, 0323		0350	Vortec	0320, 0349, 0350
	0111	Stylandia	0282	Tesmet	0350	Voxson	0171, 0320, 0339, 0346, 0347,
SEG	0277, 0282, 0320, 0323, 0337,	Sunkai	0343	Tevion	0337, 0343	0350	
	0341, 0342, 0344, 0349, 0382	Sunstar	0320, 0323	Texet	0277, 0282, 0323, 0342	Waltham	0282, 0320, 0342
SEI	0320	Sunwood	0320, 0323, 0343, 0350	Thomson	0162, 0188, 0189, 0285, 0320,	Wards	0008, 0009, 0010, 0026, 0031,
SEI-Sinudyne	0339, 0341, 0347	Superla	0277, 0282, 0342		0322, 0342, 0345, 0350		0048, 0049, 0050, 0053, 0054,
Seleco	0344, 0346, 0347	Superscan	0013, 0178	Thorn	0320, 0349	0059	
Sencora	0323, 0343	SuperTech	0277, 0320, 0323	TMK	0008, 0026, 0031	Watson	0320, 0349, 0350
				TNCi	0030	Watt Radio	0277, 0341, 0342

Waycon	0111	Beaumark	1070	Electrophonic	1071	Howard Computers	1016
Wega	0320, 0339, 0344	Bell & Howell	1065	Elsay	1008	HP	1016
Wegavox	0323	Bestar	1009, 1025, 1030	Elta	1008, 1009, 1029	HTS	1018
Welblick	0282, 0320, 0349, 0350	Black Panther Line		Emerson	1008, 1020, 1068, 1069, 1071	Hughes	1111, 1113, 1122
Westinghouse	0107, 0216, 0220		1009, 1025	ESC	1009, 1025	Hughes Network Systems	1110, 1116
White Westinghouse		Blaupunkt	1028	Etzuko	1008, 1029	Humax	1012, 1110, 1113
	0037, 0090, 0277, 0320, 0341, 0342, 0349	Bondstec	1008, 1030	Expressvu	1018	Hush	1016
Wincom	0101, 0106	Broksonic	1100	Ferguson	1027	Hypson	1008, 1009, 1024, 1029
Xrypton	0320	Bush	1008, 1009, 1024, 1025, 1029, 1049, 1051, 1063, 1217	Fidelity	1008, 1026	iBUYPOWER	1016
Yamaha	0008, 0026, 0050, 0053, 0080, 0081, 0082, 0083, 0086, 0087	Calix	1071	Finlandia	1028	Impego	1030
Yamishi	0282, 0320	Candle	1070, 1071	Finlux	1026, 1027, 1028	Imperial	1026
Yokan	0320	Canon	1068	Firstrline	1008, 1024, 1029, 1031	Inno Hit	1008, 1009, 1025, 1028, 1029, 1030
Yoko	0161, 0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0349, 0350	Cathay	1009	Fisher	1065	Innovation	1024
Yorx	0340	Catron	1030	Flint	1024	Instant Replay	1068
Zanussi	0282, 0346	CGE	1026, 1027	Formenti/Phoenix	1028	Interbuy	1008, 1031
Zenith	0008, 0028, 0029, 0030, 0031, 0054, 0061, 0062	Cimline	1008, 1024, 1029	Frontech	1030	Interfunk	1028
<hr/>							
VCR		CineVision	1104	Fujitsu	1068	Intervision	1009, 1026
ABS	1016	Citizen	1070, 1071	Funai	1026, 1069	Irradio	1008, 1029, 1031
Adventura	1069	Clatronic	1008, 1030	Galaxy	1026	ITT	1027
Adyson	1008	Colortyme	1064	Garrard	1069	ITV	1009, 1025, 1031
Aiwa	1024, 1026, 1027, 1069	Condor	1009, 1025, 1030	Gateway	1016	JC Penney	1064, 1065, 1068, 1070, 1071
Akai	1021, 1027	Craig	1070, 1071	GBC	1029, 1030	JCL	1068
Akiba	1008, 1029	Crown	1008, 1009, 1025, 1029, 1030	GE	1068, 1070	JVC	1007, 1018, 1027, 1039, 1064, 1065, 1066, 1067, 1078, 1089, 1092, 1093, 1094, 1095, 1113, 1208, 1209, 1212, 1213, 1215, 1218
Akura	1008, 1027, 1029	Curtis Mathes	1064, 1068, 1070	GEC	1028	Kaisui	1008, 1029
Alba	1008, 1009, 1024, 1025, 1029, 1030	Cybernex	1070	Geloso	1029	Karcher	1028
Alienware	1016	CyberPower	1016	General	1030	Kendo	1008, 1024, 1025, 1030
Ambassador	1030	Daewoo	1009, 1025, 1030, 1038, 1069, 1223	General Technic	1024	Kenwood	1027, 1064, 1065
American High	1068	Dansai	1008, 1009, 1029	GOI	1018	Kodak	1068, 1071
Amstrad	1008, 1009, 1026	Dantax	1024	GoldHand	1008, 1029	Korpel	1008, 1029
Anitech	1008, 1029	Daytron	1009, 1025	Goldstar	1026, 1031, 1064, 1071	Kyoto	1008
Apex	1088	DBX	1064	Goodmans	1008, 1009, 1025, 1026, 1029, 1030, 1031	Lenco	1025
ASA	1028, 1031	De Graaf	1028	Gradiente	1069	Leyco	1008, 1029
Asha	1070	Decca	1026, 1027, 1028	Graetz	1027	LG	1010, 1026, 1031, 1047, 1054, 1056, 1071, 1103, 1221
Asuka	1008, 1026, 1028, 1029, 1031	Dell	1016	Granada	1028	Lifetec	1024
Audio Dynamics	1064	Denko	1008	Grandin	1008, 1009, 1025, 1026, 1029, 1030, 1031	Linksys	1016
Audiosonic	1009	DiamondVision	1096	Grundig	1028, 1029	Lloyd's	1069
Audiovox	1071	DigiFusion	1014	Hanseatic	1009, 1028, 1031	Loewe Opta	1028, 1031
Baird	1009, 1025, 1026, 1027	DIRECTV	1019, 1105, 1110, 1111, 1113, 1116, 1122	Harley Davidson	1069	Logik	1008, 1029
Bang & Olufsen	1017	Dish Network	1018	Harman/Kardon	1064	Lumatron	1009, 1025
Basic Line	1008, 1009, 1024, 1025, 1029, 1030	Dishpro	1018	Harwood	1008	Luxor	1008
Baur	1028	Dual	1009, 1027, 1028	HCM	1008, 1029	LXI	1071
		Dumont	1026, 1028	Headquarter	1065	M Electronic	1026
		Durabrand	1114	Hewlett Packard	1016	Magnavox	1020, 1068, 1114, 1126
		Dynatech	1069	Hinari	1008, 1009, 1024, 1029		
		Echostar	1018	Hisawa	1024		
		Elbe	1009	Hitachi	1011, 1026, 1027, 1028, 1046,		
		Elcotech	1008	HNS	1062		
		Electrohome	1071	HNS	1110		

Magnin	1071	Philco	1008, 1068	Schaub Lorenz	1026, 1027	Teleavia	1027
Manesth	1008, 1029	Philips	1006, 1013, 1028, 1035, 1040, 1045, 1046, 1050, 1058, 1059,	Schneider	1008, 1009, 1024, 1025, 1026, 1028, 1029, 1030, 1031	Telefunken	1027
Marantz	1028, 1064, 1065, 1068	Philips Magnavox	1076	Sears	1065, 1068, 1071	Teletech	1008, 1009
Mark	1009	Phonola	1028	SEG	1008, 1009, 1029	Tenosal	1008, 1029
Marta	1071	Pilot	1071	SEI-Sinudyne	1028	Tensai	1008, 1026, 1029, 1031
Matsui	1024, 1031	Pioneer	1028, 1036	Seleco	1027	Tevion	1024
Matsushita	1068	Polaroid	1088, 1099	Sentra	1008, 1030	Thomson	1005, 1027
Media Center PC	1016	Portland	1009, 1025, 1030	Sentron	1008, 1029	Thorn	1027
Mediator	1028	Prinz	1026	Sharp	1003, 1033, 1077, 1107, 1127, 1219	Tivo	1108, 1110, 1111, 1113, 1117, 1118, 1119, 1122
Medion	1024	Profex	1029	Shintom	1008, 1029	TMK	1070
MEI	1068	Proline	1026	Shivaki	1031	Tokai	1008, 1029, 1031
Memorex	1023, 1026, 1031, 1065, 1068, 1069, 1070, 1071, 1098, 1114	Proscan	1019	Shogun	1070	Tonsai	1029
Memphis	1008, 1029	Prosonic	1009, 1024	Siemens	1031	Toshiba	1004, 1016, 1027, 1028, 1037, 1049, 1052, 1086, 1087, 1097, 1109, 1112, 1194
MGN Technology	1070	Pulsar	1114	Silva	1031	Totevision	1070, 1071
Micromaxx	1024	Pye	1028, 1102	Silver	1009	Touch	1016
Microsoft	1016	Quarter	1065	Singer	1068	Towada	1008, 1029
Microstar	1024	Quartz	1065	Sinudyne	1028	Towika	1008, 1029
Migros	1026	Quasar	1068	Solavox	1030	TVA	1030
Mind	1016	Quelle	1026, 1028	Sonic Blue	1022, 1123	Uher	1031
Mitsubishi	1026, 1028, 1079	Radialva	1008	Sonneclair	1008	UltimateTV	1019
Motorola	1068	RadioShack	1071	Sonoko	1009, 1025	Ultravox	1009
MTC	1070	RadioShack/Realistic		Sontec	1031	Unitech	1070
Multitech	1008, 1026, 1028, 1029, 1030, 1069, 1070			Sony	1001, 1016, 1048, 1053, 1073, 1074, 1080, 1081, 1082, 1083, 1108, 1118, 1216	United Quick Star	1009, 1025
Murphy	1026	Radiola	1028	Stack	1016	Universum	1026, 1028, 1031
NEC	1027, 1064, 1065	Radix	1071	Stack 9	1016	Vector Research	1064
Neckermann	1027, 1028	Randex	1071	Standard	1009, 1025	Video Concepts	1064
NEI	1028	RCA	1019, 1068, 1070, 1075, 1110, 1113, 1122, 1125	Stern	1009	Videon	1024
Nesco	1008, 1029	Realistic	1065, 1068, 1069, 1070, 1071	STS	1068	Videosonic	1070
Nikkai	1008, 1009, 1030	ReplayTV	1022, 1123	Sunkai	1024	Viewsonic	1016
Nikko	1071	Rex	1027	Sunstar	1026	Voodoo	1016
Niveus Media	1016	RFT	1008, 1028, 1030	Suntronic	1026	Wards	1068, 1069, 1070, 1071
Noblex	1070	Ricavision	1016	Sunwood	1008, 1029	Welblick	1031
Nokia	1009, 1027	Roadstar	1008, 1009, 1025, 1029, 1031	Superscan	1020	XR-1000	1068, 1069
Nordmende	1027	Royal	1008	Sylvania	1020, 1068, 1069, 1102, 1126	Yamaha	1064, 1065
Northgate	1016	Runco	1114	Symphonic	1008, 1069, 1126	Yamishi	1008, 1029
Oceanic	1026, 1027	Saba	1027	Systemax	1016	Yokan	1008, 1029
Okano	1008, 1009, 1024	Saisho	1024, 1029	Tagar Systems	1016	Yoko	1008, 1029, 1030, 1031
Olympus	1068	Samsung	1002, 1034, 1041, 1043, 1057, 1060, 1070, 1084, 1110, 1116, 1122, 1124, 1220, 1222	Taisho	1024	Zenith	1114
Optimus	1071			Tandberg	1009	ZT Group	1016
Orion	1023, 1024, 1051, 1115, 1217			Tandy	1065		
Orson	1026			Tashiko	1026, 1071		
Osaki	1008, 1026, 1029, 1031			Tatung	1026, 1027, 1028	DVD	
Otto Versand	1028			TCM	1015, 1024, 1042	4Kus	2051
Palladium	1008, 1027, 1029, 1031	Samurai	1008, 1030	Teac	1009, 1069	Accurian	2142
Panasonic	1000, 1022, 1044, 1055, 1068, 1072, 1085, 1090, 1091, 1120, 1121, 1214	Sanky	1114	Tec	1008, 1009, 1030	Advent	2155, 2251
Pathe Marconi	1027	Sansui	1023, 1027, 1106, 1115	Technics	1068	AEG	2362
Perdio	1026	Sanyo	1032, 1065, 1070	Teknika	1068, 1069, 1071	Airis	2364
		Saville	1009				
		SBR	1028				

Aiwa	2322	Crown	2362	Global Sphere	2355	Lawson	2355
Akai	2145, 2177, 2179, 2248	C-Tech	2355	Go Video	2133, 2213	Lecson	2381
Akura	2356	Curtis Mathes	2139	Goodmans	2165, 2280, 2291, 2358, 2371,	Lenco	2358, 2362, 2367
Alba	2064, 2165, 2186, 2337, 2346	CVG	2377	GPX	2376, 2382	Lenox	2136, 2153
Alco	2149	CyberHome	2022, 2098, 2138, 2187, 2336	Gradiente	2227	LG	2002, 2033, 2038, 2057, 2129,
Alize	2361	Cytron	2244	Graetz	2151		2133, 2189, 2191, 2223, 2238,
Allegro	2133	Daenyx	2363	Greenhill	2380		2270, 2288, 2335, 2373, 2375
Amitech	2362	Daewoo	2001, 2133, 2276, 2298, 2330,	Grundig	2131	Life	2182
Amphion MediaWorks	2195		2362, 2363, 2377	Grunkel	2349	Lifetec	2182
AMW	2195, 2363	Daewoo International		GVG	2362, 2366	Limit	2355
Apex	2030, 2124, 2125, 2126, 2127, 2130, 2131	Dalton	2363	H&B	2377	Liquid Video	2158
Apple	2241	Dansai	2357	H __ er	2358	Liteon	2043, 2051, 2142
Arrgo	2138	Daytek	2362, 2381	Haaz	2364	Loewe	2320
Asono	2364	Dayton	2184, 2195, 2363	Haier	2354, 2355	LogicLab	2355
Aspire	2152, 2222	DEC	2363	Harman/Kardon	2254	Magnavox	2025, 2050, 2137, 2150, 2159,
Astar	2240	Decca	2358	HiMAX	2047, 2135		2224, 2230, 2358
ATACOM	2364	Denon	2059, 2151, 2193, 2332	Hitachi	2359	Magnex	2367
Audiovox	2061, 2149	Denver	2356, 2358, 2360, 2370	Denver	2062, 2090, 2115, 2274, 2316,	Majestic	2360
Avious	2367	Denzel	2380	Hitachi	2359, 2380	Marantz	2328
Awa	2363	Desay	2205	Hiteker	2130	Marquant	2362
Axion	2249	Diamond	2354, 2355	Home Tech Industries		Matsui	2148, 2378
Bang & Olufsen	2128	DiamondVision	2225, 2232		2364	McIntosh	2199
Baze	2367	Disney	2010, 2028	Hyundai	2366	Mecotek	2362
BBK	2364	DK Digital	2339	Ilo	2245	Medion	2182
Bellagio	2363	Dmtech	2176	Initial	2131, 2245	Memorex	2028, 2145, 2234
Best Buy	2359	Dual	2380	Innovation	2182	MicO	2354, 2382
Blaupunkt	2131	DUNE	2473	Insignia	2002, 2137, 2253	Micromaxx	2182
Blue Parade	2157	Durabrand	2136	Integra	2157	Microsoft	2156
Boghe	2382	DVX	2355	Irradio	2053	Microstar	2182
Brainwave	2362	Easy Home	2359	iSymphony	2246	Minoka	2362
Brandt	2148, 2188	Eclipse	2354	JBL	2246	Minowa	2367
Broksonic	2145, 2146	E-Dem	2364	JVC	2135	Mintek	2131, 2245
Bush	2064, 2110, 2170, 2268, 2290, 2346, 2358, 2367, 2383	Electrohome	2362		2020, 2096, 2097, 2099, 2100,	Mitsubishi	2003
California Audio Labs	2151	Elin	2362		2101, 2102, 2103, 2106, 2107,	Mizuda	2358, 2359
Cambridge Audio	2354	Elta	2341, 2361, 2362		2160, 2257, 2260, 2262, 2263,	Monyka	2380
CAT	2352, 2353	Emerson	2129, 2137, 2150		2321, 2324, 2326, 2327, 2343,	Mustek	2186
CAVS	2192	Enterprise	2129	Jwin	2464, 2465, 2468, 2469, 2471	Mx Onda	2354
Centrum	2353	Enzer	2380	Kansai	2198	Mystral	2366
CGV	2354, 2362	Epson	2247	Kawasaki	2360	Naiko	2362
Changhong	2140	ESA	2137	Kennex	2149	Nesa	2131
Cinetec	2363	Finlux	2354, 2362, 2367	Kenwood	2362	Neufunk	2380
CineVision	2133, 2237	Fintec	2377	KeyPlug	2041, 2151, 2348	Nevir	2362
Clatronic	2358, 2367	Fisher	2134	Kiilo	2362	Next Base	2143
Coby	2031, 2046, 2360	Funai	2137	Kingavon	2362	Nexxtech	2243
Conia	2383	Gateway	2051	Kiss	2358	NU-TEC	2383
Continental Edison	2363	GE	2029, 2131, 2156	KLH	2380	Onkyo	2159, 2368
		Gericom	2351	Koda	2131, 2149	Oopla	2051
		GFM	2226	Koss	2358	Oppo	2196, 2255
		Giec	2382	KXD	2013, 2148, 2158	Optim	2381
		Global Solutions	2355	Landel	2359	Optimus	2180
				Lasonic	2143	Orava	2358
					2132		

Orbit	2363	Rotel	2203	Sylvania	2012, 2137, 2150, 2178, 2230, 2239	Yukai	2186
Orion	2073, 2110	Rowa	2154, 2383	Symphonic	2108, 2230	Zenith	2002, 2129, 2133, 2159, 2223
Oritron	2148, 2158	Rownsonic	2353	Synn	2355		
P&B	2358	Saba	2148, 2188	T.D.E. Systems	2366		
Pacific	2355	Sabaki	2355	Tatung	2001, 2362		
Panasonic	2011, 2024, 2034, 2042, 2058, 2062, 2066, 2067, 2093, 2116, 2117, 2118, 2119, 2120, 2121, 2122, 2123, 2151, 2159, 2164, 2166, 2167, 2172, 2173, 2175, 2209, 2214, 2275, 2277, 2278, 2281, 2282, 2283, 2301, 2374, 2470	Saivod	2362	TCM	2182, 2297	Denon	2452, 2500, 2501
Parasound	2197	Sampo	2141	Teac	2149, 2333, 2355, 2383	Hitachi	2460, 2461, 2463
peeKTON	2364	Samsung	2000, 2045, 2077, 2112, 2113, 2114, 2115, 2151, 2200, 2216, 2219, 2228, 2264, 2265, 2271, 2279, 2294, 2303, 2329, 2365	Tec	2356	JVC	2472, 2473, 2475, 2478, 2496, 2499, 2511
Philips	2008, 2012, 2025, 2044, 2050, 2051, 2053, 2060, 2072, 2108, 2111, 2147, 2159, 2163, 2169, 2174, 2181, 2185, 2230, 2261, 2266, 2267, 2286, 2287, 2289, 2295, 2300, 2302, 2317, 2328, 2338, 2342, 2350, 2467	Sansui	2073, 2145, 2354, 2355, 2362	Technics	2151	LG	2033, 2456, 2457
Phonotrend	2367	Sanyo	2134, 2145, 2217, 2292	Technika	2362, 2367	Marantz (US)	2454, 2455
Pioneer	2016, 2017, 2018, 2019, 2035, 2092, 2094, 2095, 2109, 2157, 2180, 2190, 2212, 2269, 2272, 2299, 2304, 2305, 2306, 2307, 2308, 2309, 2310, 2311, 2344, 2345, 2347, 2379	ScanMagic	2186	Telefunken	2353	Mitsubishi	2450, 2451
Pointer	2362	Schaub Lorenz	2362	Tensai	2362	Onkyo	2504
Polaroid	2125, 2215, 2235	Schneider	2176	Tevion	2182, 2355, 2357	Panasonic	2011, 2209, 2214, 2476, 2477, 2479
Portland	2362	Scientific Labs	2355	Theta Digital	2157	Philips	2510
Powerpoint	2363	Scott	2161, 2357	Thomson	2183, 2188, 2334, 2372	Pioneer	2212, 2506
Prima	2252	Seeltch	2364	Tokai	2356, 2380	Samsung	2045, 2113, 2498
Proceed	2130	SEG	2161, 2355, 2363, 2380	Top Suxess	2364	Sharp	2194, 2220, 2221, 2497, 2502, 2503
Proscan	2156	Sharp	2006, 2040, 2088, 2091, 2182, 2194, 2220, 2221, 2231, 2236, 2293, 2340	Toshiba	2032, 2036, 2037, 2039, 2048, 2049, 2054, 2055, 2072, 2073, 2076, 2078, 2079, 2086, 2145, 2159, 2218, 2233, 2256, 2259, 2296, 2369, 2472	Sony	2075, 2453, 2458, 2459, 2507
Prosonic	2360, 2377	Shinsonic	2245	TRANScontinents	2363, 2367	Toshiba	2462
Protron	2202	Sigmatek	2359, 2364	Transonic	2367	Yamaha	2064, 2448, 2449, 2474, 2505
Provision	2358	Silva	2356	Trio	2362		
Pye	2144	Singer	2354, 2355	Trutech	2242		
Qwestar	2148	Skymaster	2325, 2355	TruVision	2359		
Raite	2380	Skyworth	2356	TSM	2364		
RCA	2021, 2029, 2104, 2105, 2131, 2149, 2156, 2157, 2229	Slim Art	2362	Umax	2361		
RedStar	2356, 2360, 2362	SM Electronic	2355	United	2367		
Regent	2153	Sonic Blue	2133	Urban Concepts	2159	Panasonic	2066, 2067, 2093, 2116, 2117, 2119, 2120, 2122, 2123
Reoc	2355	Sontech	2366	US Logic	2245	Philips	2108, 2111
Rimax	2361	Sony	2004, 2005, 2007, 2009, 2014, 2015, 2023, 2026, 2027, 2052, 2068, 2069, 2070, 2071, 2074, 2075, 2084, 2085, 2087, 2168, 2171, 2208, 2210, 2211, 2258, 2273, 2284, 2285, 2312, 2313, 2314, 2315, 2318, 2319, 2466	Venturer	2149	Pioneer	2016, 2017, 2018, 2019, 2092, 2094, 2095, 2109
Rio	2133	Soundmaster	2355	Viewmaster	2364	RCA	2105
Roadstar	2331, 2358	Soundmax	2355	Vocopro	2206	Samsung	2113, 2219
Ronin	2363	Spectra	2363	VocoStar	2207	Sharp	2088, 2091
		Spectroniq	2201	Waitec	2364	Sony	2084, 2085, 2087
		Standard	2355	Welltech	2382	Toshiba	2086, 2218
		Star Cluster	2355	Westinghouse	2063, 2250	Victor	2475
		Starmedia	2358, 2364	Wharfedale	2354, 2355	Yamaha	2089, 2118
		Sungale	2204	Woxter	2361, 2364		
		Sunkai	2362	Xbox	2156, 2183		
		Superscan	2150	Xlogic	2355, 2362		
		Supervision	2355	XMS	2362		
				Xoro	2382		
				Yamada	2051, 2361, 2363		
				Yamaha	2056, 2064, 2065, 2080, 2081, 2082, 2083, 2089, 2118, 2151, 2323		
				Yamakawa	2363, 2380		

Blu-ray Disc

Denon	2452, 2500, 2501
Hitachi	2460, 2461, 2463
JVC	2472, 2473, 2475, 2478, 2496, 2499, 2511
LG	2033, 2456, 2457
Marantz (US)	2454, 2455
Mitsubishi	2450, 2451
Onkyo	2504
Panasonic	2011, 2209, 2214, 2476, 2477, 2479
Philips	2510
Pioneer	2212, 2506
Samsung	2045, 2113, 2498
Sharp	2194, 2220, 2221, 2497, 2502, 2503
Sony	2075, 2453, 2458, 2459, 2507
Toshiba	2462
Yamaha	2064, 2448, 2449, 2474, 2505

DVR

Bush	2110
Hitachi	2090
Panasonic	2066, 2067, 2093, 2116, 2117, 2119, 2120, 2122, 2123
Philips	2108, 2111
Pioneer	2016, 2017, 2018, 2019, 2092, 2094, 2095, 2109
RCA	2105
Samsung	2113, 2219
Sharp	2088, 2091
Sony	2084, 2085, 2087
Toshiba	2086, 2218
Victor	2475
Yamaha	2089, 2118

DVD Recorder

Aspire	2222
Astar	2240
Broksonic	2146
Go Video	2213
Hitachi	2062
Insignia	2002

Irradio	2053
JVC	2100, 2101, 2106, 2107
LG	2033, 2057, 2223, 2238
Liteon	2043
Panasonic	2011, 2034, 2058, 2062, 2116, 2117, 2119, 2120, 2121, 2123
Philips	2008, 2044, 2050, 2051, 2147
Pioneer	2017, 2035
Pye	2144
Samsung	2000, 2112, 2216
Sansui	2073
Sanyo	2217
Sony	2004, 2005, 2007, 2052, 2068, 2069, 2074, 2208, 2210, 2211
Sylvania	2239
Toshiba	2032, 2036, 2037, 2039, 2049, 2054, 2055, 2076
Yamaha	2056

Cable

ABC	3002, 3003, 3017, 3066, 3067, 3086, 3093, 3119, 3122
ADB	3020
Adelphia	3081
Alcatel	3016
Americast	3124
Amstrad	3022, 3098
Antronix	3065, 3070
Archer	3070
Arcon	3098
AT&T	3095
Axis	3098
Bell South	3124
Cable Vision	3092
Cabletenna	3065
Cabletime	3104
Cableview	3087
Clearmaster	3127
ClearMax	3127
Clyde Cablevision	3105
Colour Voice	3068
Comcast	3084, 3088, 3117
Comcrypt	3107
Comtronics	3069
Contec	3074
Coolmax	3127
COX	3084
Cryptovision	3110
Director	3084

Eastern	3075
Everquest	3123
Fidelity	3098
Filmnet	3107
Filmnet Cablecrypt	3111
Filmnet Comcrypt	3111
Finlux	3097
FIOS	3004
Focus	3126
Foxtel	3022
France Telecom	3100, 3101
Freebox	3023
GC Electronics	3070
GE	3066, 3093
GEC	3105
Gemini	3072, 3123
General Instrument	3017, 3025, 3066, 3084, 3090, 3096, 3117
Goldstar	3120
Gooding	3099
Grundig	3098, 3099
Hamlin	3073, 3078
Hirschmann	3097
Hitachi	3066
HomeChoice	3106
Humax	3021, 3080, 3083
ITT Nokia	3097
Jasco	3123
Jerrold	3017, 3018, 3025, 3066, 3072, 3084, 3090, 3096, 3119, 3123
JVC	3099
Kabel Deutschland	3024, 3027, 3121
Macab	3101
Magnavox	3079
Maspro	3099
Matsui	3099
MegaCable	3117
Memorex	3076, 3122
Minerva	3099
Mnet	3107
Motorola	3025, 3026, 3084, 3088, 3090, 3095, 3117
Movie Time	3077, 3109
Mr Zapp	3101
Multichoice	3107
Multitech	3127
NEC	3064

NET Brazil	3085
Nokia	3097
Noos	3101
NSC	3077
Oak	3074
Pace	3006, 3089, 3121
Palladium	3099
Panasonic	3112, 3118, 3122
Paragon	3122
Philips	3068, 3071, 3079, 3099, 3100, 3101, 3103
Pioneer	3001, 3006, 3094, 3098, 3114, 3116, 3120
Popular Mechanics	3126
Proscan	3066, 3093
Pulsar	3122
PVP Stereo Visual Matrix	3018
Quasar	3122
RadioShack	3123, 3127
RCA	3030, 3031, 3087, 3118
Realistic	3070
Recoton	3126
Regal	3078
Regency	3075
Rembrandt	3066
Runco	3122
Sagem	3101
Samsung	3069, 3089, 3114, 3120
SAT	3098
Scientific Atlanta	3000, 3001, 3002, 3003, 3006, 3028, 3029, 3081, 3086, 3089, 3094, 3095, 3108
Signal	3072, 3123
Signature	3066
Sony	3092, 3125
Sprucer	3118
Standard Component	3115
Starcom	3017, 3072, 3119, 3123
Stargate	3072, 3123
Starquest	3072, 3123
Supercable	3090
Supermax	3127
Tele+1	3107, 3111
TELENET	3007
Telepiu	3107
Thomson	3082, 3091
TIME WARNER	3084
Tocom	3067

Torx	3017
Toshiba	3122
Tristar	3127
Tudi	3102
Tusa	3072, 3123
TV86	3077
Unika	3065, 3070
United Cable	3018, 3119
Universal	3065, 3070
Universum	3097, 3099
V2	3127
Videoway	3019
View Star	3074, 3077, 3079
Viewmaster	3127
Vision	3127
Visiopass	3097, 3100, 3101
Vortex View	3127
Wittenberg	3098
Zenith	3113, 3122, 3124
Zentek	3126

Satellite

AB Sat	4216, 4217
AccessHD	4104
ADB	4220
AGS	4216
Akai	4053, 4055
Alba	4001, 4004, 4006, 4007, 4062, 4217
Aldes	4005, 4007, 4010
Allsat	4048, 4053, 4055
All sonic	4005, 4008, 4024
Alltech	4217
Alpha	4053
Alpha Digital	4104
Alphastar	4077
Amitronica	4217
Amstrad	4011, 4035, 4217, 4218
Anglo	4217
Ankaro	4005, 4008, 4024, 4217
Anttron	4001, 4004
Apollo	4001
Armstrong	4011, 4053
Artec	4100
Asat	4053, 4055
ASLF	4217
Astacom	4216
Astra	4009, 4011, 4054, 4217, 4219

Astro	4004, 4008, 4010, 4015, 4024, 4213, 4218, 4219	DIRECTV	4056, 4064, 4067, 4068, 4070, 4071, 4074, 4107, 4116, 4119, 4121, 4122, 4123, 4127, 4192, 4193, 4194, 4195, 4196, 4197, 4198, 4199, 4200, 4201, 4202, 4203, 4206, 4207, 4221	Fuba	4001, 4008, 4014, 4015, 4024, 4055, 4215	JVC	4029, 4065, 4089, 4117
AudioTon	4004, 4048	Discoverer	4212	Galaxis	4005, 4008, 4009, 4024, 4048, 4050, 4215, 4222	Kamm	4217
Aurora	4222	Discovery	4216	GE	4066, 4093, 4111, 4197 General Instrument	Kathrein	4015, 4034, 4042, 4053, 4055, 4063, 4215, 4216, 4217
Austar	4222	Diseqc	4216	Goldbox	4213	Kathrein Eurostar	4215
Axiel	4216	Dish Network	4018, 4065, 4089, 4092, 4094, 4095, 4117	GoldStar	4049	Klap	4216
Axis	4008, 4009, 4024, 4050	Dishpro	4018, 4117	Goodmans	4002, 4006, 4029	Konig	4219
BBK	4205	Distrisat	4053	Goodmind	4111	Kosmos	4049
Best	4008, 4024	Ditristrad	4048	Grandin	4031	KR	4004
Blaupunkt	4015	DNT	4014, 4053, 4055	Grothusen	4001, 4049	Kreiselmeyer	4015
Blue Sky	4217	Drake	4072	Grundig	4004, 4006, 4015, 4035, 4211, 4218, 4222	K-SAT	4217
Boca	4011, 4054, 4059, 4217	DStv	4222	Hänsel & Gretel	4219	Kyostar	4001
Boston	4216	Dune	4024, 4240, 4242	Hantor	4001, 4013	L&S Electronic	4024
Brain Wave	4013	Echostar	4014, 4018, 4065, 4089, 4117, 4217	Hanuri	4010	Lasat	4008, 4010, 4024, 4054, 4212, 4215, 4219
Broadcast	4012	Einhell	4001, 4005, 4011, 4217, 4218	Hauppauge	4044	Lasonic	4108
Broco	4217	Elap	4216, 4217	Heliocom	4219	Lenco	4001, 4024, 4049, 4215, 4217, 4219
BSkyB	4035, 4041	Elekta	4010	Helium	4219	Leng	4013
BT	4216	Elsat	4217	Hinari	4007	Lennox	4048
Bubu Sat	4217	Elta	4001, 4008, 4024, 4048, 4053, 4055	Hirschmann	4015, 4024, 4210, 4216, 4218, 4219	Lenson	4218
Bush	4006, 4045	Emanon	4001	Hisawa	4013	Lexus	4053
Cambridge	4218	Emme Esse	4008, 4024	Hisense	4016	LG	4049, 4103, 4107
Canal Satellite	4213	Engel	4217	Hitachi	4006, 4114, 4199, 4203	Lifesat	4008, 4024, 4212, 4217
Canal+	4213	Ep Sat	4006	Homecast	4084, 4085, 4087	Lifetec	4008
CaptiveWorks	4099	EURIEULT	4031	Houston	4048	Lorenzen	4219
Channel Master	4007, 4110	Eurodec	4052	HTS	4117	Lorraine	4049
Chaparral	4075	Europa	4053, 4218, 4219	Hughes	4064, 4068, 4192, 4194, 4196, 4202	Lupus	4008, 4024
CHEROKEE	4216	Europhon	4219	Hughes Network Systems	4071	Luxor	4218
Chess	4212, 4217	Eurosat	4011, 4215, 4219	Humax	4025, 4030, 4060, 4097	Lyonnaise	4052
CityCom	4006, 4215, 4219	Eutelsat	4217	Huth	4005, 4011, 4012, 4013, 4048, 4050, 4219, 4223	Macab	4052
Clatronic	4013	Exator	4001, 4004	Hypson	4031	Magnavox	4127, 4101
CNT	4010	Expressvu	4117	Ilo	4016	Manata	4031, 4216, 4217
Comag	4080, 4081, 4082, 4083, 4086	Fenner	4024, 4212, 4217	Imex	4031	Manhattan	4006, 4010, 4048, 4216
Commlink	4005	Ferguson	4006, 4052, 4214	Innovation	4008	Marantz	4055
Comtech	4050	Fidelity	4218	Insignia	4107	Mascom	4010
Condor	4008, 4024, 4219	Finlandia	4006	Intertronic	4011	Maspro	4006, 4217
Connexions	4014, 4024	Finlux	4006	Intervision	4048, 4219	Matsui	4216
Conrad	4024, 4215, 4218, 4219	FinnSat	4050, 4052	ITT Nokia	4006	Max	4219
Conrad Electronic	4217, 4219	Flair Mate	4217	Jerrold	4019	Mediabox	4213
Contec	4050	Foxtel	4222	Johansson	4013	Mediamarkt	4011
Coolsat	4096	Freecom	4001, 4049, 4218	JOK	4216	Mediasat	4009, 4213, 4218
Cosat	4048	FTEmaximal	4024, 4217	JSR	4048	Medion	4008, 4024, 4217
Coship	4109					Medison	4217
Crown	4011					Mega	4053, 4055
Daeryung	4014					Memorex	4127
Daewoo	4057, 4217					Metronic	4001, 4004, 4005, 4010, 4028, 4031, 4217
DDC	4007					Metz	4015
Delega	4007					Micro electronic	4217, 4218, 4219
Dew	4050					Micro Technology	4217
Diamond	4051						
Digiality	4219						
Digital Stream	4105						

MicroGem	4106	Phonetrend	4006, 4005, 4048	Seemann	4009, 4011, 4014	Televes	4006, 4218
Micromaxx	4008, 4024	Pioneer	4046, 4213	SEG	4001, 4008, 4013, 4024	Telewire	4048
Microstar	4008	Polsat	4052	Seleco	4048	Tempo	4223
Microtec	4217	Predki	4013	Servi Sat	4031, 4217	Tevion	4008, 4217
Minerva	4015	Premiere	4048, 4213	Siemens	4015	Thomson	4006, 4020, 4052, 4058, 4208, 4213, 4215, 4216, 4217, 4219
Mitsubishi	4006, 4015, 4202	Priesner	4011	Silva	4049	Thorens	4051
Mitsumi	4054	Primestar	4076	Skantin	4217	Thorn	4006
Morgan's	4011, 4053, 4054, 4055, 4217	Profile	4216	Skardin	4009	Tivax	4104
Motorola	4019, 4088, 4090, 4091	Promax	4006	Skinsat	4218	Tivo	4196
Multichoice	4222	Prosat	4005, 4007	SKR	4217	Tokai	4053
Multitec	4212	Proscan	4066, 4093, 4122, 4197	Skymaster	4005, 4017, 4022, 4212, 4217	Tonna	4006, 4012, 4048, 4217, 4218
Muratto	4049	Protek	4051	Skymax	4053, 4055	Toshiba	4194, 4202, 4203
Mysat	4217	Proton	4016	SkySat	4212, 4217, 4218, 4219	Triad	4049
Navex	4013	Provision	4010	Skyvision	4048	Triasat	4218
Neuhaus	4009, 4048, 4217, 4218, 4219	Quadral	4005, 4007, 4008, 4216, 4024	SM Electronic	4212, 4217	Triax	4015, 4215, 4217, 4218
Neusat	4217	Quelle	4015, 4215, 4219	Smart	4215, 4217	Turnsat	4217
Next Level	4019	Quiero	4052	Sony	4067, 4070, 4213	Tronics	4214
NextWave	4223	RadioShack	4019	SR	4011, 4054	Twinner	4031, 4217
Nikko	4011, 4217	Radiola	4053, 4055	Star Choice	4019	UEC	4222
Nokia	4006, 4040	Radix	4014, 4037	Starland	4217	Uher	4212
Nordmende	4001, 4006, 4007, 4010, 4052	Rainbow	4004	Starring	4013	UltimateTV	4070
Nova	4222	RCA	4066, 4093, 4112, 4113, 4116, 4118, 4119, 4197, 4122, 4207	Start Trak	4001	Uniden	4079, 4127
Novis	4013	Realistic	4078	Strong	4001, 4004, 4008, 4024, 4049, 4222	Unisat	4011, 4050, 4053
Oceanic	4051	Redpoint	4009	STS	4115	Unitor	4013
Octagon	4001, 4004, 4050	Redstar	4008, 4024	STVI	4031	Universum	4015, 4215, 4219
Okano	4011	RFT	4005, 4053, 4055	Sumida	4011	US Digital	4016
Optex	4048	Roadstar	4217	Sunny Sound	4024	Variosat	4015
Optus	4213, 4222, 4223	Roch	4031	Sunsat	4217	Vega	4024
Orbitech	4001, 4212, 4213, 4218	Rover	4024, 4217	Sunstar	4011, 4024, 4054	Ventana	4053, 4055
OSat	4004	Saba	4010, 4215, 4216, 4219	Supermax	4223	Viewsat	4098
Otto Versand	4015	Sabre	4006	Tandberg	4052	Visiosat	4013, 4048, 4216, 4217
Pace	4006, 4015, 4035, 4043, 4047, 4204, 4216, 4243	Sagem	4023, 4052	Tandy	4004	Voom	4019
Pacific	4051	Sakura	4050	Tantec	4006	Vortec	4001
Packsat	4216	Samsung	4000, 4001, 4003, 4032, 4064, 4069, 4071, 4120, 4123, 4196, 4200	TCM	4008	Welltech	4212
Palcom	4007	SAT	4007, 4218	Techniland	4012	WeTeKom	4212, 4218
Palladium	4011, 4218	Sat Cruiser	4223	TechniSat	4014, 4021, 4026, 4027, 4038, 4039, 4053, 4212, 4213, 4218	Wevasat	4006
Palsat	4212, 4218	Sat Partner	4001, 4004, 4010, 4013, 4049, 4218	Technology	4222	Wewa	4006
Panasat	4222	Sat Team	4217	Technosat	4223	Winersat	4013
Panasonic	4006, 4035, 4036, 4121, 4124, 4126, 4198, 4221	Satcom	4012, 4219	Technowelt	4219	Wisi	4006, 4014, 4015, 4218, 4219
Panda	4006, 4219	Satec	4217	Teco	4011, 4054	Woorisat	4010
Pansat	4125	Satelco	4217	Telanor	4007	Worldsat	4216
Patriot	4216	Satford	4012	Telasat	4215, 4219	Xrypton	4024
Paysat	4127	Satmaster	4012	Telecom	4217	XSat	4217
PCT	4110	Satplus	4212	Telefunken	4001, 4017, 4216	Zehnder	4008, 4209, 4010, 4215, 4024
Philco	4101	Schneider	4008, 4212, 4216	Teleka	4004, 4011, 4014, 4218, 4219	Zenith	4102, 4107, 4195
Philips	4006, 4033, 4053, 4055, 4061, 4068, 4071, 4127, 4196, 4201, 4202, 4203, 4206, 4213, 4216	Schwaiger	4051, 4212, 4219	Telemaster	4010	Zodiac	4004
Phoenix	4050	SCS	4215	TELENET	4241		
				Telesat	4219		
				Telestar	4212, 4213, 4218		

CD

Yamaha 5082, 5095

CD Recorder

Yamaha 5083

MD

Yamaha 5080, 5081, 5086

Tape

Yamaha 5084, 5087

Tuner

Yamaha 5066, 5085, 5088, 5090, 5092

LD

Yamaha 2080

Amplifier

Yamaha 5019, 5020, 5098

Apple TV

Apple 2241

“Apple TV” is a trademark or registered mark of
Apple Inc.