

Quick Operation Guide


— P-85/P-85S —  YAMAHA

While holding down the highlighted leftmost keys shown below, press the other highlighted keys to set the various parameters. (Refer to the diagram **4** / **5** / **6** below.)

4

To raise the pitch

in about 1cent steps (100 cents = 1 semitone)

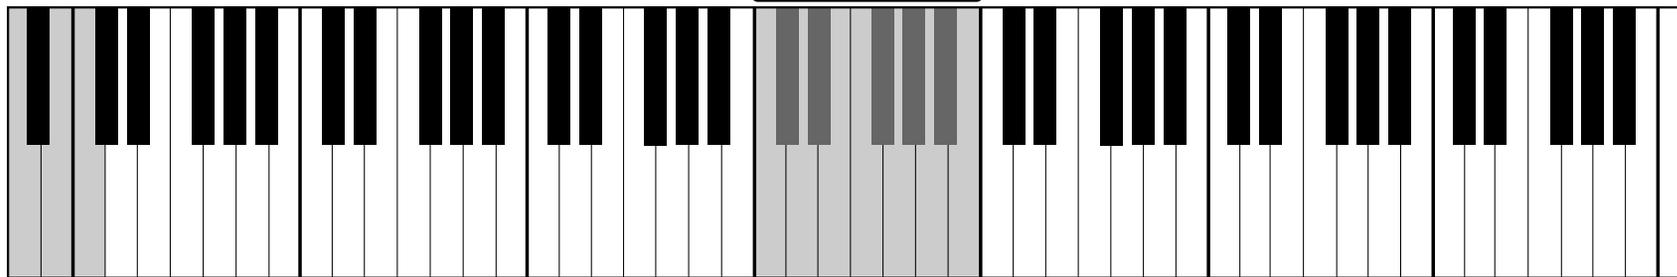


A-1 B-1 **C0**

C#3 D#3 F#3 G#3 A#3
C3 D3 E3 F3 G3 A3 B3

5

To lower the pitch

in about 1cent steps (100 cents = 1 semitone)

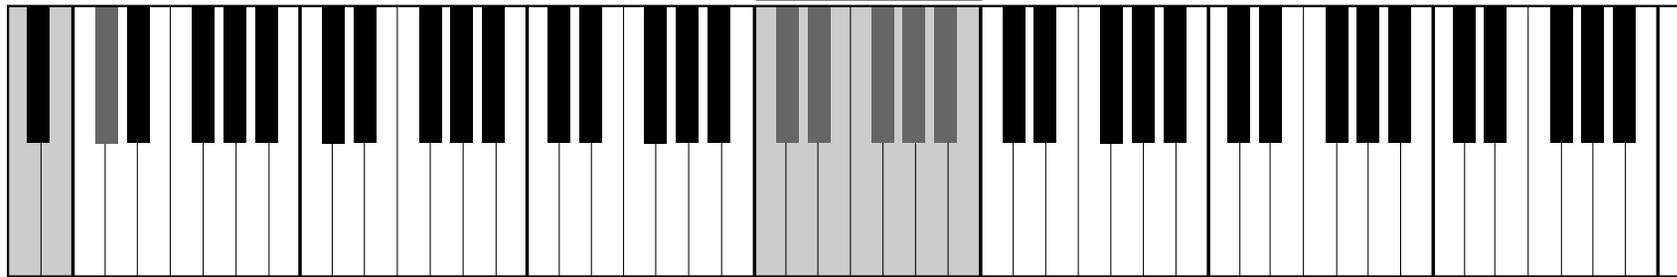


A-1 B-1 **C#0**

C#3 D#3 F#3 G#3 A#3
C3 D3 E3 F3 G3 A3 B3

6

To restore standard pitch

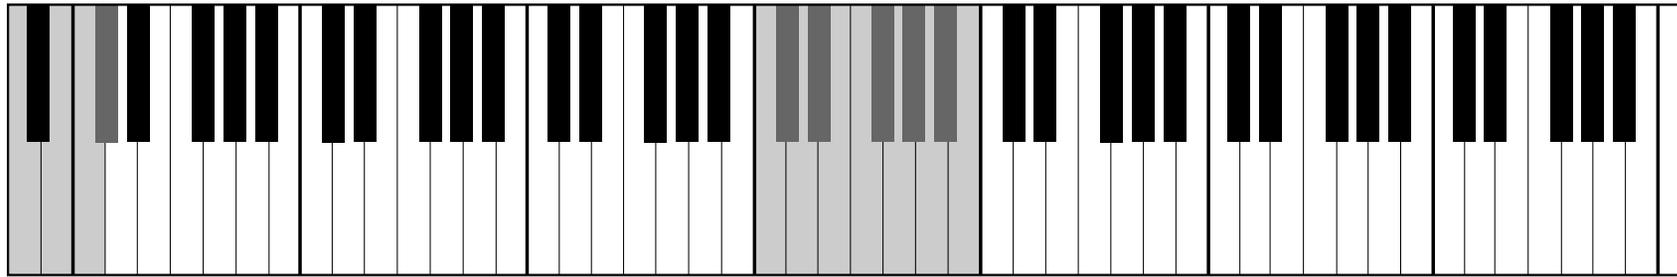

A-1 B-1 **C0**

C#3 D#3 F#3 G#3 A#3
C3 D3 E3 F3 G3 A3 B3