

# Quick Operation Guide



While holding down the [DEMO/SONG], [PIANO/VOICE], or [METRONOME] button,  
press the highlighted keys shown below to select voice demos etc, or set parameters. (Refer to the diagram 1/2/3 below.)

**1**



**Voice Demo**

**Preset Song (50 greats for the Piano)**

**Song loaded from the computer**

**Keyboard:** A-1, B-1, C0, D#0, E0, F0, G0, A#0, B0, C1, D1, D#1, E1, F1, G1, A1, B1, C2, D2, D#2, E2, F2, G2, A2, B2, C3, D3, D#3, E3, F3, G3, A3, B3, C4, D4, D#4, E4, F4, G4, A4, B4, C5, D5, D#5, E5, F5, G5, G#5, A5, B5, C6, D6, D#6, E6, F6, G6, A6, B6, C7.

**Labels:** Grand Piano 1 Demo, Grand Piano 2 Demo, E. Piano Demo, Church Organ Demo, Strings Demo, Song No. 1, Song No. 2, Song No. 3, Song No. 4, Song No. 5, Song No. 6, Song No. 7, Song No. 8, Song No. 9, Song No. 10, Song No. 11, Song No. 12, Song No. 13, Song No. 14, Song No. 15, Song No. 16, Song No. 17, Song No. 18, Song No. 19, Song No. 20, Song No. 21, Song No. 22, Song No. 23, Song No. 24, Song No. 25, Song No. 26, Song No. 27, Song No. 28, Song No. 29, Song No. 30, Song No. 31, Song No. 32, Song No. 33, Song No. 34, Song No. 35, Song No. 36, Song No. 37, Song No. 38, Song No. 39, Song No. 40, Song No. 41, Song No. 42, Song No. 43, Song No. 44, Song No. 45, Song No. 46, Song No. 47, Song No. 48, Song No. 49, Song No. 50, 1st song, 2nd song, 3rd song, 4th song, 5th song, 6th song, 7th song, 8th song, 9th song, 10th song.

**2**



**Voice**

**Reverb Type**

**Reverb Depth**

**Dual Octave Setting**

**Dual Balance**

**Touch Sensitivity**

**Keyboard:** A-1, B-1, C0, D#0, E0, F0, G0, A#0, B0, C1, D1, D#1, E1, F1, G1, A1, B1, C2, D2, D#2, E2, F2, G2, A2, B2, C3, D3, D#3, E3, F3, G3, A3, B3, C4, D4, D#4, E4, F4, G4, A4, B4, C5, D5, D#5, E5, F5, G5, G#5, A5, B5, C6, D6, D#6, E6, F6, G6, A6, B6, C7.

**Labels:** Grand Piano 1, Grand Piano 2, E. Piano, Harpsichord, Church Organ, Strings, Room, Hall 1, Hall 2, Stage, Off, 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 1st song, 2nd song, 3rd song, 4th song, 5th song, 6th song, 7th song, 8th song, 9th song, 10th song.

**3**



**Metronome Volume**

**Metronome Time Signature**

**Metronome / Preset Song Tempo**

**Keyboard:** A-1, B-1, C0, D#0, E0, F0, G0, A#0, B0, C1, D1, D#1, E1, F1, G1, A1, B1, C2, D2, D#2, E2, F2, G2, A2, B2, C3, D3, D#3, E3, F3, G3, A3, B3, C4, D4, D#4, E4, F4, G4, A4, B4, C5, D5, D#5, E5, F5, G5, G#5, A5, B5, C6, D6, D#6, E6, F6, G6, A6, B6, C7.


**Labels:** Numeric key 1, Numeric key 2, Numeric key 3, Numeric key 4, Numeric key 5, Numeric key 6, Numeric key 7, Numeric key 8, Numeric key 9, 10 steps decrease, One step decrease, Default tempo, One step increase, 10 steps increase, C4, D4, D#4, E4, F4, G4, A4, B4, C5, D5, D#5, E5, F5, G5, G#5, A5, B5, C6, D6, D#6, E6, F6, G6, A6, B6, C7.

**Additional Notes:** Metronome Volume, Metronome Time Signature, Metronome / Preset Song Tempo, Song loaded from the computer, Touch Sensitivity, Dual Octave Setting, Dual Balance, 1st song, 2nd song, 3rd song, 4th song, 5th song, 6th song, 7th song, 8th song, 9th song, 10th song, Does not change at all, Standard piano touch response, Changes very widely.


# Quick Operation Guide

While holding down the highlighted leftmost keys shown below, press the other highlighted keys to set the various parameters. (Refer to the diagram 4 / 5 / 6 below.) While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press the highlighted keys shown below to set parameters. (Refer to the diagram 7 below.)


**4**

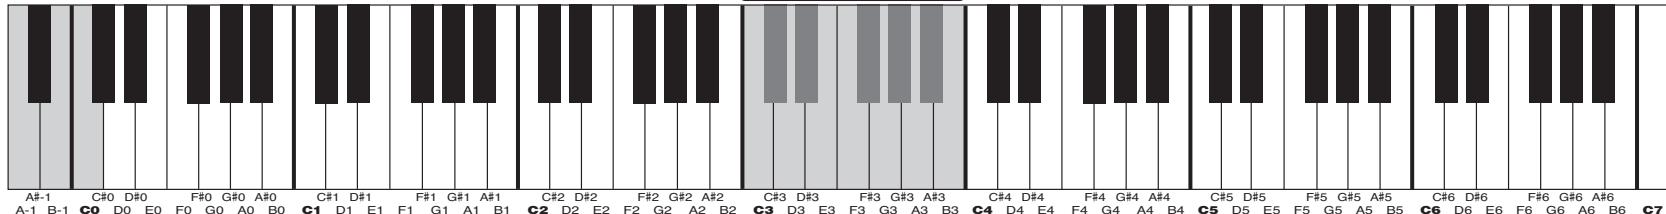

**5**

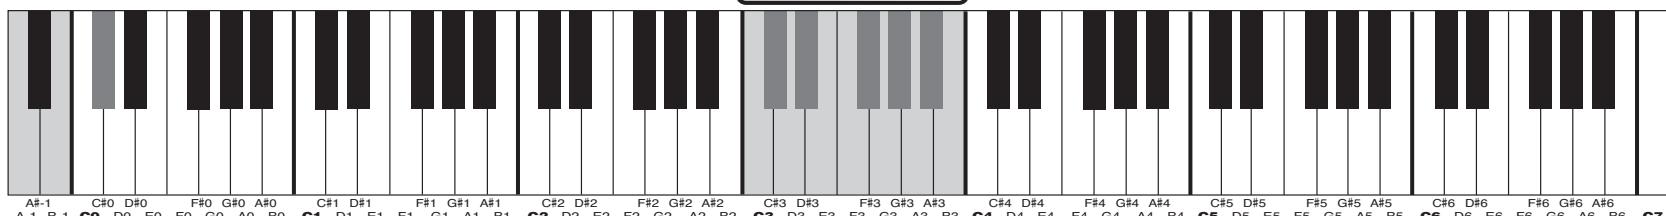

**6**

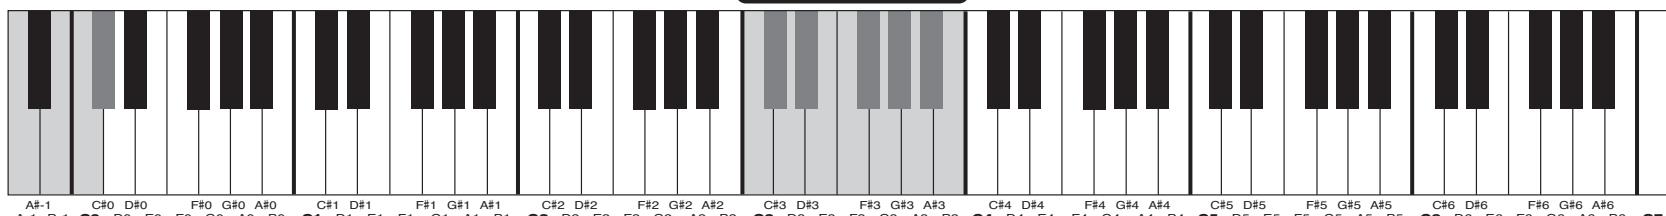

**7**

