
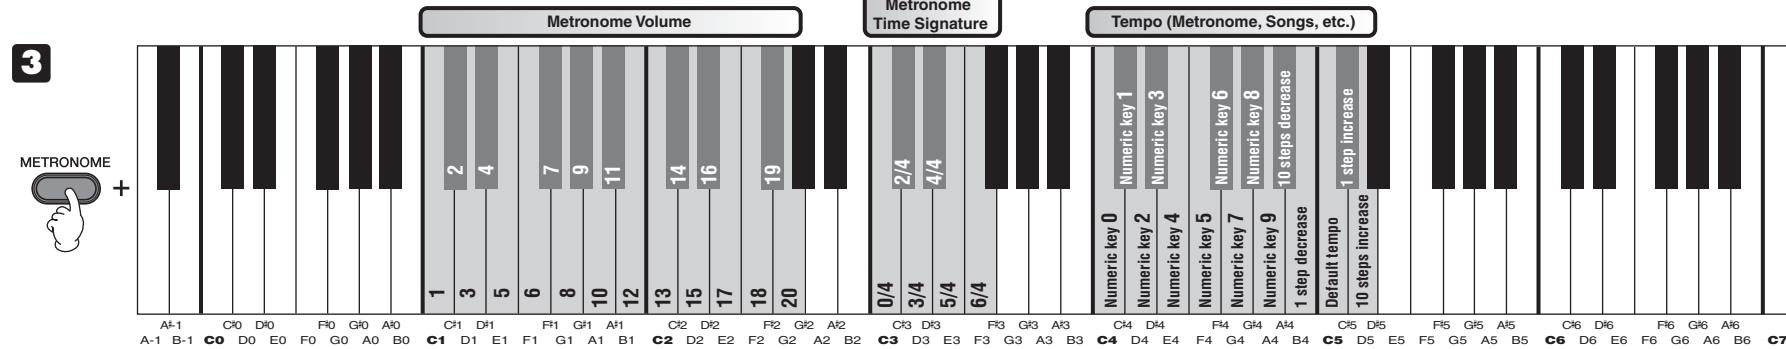
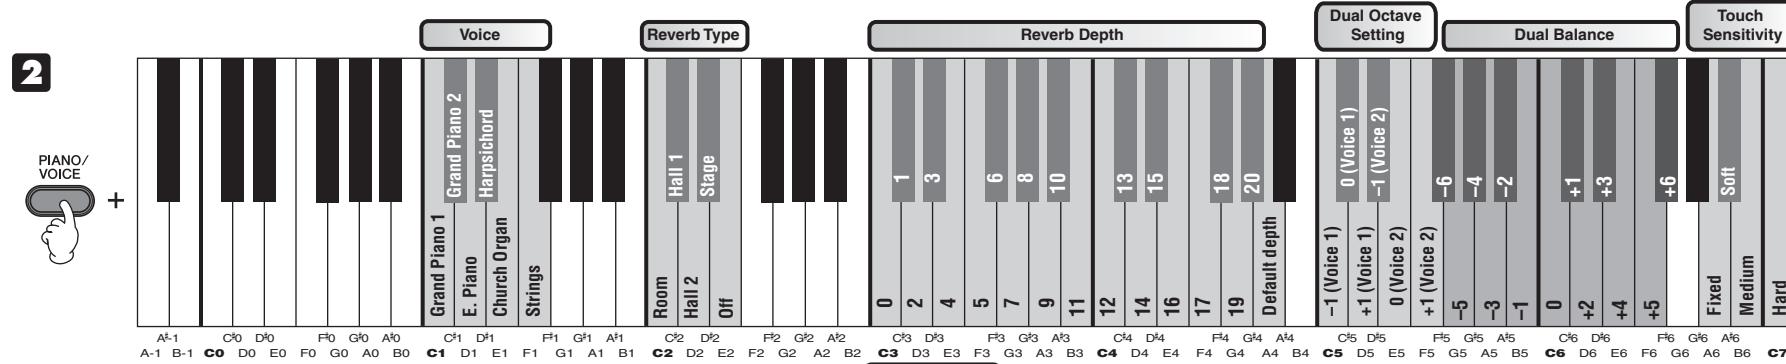


Quick Operation Guide

The Yamaha logo, featuring a stylized six-pointed star inside a circle, followed by the word "YAMAHA" in a bold, sans-serif font.

While holding down the [DEMO/SONG], [PIANO/VOICE] or [METRONOME] button,
press the highlighted keys to select songs or set the various parameters. (Refer to the diagram ①/②/③ below.)

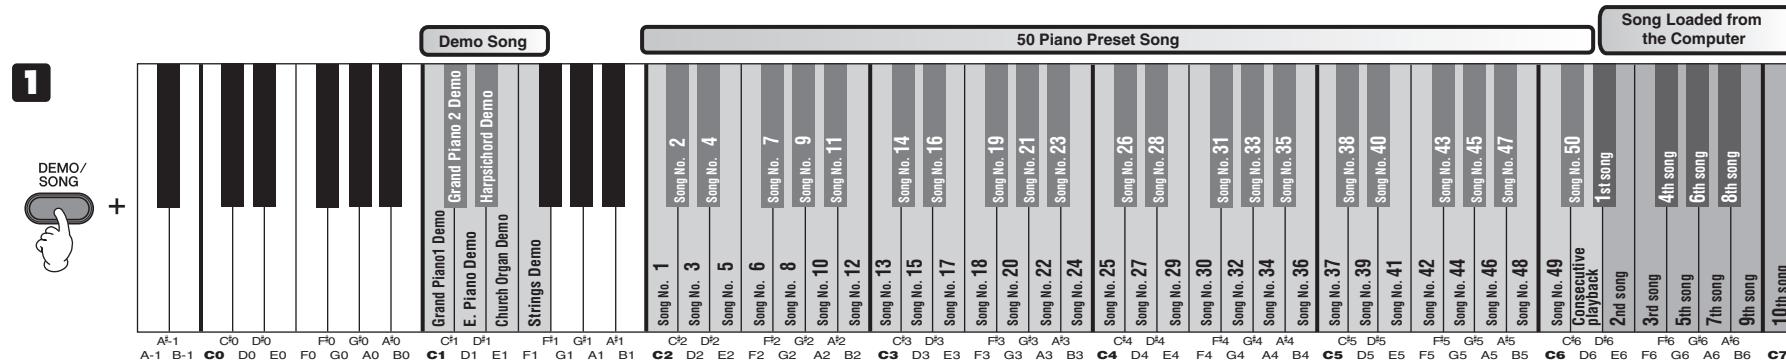


Quick Operation Guide

While holding down the highlighted left-most keys, press the other highlighted keys to set the pitch. (Refer to the diagram 4 / 5 / 6 below.)


While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press the highlighted keys to set the various parameters. (Refer to the diagram 7 below.)

4

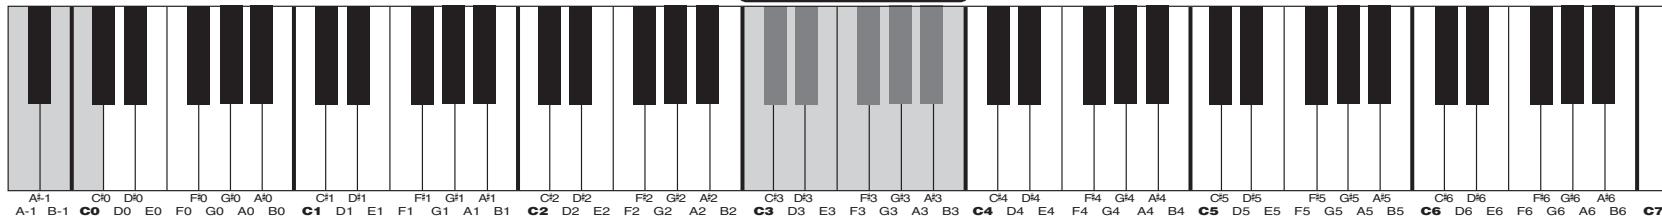


(Press any highlighted key)

5

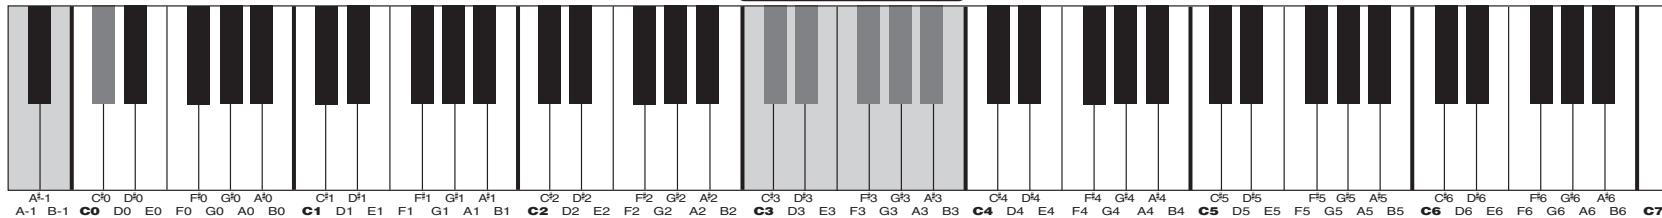

(Press any highlighted key)

6

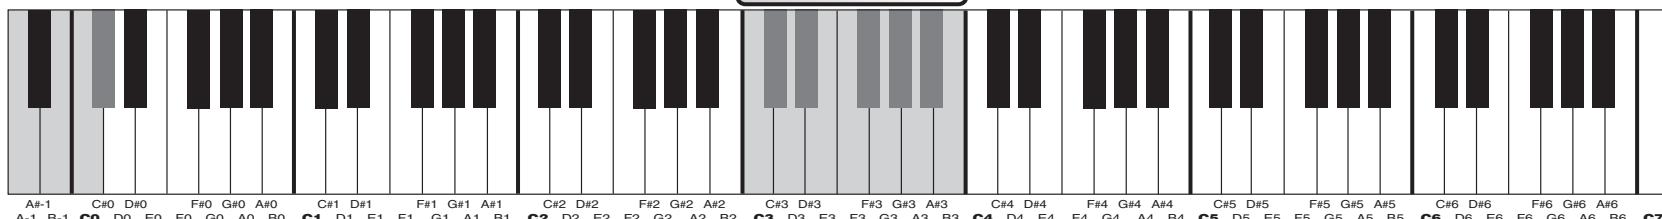

(Press any highlighted key)

7

