



YAMAHA

VOL +

VOL -

DELETE

MUTE

SOLO

PAGE

PLAY



ALL



KICK



SNARE



CLAP



SYNTH 1

MUSIC PRODUCTION STUDIO

HAT 1

HAT 2

PERC 1

PERC 2

SEQTRAK

Quick Operation Guide

Kurzbedienungsanleitung

Guide de fonctionnement rapide

Guía rápida de funcionamiento

Guia rápida de operação

Краткое руководство по эксплуатации

クイックガイド

BAR LENGTH OCTAVE SCALE

English

Deutsch

Français

Español

Português

Русский

日本語

EN DE FR ES PT RU JA

Thank you for purchasing Music Production Studio SEQTRAK.

SEQTRAK is a product that lets you enjoy intuitive music production and performance with sophisticated, yet fast workflow. Since it's compact, you can create songs almost anywhere you want. Moreover, by using the dedicated software, you can edit the sound more finely and even produce images that move in sync with the songs.

This manual explains the product overview and basic operations required for production for people using SEQTRAK for the first time. In order to take full advantage of SEQTRAK's functionality and enjoy performing with it even more, please read the manual carefully before use. After you have read the manual, keep it in a safe and handy place for future reference.

About the manuals

The following three manuals are available for the product.

Quick Operation Guide (this book)	This guide helps you use the product immediately 'right out of the box,' with short explanations that focus on a general overview and basic functions.
Safety Guide	Describes information for safe use of the product.
User Guide (HTML)	Explains functions and operations of the product in more detail. https://manual.yamaha.com/mi/de/seqtrak/index.html



Included Accessories

- Quick Operation Guide (this book)
- Safety Guide
- USB cable (Type-C)
- Dedicated MIDI Converter Cable

The model number, serial number, power requirements, etc., may be found on or near the name plate, which is at the bottom of the unit. You should note this serial number in the space provided below and retain this manual as a permanent record of your purchase to aid identification in the event of theft.

Model No.

Serial No.

(1003-M06 plate bottom en 01)

Contents

Sections and Controls.....	6
Charging.....	7
Getting Started	9
Turning the Power On or Off.....	11
Basic Operations.....	13
SEQTRAK app.....	18
Specifications.....	19

Information

- The copyright of the “content”^{*1} installed in this product belongs to Yamaha Corporation or its copyright holder. Except as permitted by copyright laws and other relevant laws, such as copying for personal use, it is prohibited to “reproduce or divert”^{*2} without the permission of the copyright holder. When using the content, consult with a copyright expert.

If you create music or perform with the contents through the original use of the product, and then record and distribute them, the permission of Yamaha Corporation is not required regardless of whether the distribution method is paid or free of charge.

*1: The word “content” includes a computer program, audio data, Accompaniment Style data, MIDI data, waveform data, voice recording data, music score, and score data, etc.

*2: The phrase “reproduce or divert” includes taking out the content itself in this product, or recording and distributing it without changes in a similar manner.

- The illustrations as shown in this manual are for instructional purposes only.
- Windows is a registered trademark of Microsoft® Corporation in the United States and other countries.
- Mac, iPadOS and App Store are trademarks of Apple Inc., registered in the U.S. and other countries.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Android and Google Play are trademarks of Google LLC.
- Wi-Fi and Wi-Fi CERTIFIED are registered trademarks or trademarks of Wi-Fi Alliance®.
- The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®.



 
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Yamaha Corporation is under license.



- “USB Type-C” and “USB-C” are trademarks of USB Implementers Forum, registered in the U.S. and other countries.
- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

Charging

SEQTRAK can be charged from an outlet by using USB power adaptor or a USB mobile battery. (When using a USB mobile battery for smartphones, make sure that it meets the requirements on the next page.) Connect the power supply and included USB cable in the order shown below. The charging status indication differs depending on whether the product is turned on or off. Refer to "Charge Status" below.

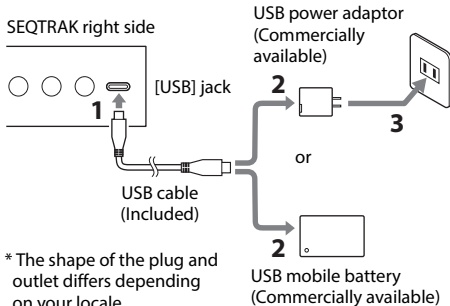


NOTE

- The estimated time from low battery to full charge is 3–5 hours (depending on usage environment and battery deterioration).
- When the battery is low, the Global Meter will flash in red for 2 seconds every 90 seconds.
- Before the battery runs out, the current project will be saved automatically, and then SEQTRAK will be turned off.

Charge Status

 When the Power is On

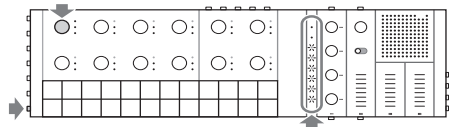

Hold down both the [ALL] knob and the [⏻/PLAY] button. The Global Meter will then light according to

 
the remaining battery power (charging: cyan blue, not charging: white, trouble: flashes red.)

NOTE

- SEQTRAK can be used while charging.
- If the electricity supplied from the power supply is insufficient, it will be used for operation of the SEQTRAK and charging will not be possible even if the LED lamps are lit in cyan blue.

When the Power is Off

- During charging, the top LED lamp of the Global Meter **lights up in red**. (Battery level is not indicated.)

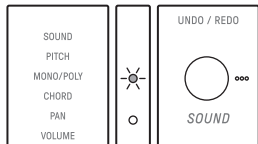

- When the SEQTRAK cannot be charged due to battery failure or other reasons, the top LED lamp of the Global Meter flashes in red.

- When charging is complete, the top LED lamp of the Global Meter will turn off.

USB power adaptor / USB mobile battery requirements

Output voltage: 4.8 V to 5.2 V

Output current: 1.5 A or greater



CAUTION

 
Make sure to use a USB Power Delivery (PD) power adaptor or USB Power Delivery (PD) mobile battery with the specifications above. Using the wrong USB device can result in damage to the product or overheating. Read the safety precautions for your particular USB devices.

NOTICE

When the product is turned on and power turns off suddenly and unexpectedly, your USB device may not meet the requirements or may be damaged. Try using another USB device that meets the requirements, etc. If the product appears to be malfunctioning, consult Yamaha service personnel.


Getting Started

Power on




1. Press and hold the [⏪/PLAY] button for 2 seconds or longer. The LED lamps will light.

 Playback



2. Briefly press the [⏪/PLAY] button. The demo song (call it a "project") will be played.

 
Volume control



3. If necessary, use the [VOL+] and [VOL-] buttons to adjust the volume.


The **project** (like a song) has a total of **11 tracks** (each corresponding to a specific sound part). You can choose one **pattern** (a looped phrase) for each track. The 11 patterns will overlap and repeat until playback is stopped.

 Pattern selection




4. Turn one of the track knobs. You can select a pattern for each track. The LED lamp corresponding to the selected pattern lights.

 Solo



5. If it's difficult to hear any change in the pattern change, press one of the track knobs while holding down the [SOLO] button to hear only the sound of that track. Perform the same operation again to cancel Solo.

 Performing with synth pitches




6. Press one of the Synth keys. The pitch of the sound (in proper scale) will change according to the pressed key.

Changing the synth track sound




7. Press one of the SYNTH1, SYNTH2, DX and SAMPLER track knobs. The sound changes each time you press a Synth key.

 Tweaking the sound




8. Slide your finger on [HIGH PASS] touch slider or [REPEATER] touch slider to expressively change the sound in real time.

 Stopping playback



9. Briefly press the [STOP/PLAY] button. The demo song will stop.

 
Power Off



10. Press and hold the [STOP/PLAY] button for 2 seconds or longer. The LED lamps will go out.

Turning the Power On or Off

 Turning the Power On

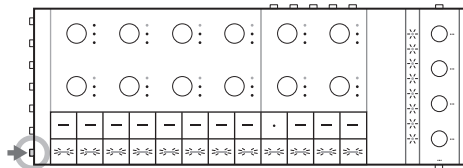


Press and hold the [⏻/PLAY] button for 2 seconds or longer.

The LED lamps of the Drum keys, the Synth keys, and the Global Meter light up in a white, flowing L-shape when the SEQTRAK is turned on.

When the device is ready to use, the LED lamps lit in L-shape go out, and then the LED lamps light up depending on the project status.

 Turning the Power Off

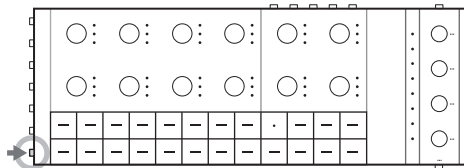


Press and hold the [⏻/PLAY] button for 2 seconds or longer.

The LED lamps of the Global Meter briefly flash in white for a while, and then all LED lamps turn off when the SEQTRAK is turned off.

In this case, the current project is saved automatically.

 Forced termination

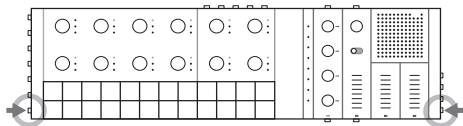

If the SEQTRAK behaves abnormally and cannot be operated, you can turn the power off by pressing and holding the [⏻/PLAY] and [PROJECT↑] buttons.

In this case, the current project in progress is not saved.

 
Auto Power Off

If the SEQTRAK is not operated for 30 minutes, the current project will be saved automatically, and then the power will be turned off to save power.


Before the power turns off, LED lamps of the Global Meter flash in white.

NOTE

- You can disable the auto power off function by turning on the SEQTRAK while pressing the lower left Drum key.

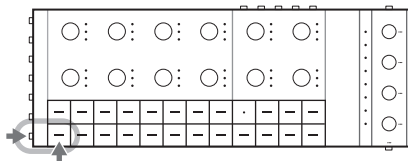

 
- To enable the Auto Power Off function (30 min), turn on the SEQTRAK while holding down the Drum key shown below.




- You can make more detailed settings (OFF/5 min/10 min/15 min/30 min/60 min/120 min) with the **SEQTRAK app**. For details, refer to the User Guide (HTML).

Basic Operations

 
Playing and changing patterns



 
Press the [⏪/PLAY] button to play patterns.



 Select different track patterns by turning the track knob.




 Use the [ALL] knob to simultaneously change all eleven track patterns.



Slide your finger on the touch sliders to tweak the sound in real time.

 
Stopping playback



Press the [⏪/PLAY] button to stop playback.







 Press one of the Drum track knobs to select the desired track for editing the pattern.

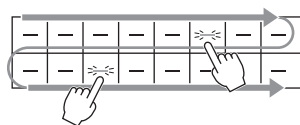

Each press of a Drum key toggles the corresponding step on and off.
The pattern plays from top left to bottom right.



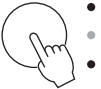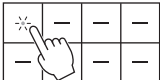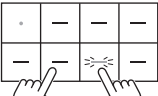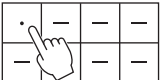

Recording synth patterns

 <p>Press one of the Synth track knobs to select the desired track for recording a pattern.</p>	 <p>Press the Record key to start pattern recording.</p>	 <p>Use the Synth keys to play the pattern.</p>	 <p>Press the Record key again to stop pattern recording.</p>
--	---	--	--

* The notes corresponding to each Synth key can be changed by using the octave, key and scale settings.


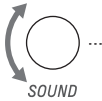

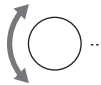
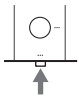
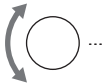
Sampling

The recorded sound or the input sound from external devices can be played on the SAMPLER track.

 <p>Press the [SAMPLER] knob to select the SAMPLER track.</p>	 <p>Press one of the Synth keys for assigning the sound to be recorded.</p>	 <p>Press the [REC SAMPLE] button to start recording with the built-in microphone.</p>	 <p>Press the [REC SAMPLE] button again to stop recording.</p>
--	--	---	---

* Refer to the User Guide (HTML) for sampling sources other than the built-in microphone.

Sound Design

 <p>Press a one of the track knobs to select the desired track for editing.</p>	 <p>Turn the [SOUND] knob to change the sound of the selected track.</p>	 <p>To listen to the sound, press the track knob or a Synth key while playback is stopped.</p>	 <p>Turn one of the Sound Design knobs 2–4 to adjust the sound.</p>
 <p>Press the Sound Design Page button to switch among available parameters.</p>	 <p>Adjust the parameters can be adjusted by using Sound Design knobs 1–4.</p>		

* Refer to the User Guide (HTML) for details on editing parameters.

Effects

One effect type can be applied to each track, as well as the common effects applied to all tracks.



Using the [MASTER/SINGLE] switch to select the desired effect type.

MASTER: Effects that are common to all tracks

SINGLE: Effects that are applied to only one track



 
Turn the [FX] knob to change the effect.



Slide your finger on the [FX LEVEL] touch slider to adjust the amount (level) of the applied effect.



Press the [CLEAR FX] button to minimize the effect level.



The [HIGH PASS] and [REPEATER] effects are applied to all tracks regardless of the [MASTER/SINGLE] switch status.



Effect block diagram

* Refer to the User Guide (HTML) for details on the effects.

Creating an Original Song

The following operations are effective for creating your original song from scratch.

- You can change the project by pressing the Drum key corresponding to the project while holding down the [PROJECT↑] button.
- You can delete the project by pressing the Drum key corresponding to the project while holding down the [PROJECT↑] and [DELETE] buttons.
- You can delete the selected pattern by pressing the track knob while holding down the [DELETE] button.

* Refer to the User Guide (HTML) for details.

SEQTRAK app

 
Using the dedicated SEQTRAK app, you can edit the sound more finely, produce images linked to the SEQTRAK operation, manage your content, and so on.

The software can be used on smartphones, tablets, and computers.

* Refer to the User Guide (HTML) for details about the SEQTRAK app.

Obtaining SEQTRAK app

iOS, iPadOS, and Android versions are available from the App Store or Google Play Store.



Search "SEQTRAK"

Windows and Mac versions are available from the following Yamaha website:
<https://www.yamaha.com/>

Connection Settings

When the SEQTRAK app is launched, setup operations for connecting the SEQTRAK app to the SEQTRAK device start as required.

Follow the on-screen instructions to set up the connection.

NOTICE

Do not connect this product to a public Wi-Fi and/or Internet service directly. Only connect this product to the Internet through a router with strong password protections. Consult your router manufacturer for information on optimum security practices.

(624-M01)

Specifications

Tone Generation	Tone Generation Technologies	AWM2, FM: 4 operators
	Polyphony (max.)	AWM2: 128, FM: 8
	Waveforms	Preset: 800 MB (when converted to 16-bit linear format), User: 500 MB
Effects	Type	Reverb × 12 types, Delay × 9 types, Master Effect × 85 types, Single Effect × 85 types Maxter EQ 5 bands, LP-HP filters for each track
Tracks	Track Types	DRUM, SYNTH, DX, SAMPLER
	Number of Tracks	11
Sounds		Preset Sound: 2032 Preset Sampler Sound: 392 * Can be added from the SEQTRAK app
Sequencer Block	Steps (max.)	128
Project	Projects	8 * Can be saved to the SEQTRAK app
Connectivity		USB-C (power, MIDI to host, MIDI to device, audio) PHONES (stereo mini jack) AUDIO IN (stereo mini jack) MIDI IN/OUT * Only included cable can be used.

USB Audio Interface	Sampling Frequency	44.1 kHz (quantization bit depth: 24-bit)
	Input/Output Channels	Input: 2 channels (stereo 1 channel), Output: 2 channels (stereo 1 channel)
Bluetooth		MIDI transmission/reception (wireless capability varies by country)
Wi-Fi		Data transmission/reception with dedicated app (wireless capability varies by country)
Sound System	Built-in Speakers	2.3 cm, 1 W
	Built-in Microphone	Internal MEMS microphone
Power Supply	Rechargeable lithium-ion battery (2100 mAh, 7.6 Wh) USB Power Delivery (PD) (Output voltage: 4.8 V to 5.2 V, Output current: 1.5 A or greater)	
	Power Consumption	6 W
	Battery life for continuous use	3–4 hours
	Battery charge time	3–5 hours
Size/Weight		343 (W) × 97 (D) × 38 (H) mm, 0.5 kg
Included Accessories		USB C – USB C cable, dedicated MIDI Converter Cable, Quick Operation Guide (this book), Safety Guide
Dedicated Software		SEQTRAK app

* The contents of this manual apply to the latest specifications as of the publishing date. To obtain the latest manual, access the Yamaha website then download the manual file. Since specifications, equipment or separately sold accessories may not be the same in every locale, please check with your Yamaha dealer.

Wireless communication functions

[Models for U.K. and Europe]

Bluetooth

Radio Frequency: 2400 MHz to 2483.5 MHz

Maximum Output Power (EIRP): +4.7 dBm

Wi-Fi (2.4 GHz)

Radio Frequency: 2402 MHz to 2482 MHz

Maximum Output Power (EIRP): 19.30 dBm

(559-M04, 637-M01)



Important Notice:

U.S. LIMITED WARRANTY for Customers in the United States

For detailed information about this Yamaha product and warranty service, please either visit the following website address (printable file is available at our website) or contact Customer Service at the address or telephone number identified below.

Website Address:

Yamaha.io/SynthAndStageWarranty

Customer Service:

Yamaha Corporation of America
6600 Orangethorpe Avenue,
Buena Park, CA 90620-1273
Telephone: 800-854-1569

For details of products, please contact your nearest Yamaha representative or the authorized distributor listed below.

NORTH AMERICA

CANADA

Yamaha Canada Music Ltd.
135 Milner Avenue, Toronto,
Ontario M1S 3R1, Canada
Tel: +1-416-298-1311

U.S.A.

Yamaha Corporation of America
6600 Orangethorpe Avenue,
Buena Park, CA 90620, U.S.A.
Tel: +1-714-522-9011

CENTRAL & SOUTH AMERICA

MEXICO

Yamaha de México, S.A. de C.V.
Av. Insurgentes Sur 1647 Piso 9, Col. San José
Insurgentes, Delegación Benito Juárez, CDMX,
C.P. 03900, México
Tel: +52-55-5804-0600

BRAZIL

Yamaha Musical do Brasil Ltda.
Praça Professor José Lannes,
40-Cjs 21 e 22, Brooklin Paulista Novo
CEP 04571-100 – São Paulo – SP, Brazil
Tel: +55-11-3704-1377

ARGENTINA

**Yamaha Music Latin America, S.A.,
Sucursal Argentina**
Olga Cossetтини 1553, Piso 4 Norte,
Madero Este-C1107CEK,
Buenos Aires, Argentina
Tel: +54-11-4119-7000

PANAMA AND OTHER LATIN AMERICAN REGIONS/CARIBBEAN REGIONS

Yamaha Music Latin America, S.A.
Edificio Torre Davivienda, Piso: 20 Avenida
Balboa, Marbella, Corregimiento de Bella Vista,
Ciudad de Panamá, Rep. de Panamá
Tel: +507-269-5311

EUROPE

THE UNITED KINGDOM/IRELAND

Yamaha Music Europe GmbH (UK)
Sherbourne Drive, Tilbrook, Milton Keynes,
MK7 8BL, U.K.
Tel: +44-1908-366700

GERMANY

Yamaha Music Europe GmbH
Siemensstrasse 22-34, 25462 Rellingen, Germany
Tel: +49-4101-303-0

SWITZERLAND/LIECHTENSTEIN

**Yamaha Music Europe GmbH,
Branch Switzerland in Thalwil**
Seestrasse 18a, 8800 Thalwil, Switzerland
Tel: +41-44-3878080

AUSTRIA/CROATIA/CZECH REPUBLIC / HUNGARY/ROMANIA/SLOVAKIA/SLOVENIA

**Yamaha Music Europe GmbH,
Branch Austria**
Schleiergasse 20, 1100 Wien, Austria
Tel: +43-1-60203900

POLAND

**Yamaha Music Europe
Sp.z o.o. Oddział w Polsce**
ul. Młynarska 48, 01-171 Warszawa, Poland
Tel: +48-22-880-08-88

BULGARIA

Dinacord Bulgaria LTD.
Bul. Iskarsko Schose 7 Targowski Zentar Evropa
1528 Sofia, Bulgaria
Tel: +359-2-978-20-25

MALTA

Olimpus Music Ltd.
Valletta Road, Mosta MST9010, Malta
Tel: +356-2133-2093

NETHERLANDS/BELGIUM/LUXEMBOURG

Yamaha Music Europe, Branch Benelux
Wattbaan 1 3439ML Nieuwegein,
The Netherlands
Tel: +31-347-358040

FRANCE

Yamaha Music Europe
7 rue Ambroise Croizat, Zone d'activités de
Pariest, 77183 Croissy-Beaubourg, France
Tel: +33-1-6461-4000

ITALY

Yamaha Music Europe GmbH, Branch Italy
Via Tinelli N.67/69 20855 Gerno di Lesmo (MB),
Italy
Tel: +39-039-9065-1

SPAIN/PORTUGAL

**Yamaha Music Europe GmbH Ibérica,
Sucursal en España**
Ctra. de la Coruña km. 17,200, 28231
Las Rozas de Madrid, Spain
Tel: +34-91-639-88-88

GREECE

Philippos Nakas S.A. The Music House
19th klm. Leof. Lavriou 190 02 Peania – Attiki,
Greece
Tel: +30-210-6686260

SWEDEN

**Yamaha Music Europe GmbH Germany
Filial Scandinavia**
JA Wettergrensgata 1, 400 43 Göteborg, Sweden
Tel: +46-31-89-34-00

DENMARK

**Yamaha Music Denmark,
Filial of Yamaha Music Europe GmbH,
Tyskland**
Generatorvej 8C, ST. TH., 2860 Søborg,
Denmark
Tel: +45-44-92-49-00

FINLAND

F-Musiikki Oy
Antaksentie 4
FI-01510 Vantaa, Finland
Tel: +358 (0)96185111

NORWAY

**Yamaha Music Europe GmbH Germany -
Norwegian Branch**
c/o Box 30053, 400 43 Göteborg, Sweden
Tel: +47-6716-7800

ICELAND

Hljóðfæræhusid Ehf.

Síðumula 20, IS-108 Reykjavík, Iceland
Tel: +354-525-5050

CYPRUS

Nakas Music Cyprus Ltd.

Níkis Ave 2k, 1086 Nicosia
Tel: + 357-22-511080

Major Music Center

21 Ali Riza Ave. Ortakoy
P.O.Box 475 Lefkoşa, Cyprus
Tel: (392) 227 9213

RUSSIA

Yamaha Music (Russia) LLC.

Room 37, entrance 7, bld. 7, Kievskaya street,
Moscow, 121059, Russia
Tel: +7-495-626-5005

OTHER EUROPEAN REGIONS

Yamaha Music Europe GmbH

Siemensstrasse 22-34, 25462 Rellingen, Germany
Tel: +49-4101-303-0

AFRICA

Yamaha Music Gulf FZE

JAFZA-16, Office 512, P.O.Box 17328,
Jebel Ali FZE, Dubai, UAE
Tel: +971-4-801-1500

MIDDLE EAST

TURKEY

Dore Muzik

Yeni Sülün Sokak No. 10
Levent İstanbul / Türkiye
Tel: +90-212-236-3640
Fax: +90-212-259-5567

ISRAEL

RBX International Co., Ltd.

P.O Box 10245, Petach-Tikva, 49002
Tel: (972) 3-925-6900

OTHER REGIONS

Yamaha Music Gulf FZE

JAFZA-16, Office 512, P.O.Box 17328,
Jebel Ali FZE, Dubai, UAE
Tel: +971-4-801-1500

ASIA

MAINLAND CHINA

Yamaha Music & Electronics (China) Co., Ltd.

2F, Yunhedasha, 1818 Xinzha-lu,
Jingan-qu, Shanghai, China
Tel: +86-400-051-7700

INDIA

Yamaha Music India Private Limited

P-401, JMD Megapolis, Sector-48, Sohna Road,
Gurugram-122018, Haryana, India
Tel: +91-124-485-3300

INDONESIA

PT Yamaha Musik Indonesia Distributor

Yamaha Music Center Bldg. Jalan Jend. Gatot
Subroto Kav. 4, Jakarta 12930, Indonesia
Tel: +62-21-520-2577

KOREA

Yamaha Music Korea Ltd.

11F, Prudential Tower, 298, Gangnam-daero,
Gangnam-gu, Seoul, 06253, Korea
Tel: +82-2-3467-3300

MALAYSIA

Yamaha Music (Malaysia) Sdn. Bhd.

No.8, Jalan Perbandaran, Kelana Jaya, 47301
Petaling Jaya, Selangor, Malaysia
Tel: +60-3-78030900

SINGAPORE

Yamaha Music (Asia) Private Limited

Block 202 Hougang Street 21, #02-00,
Singapore 530202, Singapore
Tel: +65-6740-9200

TAIWAN

Yamaha Music & Electronics Taiwan Co., Ltd.

2F., No.1, Yuandong Rd., Banqiao Dist.,
New Taipei City 22063, Taiwan
Tel: +886-2-7741-8888

THAILAND

Siam Music Yamaha Co., Ltd.

3, 4, 15, 16th Fl., Siam Motors Building,
891/1 Rama 1 Road, Wangmai,
Pathumwan, Bangkok 10330, Thailand
Tel: +66-2215-2622

VIETNAM

Yamaha Music Vietnam Company Limited

15th Floor, Nam A Bank Tower, 201-203 Cach
Mang Thang Tam St., Ward 4, Dist.3,
Ho Chi Minh City, Vietnam
Tel: +84-28-3818-1122

OTHER ASIAN REGIONS

<https://asia.yamaha.com/>

OCEANIA

AUSTRALIA

Yamaha Music Australia Pty. Ltd.

Level 1, 80 Market Street, South Melbourne,
VIC 3205 Australia
Tel: +61-3-9693-5111

NEW ZEALAND

Music Works LTD

P.O.BOX 6246 Wellesley, Auckland 4680,
New Zealand
Tel: +64-9-634-0099

REGIONS AND TRUST TERRITORIES IN PACIFIC OCEAN

<https://asia.yamaha.com/>

Head Office/Manufacturer: Yamaha Corporation 10-1, Nakazawa-cho, Naka-ku, Hamamatsu, 430-8650, Japan

Importer (European Union): Yamaha Music Europe GmbH Siemensstrasse 22-34, 25462 Rellingen, Germany

Importer (United Kingdom): Yamaha Music Europe GmbH (UK) Sherbourne Drive, Tilbrook, Milton Keynes, MK7 8BL, United Kingdom

Important Notice: Guarantee Information for customers in European Economic Area (EEA) and Switzerland

Important Notice: Guarantee Information for customers in EEA* and Switzerland For detailed guarantee information about this Yamaha product, and Pan-EEA* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country. * EEA: European Economic Area	English
Wichtiger Hinweis: Garantie-Information für Kunden in der EWR* und der Schweiz Für nähere Garantie-Information über dieses Produkt von Yamaha, sowie über den Pan-EWR*- und Schweizer Garantieservice, besuchen Sie bitte entweder die folgend angegebene Internetadresse (eine druckfähige Version befindet sich auch auf unserer Webseite), oder wenden Sie sich an den für Ihr Land zuständigen Yamaha-Vertrieb. *EWR: Europäischer Wirtschaftsraum	Deutsch
Remarque importante: informations de garantie pour les clients de l'EEE et la Suisse Pour des informations plus détaillées sur la garantie de ce produit Yamaha et sur le service de garantie applicable dans l'ensemble de l'EEE ainsi qu'en Suisse, consultez notre site Web à l'adresse ci-dessous (le fichier imprimable est disponible sur notre site Web) ou contactez directement Yamaha dans votre pays de résidence. * EEE : Espace Economique Européen	Français
Belangrijke mededeling: Garantie-informatie voor klanten in de EER* en Zwitserland Voor gedetailleerde garantie-informatie over dit Yamaha-product en de garantieservice in heel de EER* en Zwitserland, gaat u naar de onderstaande website (u vindt een afdrukbaar bestand op onze website) of neemt u contact op met de vertegenwoordiging van Yamaha in uw land. * EER: Europese Economische Ruimte	Nederlands
Aviso importante: información sobre la garantía para los clientes del EEE* y Suiza Para una información detallada sobre este producto Yamaha y sobre el soporte de garantía en la zona EEE* y Suiza, visite la dirección web que se incluye más abajo (la versión del archivo para imprimir esta disponible en nuestro sitio web) o póngase en contacto con el representante de Yamaha en su país. * EEE: Espacio Económico Europeo	Español
Avviso importante: informazioni sulla garanzia per i clienti residenti nell'EEA* e in Svizzera Per informazioni dettagliate sulla garanzia relativa a questo prodotto Yamaha e l'assistenza in garanzia nei paesi EEA* e in Svizzera, potete consultare il sito Web all'indirizzo riportato di seguito (è disponibile il file in formato stampabile) oppure contattare l'ufficio di rappresentanza locale della Yamaha. * EEA: Area Economica Europea	Italiano
Aviso importante: informações sobre as garantias para clientes da AEE* e da Suíça Para obter uma informação pormenorizada sobre este produto da Yamaha e sobre o serviço de garantia na AEE* e na Suíça, visite o site a seguir (o arquivo para impressão está disponível no nosso site) ou entre em contato com o escritório de representação da Yamaha no seu país. * AEE: Área Económica Européia	Português
Σημαντική σημείωση: Πληροφορίες εγγύησης για τους πελάτες στον ΕΟΧ* και Ελλάδα Για λεπτομερείς πληροφορίες εγγύησης σχετικά με το παρόν προϊόν της Yamaha και την κάλυψη εγγύησης σε όλες τις χώρες του ΕΟΧ και την Ελλάδα, επισκεφτείτε την παρακάτω ιστοσελίδα (Εκτυπώσιμη μορφή είναι διαθέσιμη στην ιστοσελίδα μας) ή απευθυνθείτε στην αντιπροσωπεία της Yamaha στη χώρα σας. * ΕΟΧ: Ευρωπαϊκός Οικονομικός Χώρος	Ελληνικά
Viktigt: Garantiinformation för kunder i EES-området* och Schweiz För detaljerad information om denna Yamaha-produkt samt garantiservice i hela EES-området* och Schweiz kan du antingen besöka nedanstående webbadress (en utskriftsvänlig fil finns på webbplatsen) eller kontakta Yamahas officiella representant i ditt land. * EES: Europeiska Ekonomiska Samarbetsområdet	Svenska
Viktig merknad: Garantiinformasjon for kunder i EØS* og Sveits Detaljert garantiinformasjon om dette Yamaha-produktet og garantiservice for hele EØS-området* og Sveits kan fås enten ved å besøke nettadressen nedenfor (utskriftsversjon finnes på våre nettsider) eller kontakte Yamahas kontorene i landet der du bor. *EØS: Det europeiske økonomiske samarbeidsområdet	Norsk
Vigtig oplysning: Garantioplysninger til kunder i EØO* og Schweiz De kan finde detaljerede garantioplysninger om dette Yamaha-produkt og den fælles garantiserviceordning for EØO* (og Schweiz) ved at besøge det websted, der er angivet nedenfor (der findes en fil, som kan udskrives, på vores websted), eller ved at kontakte Yamahas nationale repræsentationskontor i det land, hvor De bor. * EØO: Det Europæiske Økonomiske Område	Dansk

<p>Tärkeä ilmoitus: Takuutiedot Euroopan talousalueen (ETA)* ja Sveitsin asiakkaille</p> <p>Tämän Yamaha-tuotteen sekä ETA-alueen ja Sveitsin takuuta koskevat yksityiskohtaiset tiedot saatte alla olevasta nettiosoitteesta, (Tulostettava tiedosto saatavissa sivustollamme.) Voitte myös ottaa yhteyttä paikalliseen Yamaha-edustajaan. *ETA: Euroopan talousalue</p>	Suomi
<p>Ważne: Warunki gwarancyjne obowiązujące w EOG* i Szwajcarii</p> <p>Aby dowiedzieć się więcej na temat warunków gwarancyjnych tego produktu firmy Yamaha i serwisu gwarancyjnego w całym EOG* i Szwajcarii, należy odwiedzić wskazaną poniżej stronę internetową (Plik gotowy do wydruku znajduje się na naszej stronie internetowej) lub skontaktować się z przedstawicielem firmy Yamaha w swoim kraju. * EOG — Europejski Obszar Gospodarczy</p>	Polski
<p>Důležité oznámení: Záruční informace pro zákazníky v EHS* a ve Švýcarsku</p> <p>Podrobné záruční informace o tomto produktu Yamaha a záručním servisu v celém EHS* a ve Švýcarsku naleznete na níže uvedené webové adrese (soubor k tisku je dostupný na našich webových stránkách) nebo se můžete obrátit na zastoupení firmy Yamaha ve své zemi. * EHS: Evropský hospodářský prostor</p>	Česky
<p>Fontos figyelemztetés: Garancia-információk az EGT* területén és Svájcban élő vásárlók számára</p> <p>A jelen Yamaha termékre vonatkozó részletes garancia-információk, valamint az EGT*-re és Svájcra kiterjedő garanciális szolgáltatás tekintetében keresse fel webhelyünket az alábbi címen (a webhelyen nyomtatható fájl is talál), vagy pedig lépjen kapcsolatba az országában működő Yamaha képviselői irodával. * EGT: Európai Gazdasági Térség</p>	Magyar
<p>Oluline märkus: Garantiteave Euroopa Majanduspiirkonna (EMP)* ja Šveitsi klientidele</p> <p>Täpsemate teabe saamiseks selle Yamaha toote garantii ning kogu Euroopa Majanduspiirkonna ja Šveitsi garantiteeninduse kohta, külastage palun veebisaiti alljärgneval aadressil (meie saidil on saadaval printitav fail) või pöörduge Teie regiooni Yamaha esinduse poole. * EMP: Euroopa Majanduspiirkond</p>	Eesti keel
<p>Svarīgs paziņojums: garantijas informācija klientiem EEZ* un Šveicē</p> <p>Lai saņemtu detalizētu garantijas informāciju par šo Yamaha produktu, kā arī garantijas apkalpošanu EEZ* un Šveicē, lūdzu, apmeklējiet zemāk norādīto tīmekļa vietnes adresi (tīmekļa vietnē ir pieejams drukājams fails) vai sazinieties ar jūsu valsti apkalpojošo Yamaha pārstāvniecību. * EEZ: Eiropas Ekonomikas zona</p>	Latviešu
<p>Dėmesio: informacija dėl garantijos pirkėjams EEE* ir Šveicarijoje</p> <p>Jei reikia išsamios informacijos apie šį „Yamaha“ produktą ir jo techninę priežiūrą visoje EEE* ir Šveicarijoje, apsilankykite mūsų svetainėje toliau nurodytu adresu (svetainėje yra spausdintinas failas) arba kreipkitės į „Yamaha“ atstovybę savo šaliai. *EEE – Europos ekonominė erdvė</p>	Lietuvių kalba
<p>Dôležité upozornenie: Informácie o záruke pre zákazníkov v EHP* a Švajčiarsku</p> <p>Podrobné informácie o záruke týkajúce sa tohto produktu od spoločnosti Yamaha a garančnom servise v EHP* a Švajčiarsku nájdete na webovej stránke uvedenej nižšie (na našej webovej stránke je k dispozícii súbor na tlač) alebo sa obráťte na zástupcu spoločnosti Yamaha vo svojej krajine. * EHP: Európsky hospodársky priestor</p>	Slovenčina
<p>Pomembno obvestilo: Informacije o garanciji za kupce v EGP* in Švici</p> <p>Za podrobnejše informacije o tem Yamahinem izdelku ter garancijskem servisu v celotnem EGP in Švici, obiščite spletno mesto, ki je navedeno spodaj (natiljsljava datoteka je na voljo na našem spletnem mestu), ali se obrnite na Yamahinega predstavnika v svoji državi. * EGP: Evropski gospodarski prostor</p>	Slovenščina
<p>Важно съобщение: Информация за гаранцията за клиенти в ЕИП* и Швейцария</p> <p>За подробна информация за гаранцията за този продукт на Yamaha и гаранционното обслужване в паневропейската зона на ЕИП* и Швейцария или посетете посочения по-долу уеб сайт (на нашия уеб сайт има файл за печат), или се свържете с представителния офис на Yamaha във вашата страна. * ЕИП: Европейско икономическо пространство</p>	Български език
<p>Notificare importantă: Informații despre garanție pentru clienții din SEE* și Elveția</p> <p>Pentru informații detaliate privind acest produs Yamaha și serviciul de garanție Pan-SEE* și Elveția, vizitați site-ul la adresa de mai jos (fișierul imprimabil este disponibil pe site-ul nostru) sau contactați biroul reprezentanței Yamaha din țara dumneavoastră. * SEE: Spațiul Economic European</p>	Limba română
<p>Važna obavijest: Informacije o jamstvu za države EGP-a i Švicarske</p> <p>Za detaljne informacije o jamstvu za ovaj Yamahin proizvod te jamstvenom servisu za cijeli EGP i Švicarsku, molimo Vas da posjetite web-stranicu navedenu u nastavku ili kontaktirate ovlaštenog Yamahinog dobavljača u svojoj zemlji. * EGP: Europski gospodarski prostor</p>	Hrvatski

<https://europe.yamaha.com/warranty/>

YAMAHA CORPORATION

10-1 Nakazawa-cho, Naka-ku, Hamamatsu, 430-8650 Japan

ヤマハ株式会社

〒430-8650 静岡県浜松市中区中沢町 10-1

Yamaha Global Site
<https://www.yamaha.com/>

Yamaha Downloads
<https://download.yamaha.com/>

© 2023 Yamaha Corporation
Published 04/2023
MWEM-A0

VFD1390