 


Remote control functions

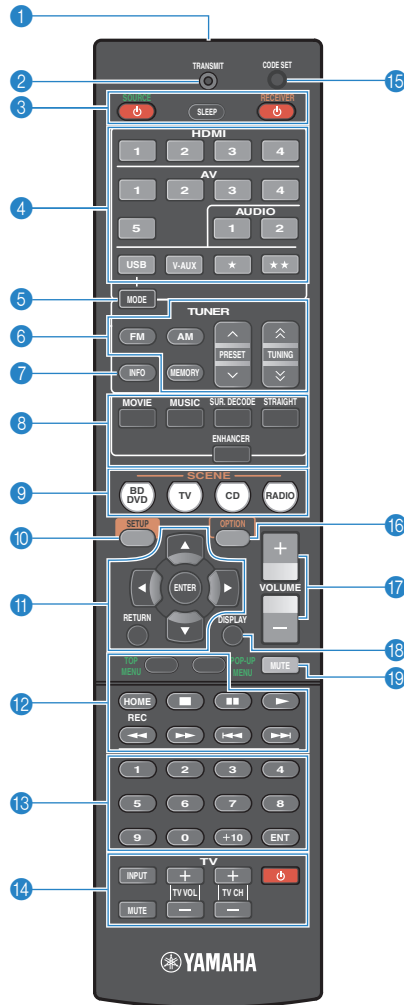

1 Remote control signal transmitter

Transmits infrared signals.

2 TRANSMIT indicator

Lights up when remote control signals are transmitted.

3 SOURCE key

Turns on/off an external device (p.3).

SLEEP key

Switches the unit to standby mode automatically after a specified period of time has elapsed (sleep timer). Press repeatedly to set the time (120 min, 90 min, 60 min, 30 min, off).

RECEIVER key

Turns on/off (standby) the unit.

4 Input selection keys

Select an input source for playback.

- HDMI 1-4** HDMI 1-4 jacks
- AV 1-5** AV 1-5 jacks
- AUDIO 1-2** AUDIO 1-2 jacks
- USB** USB jack (on the front panel)
- V-AUX** VIDEO AUX jacks (on the front panel)
- ★/★★** Change the external device to be controlled without switching the input source.

5 MODE key

Switches between "Stereo" and "Mono" for FM radio reception.

Switches the iPod operation modes.

6 Radio keys

Operate the FM/AM radio.

- FM** Switches to FM radio.
- AM** Switches to AM radio.
- MEMORY** Registers FM/AM radio stations as presets.
- PRESET** Select a preset station.
- TUNING** Select the radio frequency.

7 INFO key

Selects the information displayed on the front display.

8 Sound mode keys

Select a sound mode.

9 SCENE keys

Select the registered input source and sound program with one touch. Also, turns on the unit when it is in standby mode.

10 SETUP key

Displays the setup menu.

11 Menu operation keys

- Cursor keys** Select a menu or a parameter.
- ENTER** Confirms a selected item.
- RETURN** Returns to the previous screen.

12 External device operation keys

Let you play back and select menus and perform other operations for external devices (p.3).

13 Numeric keys

Let you enter numerical values (p.3).

14 TV operation keys

Let you select TV input and volume and perform other TV operations (p.2).

15 CODE SET button

Registers remote control codes of external devices on the remote control (p.2).

16 OPTION key

Displays the option menu.

17 VOLUME keys

Adjust the volume.

18 DISPLAY key

Switches between the browser and playback screens during playback of the iPod or USB storage device. Switches the display information for the external device (p.3).

19 MUTE key

Mutes the audio output.



- To operate external devices with the remote control, register a remote control code for each device before using (p.2).



Controlling external devices with the remote control

You can use the unit's remote control to operate external devices (such as BD/DVD players) if you have registered the remote control code of the external device.



- You cannot control an external device that does not have a remote control sensor.
- Ensure that the remote control ID of the external device is set to "ID1". If any other ID is selected, the remote control operations may not work properly.
- If the unit's remote control is without batteries for more than 2 minutes, the registered codes may be cleared. If this happens, insert new batteries and register the codes again.



- Under the unit's default settings, the amplifier code (Yamaha: 5098) is set for all the input selection keys. With this setting, you can control HDMI Control-compatible devices connected to the unit with the remote control. (This function may not work depending on the specification of the external device.)

Registering the remote control code for a TV

You can use the unit's remote control to operate a TV if you have registered its remote control code.



- You can also register your TV's remote control code to the unit's input selection keys (p.3). This would allow you to use the cursor keys or numeric keys to operate the TV (this function may not be available on some TV models).

1 See "List of remote control codes" (p.6) to find your TV's remote control code.



- If there are multiple remote control codes, register the first code in the list. If that does not work, try the other codes.

2 Press CODE SET using a pointed object such as the tip of a ballpoint pen.

The TRANSMIT indicator blinks twice.

Perform each of the following steps within 1 minute. Otherwise, the setting will be canceled. If this happens, repeat from Step 2.

3 Press TV .

 
4 Use the numeric keys to enter the 4-digit remote control code.


Once the remote control code is successfully registered, the TRANSMIT indicator blinks twice.

If it blinks six times, registration has failed. Repeat from Step 2.

TV operations

Once you have registered the remote control code for your TV, you can control it using the TV operation keys, regardless of the input source selected on the unit.

	INPUT	Switches the video inputs of the TV.
	MUTE	Mutes the audio output of the TV.
TV operation keys	TV VOL	Adjust the volume of the TV.
	TV CH	Switch the channels of the TV
	TV 	Turns on/off the TV.

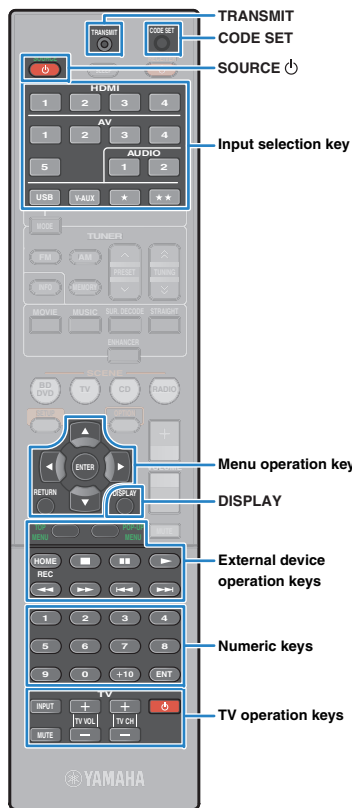 

Registering the remote control codes for playback devices

You can use the unit's remote control to operate playback devices if you have registered their remote control codes. You can also use the input selection keys to change the playback devices that are controlled by the remote control, because their remote control codes are assigned to the input selection keys.



- If you assign the remote control code for an external device to the star (★ or ★★) key, you can operate the device with the remote control without switching the input source after pressing the star key.

1 See “List of remote control codes” (p.6) to find the remote control code for your playback device.



- If there are multiple remote control codes, register the first code in the list. If that does not work, try the other codes.

2 Press CODE SET using a pointed object such as the tip of a ballpoint pen.

The TRANSMIT indicator blinks twice.

Perform each of the following steps within 1 minute. Otherwise, the setting will be canceled. If this happens, repeat from Step 2.

3 Press the input selection key.

For example, press HDMI 1 to set the remote control code for the playback device connected to the HDMI 1 jack.

4 Use the numeric keys to enter the 4-digit remote control code.

Once the remote control code is registered successfully, the TRANSMIT indicator blinks twice.

If it blinks six times, registration has failed. Repeat from Step 2.



- For details on how to register a remote control code to a SCENE key, see “Changing the external device assigned to the SCENE keys” (p.4)


Playback device operations

Once you have registered the remote control code for your playback device, you can control it using the following keys after selecting the input source or scene.

SOURCE	☰	Turns on/off the playback device.
Menu operation keys	Cursor keys	Select an item.
	ENTER	Confirms a selected item.
	RETURN	Returns to the previous screen.
DISPLAY		Switches information on the display.
	TOP MENU	Displays the top menu.
	POP-UP MENU	Displays the pop-up menu.
	HOME/REC	Displays the home menu. Starts recording.
External device operation keys	■	Stops playback.
	■	Stops playback temporarily.
	▶	Starts playback of the selected song/video.
	◀▶	Searches forward/backward (by holding down).
	▶▶	Skips forward/backward.
	◀◀	Skips forward/backward.
	▶◀	Skips forward/backward.
Numeric keys		Enter numerical values.
TV operation keys		Control the TV (p.2).



- These keys work only if the corresponding function is available on your playback device and if the device can be operated with an infrared remote control.

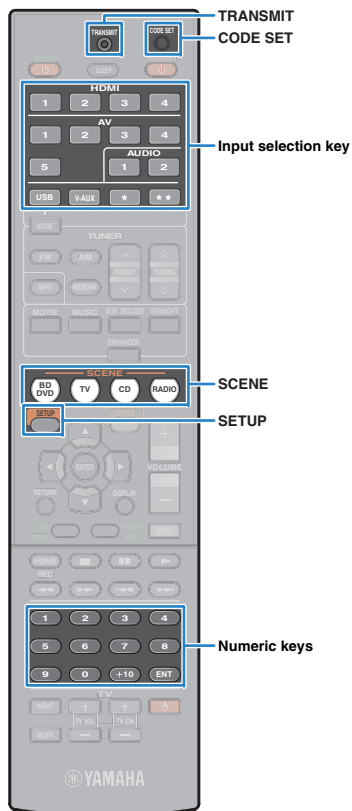

Changing the external device assigned to the SCENE keys

If you want to control your playback device after selecting a scene, follow the procedure below.

- 1** If you have not registered the remote control code for the device yet, follow “Registering the remote control codes for playback device” (p.3).
- 2** Hold down the corresponding SCENE key and input selection key together for more than 3 seconds.

Once the setting is successfully completed, the TRANSMIT indicator blinks twice.

If it blinks six times, the setting has failed. Repeat step 2.

Resetting remote control codes

You can reset a remote control code registered to each input selection key.

- 1** Press **CODE SET** using a pointed object such as the tip of a ballpoint pen.
The TRANSMIT indicator blinks twice.
Perform each of the following steps within 1 minute. Otherwise, the setting will be canceled. If this happens, repeat from Step 1.
- 2** Press the input selection key.
- 3** Use the numeric keys to enter “5098”.

Once the remote control code is reset successfully, the TRANSMIT indicator blinks twice.

If it blinks six times, resetting has failed. Repeat from Step 1.

To reset the remote control to factory default settings

- ① Press CODE SET using a pointed object such as the tip of a ballpoint pen.
- ② Press SETUP.
- ③ Use the numeric keys to enter “9981”.

List of remote control codes

TV

A.R. Systems	0320	Arthur Martin	0321	Bush	0269, 0282, 0283, 0304, 0320, 0323, 0328, 0332, 0340, 0343, 0344, 0346, 0348, 0349, 0350, 0372, 0382, 0463, 0470, 0472	Crown	0058, 0161, 0171, 0179, 0320, 0323, 0343, 0349, 0350, 0351
Acme	0342	ASA	0339, 0347	byd:sign	0093	CS Electronics	0277, 0340, 0342
Acura	0323, 0343	Asberg	0171, 0320, 0350	Candle	0008, 0026, 0050, 0057	CTC Clatronic	0341
ADC	0337	Astra	0343	Capsonic	0337	CTX	0205
Admiral	0054, 0178, 0336, 0337, 0339, 0346, 0347	Asuka	0277, 0282, 0337, 0340, 0342	Carena	0320	Curtis Mathes	0007, 0008, 0010, 0019, 0021, 0026, 0049, 0050, 0178
Advent	0158	Atlantic	0277, 0320, 0342, 0349, 0350	Carnivale	0050	CXC	0058, 0179
Adventura	0057	Atori	0323, 0343	Carrefour	0344	Cybertron	0340
Adyson	0277, 0282, 0342	Auchan	0321	Carver	0010	Cytron	0152
Agashi	0277, 0282	Audiosonic	0161, 0282, 0320, 0340, 0342, 0343, 0349, 0350	Cascade	0320, 0323, 0343	Daewoo	0007, 0008, 0026, 0037, 0053, 0167, 0266, 0275, 0277, 0282, 0315, 0320, 0323, 0331, 0335, 0342, 0343, 0350, 0381, 0465
Agazi	0337	AudioTon	0161, 0282, 0342	Casio	0367	Dainichi	0277, 0340
Aiko	0277, 0282, 0320, 0323, 0342, 0343	Ausind	0171	Cathay	0320, 0349, 0350	Dansai	0277, 0282, 0320, 0337, 0349, 0350
Aim	0320	Autovox	0171, 0282, 0337, 0339, 0342	CCE	0183, 0282	Dantax	0161, 0349
Aiwa	0078, 0379	Aventura	0051	Celebrity	0055, 0107	Dawa	0320
Akai	0050, 0055, 0109, 0159, 0181, 0277, 0282, 0320, 0323, 0340, 0343, 0349, 0350	Awa	0277, 0282	Celera	0039	Daytron	0007, 0008, 0026, 0323, 0343
Akiba	0320, 0340	Axion	0156	Centurion	0320, 0349, 0350	De Graaf	0346
Akura	0320, 0323, 0337, 0340	Baird	0282	Century	0339	Decca	0282, 0320, 0342, 0349, 0350
Alaron	0277	Bang & Olufsen	0180, 0339	CGE	0161, 0171	Dell	0145, 0245
Alba	0161, 0277, 0320, 0323, 0340, 0342, 0343, 0344, 0349, 0351, 0372, 0382	Basic Line	0282, 0320, 0323, 0340, 0343, 0350	Changhong	0039	Denver	0358, 0362
Albatron	0140	Bastide	0282, 0342	Chimei	0273	Desmet	0320, 0349, 0350
Alcyon	0171	Baur	0320, 0349	Cimline	0323, 0343	Diamant	0320
Alleron	0059	Bazin	0282	Citizen	0007, 0008, 0026, 0050, 0058	Diamond	0277
Allorgan	0282	Beko	0161, 0269, 0294, 0302, 0311, 0320, 0328, 0351	City	0323, 0343	DiamondVision	0135, 0143
Allstar	0320, 0350	Belcor	0008	Clarion	0179	Dimensia	0049
America Action	0179	Bell & Howell	0019, 0054	Clarivox	0349	Disney	0219
AMOi	0276	Benq	0097, 0242, 0361	Clatronic	0161, 0171, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350, 0351	Dixi	0282, 0320, 0323, 0343, 0349, 0350
Amplivision	0161, 0282, 0321, 0342	Beon	0320, 0349, 0350	CMS	0277	Dream Vision	0461, 0498
Amstrad	0320, 0323, 0337, 0340, 0343	Best	0161	CMS Hightec	0282	DTS	0323, 0343
Amtron	0058	Bestar	0161, 0320, 0350	Coby	0197	Dual	0282, 0320, 0342
Anam	0179, 0343	Binatone	0282, 0342	Colorlyme	0008, 0026	Dual-Tec	0342, 0343
Anam National	0052, 0058	Blue Sky	0320, 0340	Commercial Solutions	0021	Dumont	0008, 0030, 0062, 0282, 0339, 0341, 0342
Anglo	0323, 0343	Blue Star	0348	Concerto	0008, 0026	Durabrand	0031, 0051, 0179, 0215
Anitech	0171, 0320, 0323, 0337, 0343	Boots	0282, 0342	Concorde	0323, 0343	Dux	0349
Ansonic	0161, 0168, 0320, 0323, 0341, 0343	BPL	0320, 0348	Condor	0161, 0277, 0320, 0323, 0342, 0350, 0351	Dwin	0178
AOC	0008, 0026, 0050, 0053	Bradford	0058, 0179	Contec	0179, 0277, 0323, 0342, 0343, 0344	Dynatron	0320, 0349, 0350
Apex	0039, 0111, 0217	Brandt	0322, 0345	Contec/Cony	0012, 0058	Dynex	0228, 0231
Arcam	0277, 0282	Brilliant	0182	Continental Edison	0345	EIZO	0509
Arcam Delta	0342	Brinkmann	0320	Cosmel	0323, 0343	Elbe	0161, 0168, 0282, 0320
Aristona	0320, 0349, 0350	Brionvega	0320, 0339, 0349, 0350	Craig	0058, 0179	Elcitra	0339
		Britannia	0277, 0282, 0342	Crosley	0010, 0037, 0171, 0339	ELECTRO TECH	0343
		Brockwood	0008				
		Broksonic	0109, 0179				
		Bruns	0339				
		BTC	0340				

Electroband	0055, 0107	Fujitsu Siemens	0504, 0505, 0507, 0510, 0511	Harwood	0320, 0323	Intervision	0161, 0282, 0320, 0337, 0341, 0342
Electrograph	0176	Funai	0051, 0058, 0059, 0112, 0113, 0115, 0118, 0119, 0179, 0337, 0488, 0489	Havermy	0178	Irradio	0171, 0320, 0323, 0340, 0343, 0349, 0350
Electrohme	0008, 0026, 0052, 0055			HCM	0282, 0320, 0323, 0337, 0342, 0343, 0348	Isukai	0320, 0340
Element	0230	Futuretech	0058, 0179	Hema	0282, 0323	ITC	0282, 0342
Elin	0277, 0320, 0323, 0342, 0349, 0350	Galaxi	0320, 0351	Hewlett Packard	0192	ITS	0277, 0320, 0340, 0348, 0350
Elite	0320, 0340, 0350	Galaxis	0161, 0320	Higashi	0277	ITT	0343, 0347
Elman	0341	Gateway	0176, 0177, 0241	HiLine	0320	ITV	0320, 0343, 0349
Elta	0277, 0323, 0343	GBC	0323, 0343, 0344	Hinari	0320, 0323, 0340, 0343, 0344, 0349, 0350	Janeil	0057
Emerson	0000, 0007, 0008, 0012, 0013, 0019, 0026, 0031, 0037, 0051, 0058, 0059, 0161, 0179, 0320, 0339	GE	0008, 0021, 0023, 0026, 0027, 0031, 0034, 0049, 0052, 0056, 0209	Hisawa	0321, 0340, 0348	JBL	0010
Emprex	0154	Geant Casino	0321	Hisense	0247	JC Penney	0007, 0008, 0026, 0027, 0049, 0053, 0056
Envision	0008, 0026, 0050	GEC	0282, 0320, 0342, 0347, 0349, 0350	Hitachi	0008, 0012, 0026, 0066, 0084, 0092, 0093, 0120, 0172, 0173, 0255, 0270, 0271, 0282, 0320, 0335, 0338, 0342, 0344, 0346, 0347, 0365, 0382, 0448, 0456, 0467, 0482, 0484, 0487	JCB	0055, 0107
Epson	0155, 0206, 0359	Geloso	0323, 0343, 0346	Hornyphon	0320, 0350	Jensen	0008, 0026
Erres	0320, 0349, 0350	General Technic	0323, 0343	Hoshai	0340	JVC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375
ESA	0051	Genexxa	0320, 0340, 0347, 0350	Huanyu	0277, 0342	Kaisui	0277, 0282, 0320, 0323, 0340, 0342, 0343, 0348
ESC	0282	GFM	0128, 0227	Hygashi	0277, 0282, 0342	Kamosonic	0342
Etron	0343	Giant	0282	Hypson	0277, 0282, 0323, 0342, 0343	Kamp	0277, 0342
Eurofeel	0282	Gibralter	0008, 0030, 0050, 0062	Hypson	0282, 0320, 0321, 0337, 0342, 0348, 0349, 0350	Kapsch	0347
Euro-Feel	0337	GoldHand	0277	Hyundai	0141	Karcher	0161, 0320, 0342, 0343, 0349
Euroline	0349	Goldline	0320	Iberia	0320	Kawasho	0008, 0026, 0055, 0277
Euroman	0161, 0277, 0282	GoldStar	0007, 0008, 0012, 0026, 0031, 0050, 0053, 0161, 0277, 0282, 0320, 0323, 0342, 0343, 0346, 0349, 0350	ICE	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350	KEC	0179
Euromann	0320, 0337, 0342, 0350	Goodmans	0246, 0272, 0282, 0320, 0323, 0337, 0343, 0344, 0349, 0350, 0462, 0473, 0477	ICeS	0277	Kendo	0161, 0320, 0341, 0346
Europhon	0277, 0282, 0320, 0341, 0342, 0350	Gorenje	0161, 0351	Ilo	0148, 0153	Kenwood	0008, 0026, 0050
Expert	0321	GPM	0340	IMA	0058	KIC	0282
Exquisit	0320	GPX	0129	Imperial	0161, 0171, 0320, 0347, 0350, 0351	Kingsley	0277, 0342
Fenner	0323, 0343	Gradiente	0240	Indiana	0320, 0349, 0350	KLH	0039
Ferguson	0322, 0345, 0349	Graetz	0347	Infinity	0010	Kloss Novabeam	0057, 0058
Fidelity	0277, 0320, 0342, 0346	Granada	0171, 0282, 0320, 0321, 0342, 0344, 0346, 0349, 0350	InFocus	0250, 0327, 0363, 0479, 0508	Kneissel	0161, 0168, 0320
Filsai	0282	Grandin	0340, 0343, 0348, 0349	Ingelen	0347	Kolster	0320, 0350
Finlandia	0346	Gronic	0282	Ingersol	0323, 0343	Konka	0340
Finlux	0171, 0282, 0320, 0339, 0341, 0342, 0349, 0350	Grundig	0160, 0161, 0171, 0310, 0320	Initial	0153	Korpel	0320, 0349, 0350
FIRST LINE	0342, 0343, 0350	Grunpy	0058, 0059, 0179	Inno Hit	0171, 0282, 0320, 0323, 0340, 0342, 0343, 0349, 0350	Korting	0161, 0339
Firstline	0277, 0282, 0320, 0323	Haier	0157, 0233	Innovation	0337, 0343	Kosmos	0320
Fisher	0019, 0161, 0282, 0339, 0342, 0344, 0351	Halifax	0277, 0282, 0337, 0342	Insignia	0131, 0228, 0236, 0238	Koyoda	0343
Flint	0320, 0350	Hallmark	0008, 0026, 0031	Inteq	0030	KTV	0007, 0050, 0058, 0179, 0183, 0282, 0342
Formenti	0171, 0277, 0336, 0339, 0342, 0349	Hampton	0277, 0282, 0342	Interactive	0161	Kyoto	0277, 0282
Formenti/Phoenix	0277	Hanseatic	0161, 0168, 0282, 0320, 0323, 0342, 0343, 0344, 0349, 0350	Interbuy	0323, 0343	Lasat	0161
Fortress	0336, 0339	Hantarex	0320, 0323, 0343	Interfunk	0161, 0320, 0339, 0347, 0349, 0350	Lenco	0323, 0343
Fraba	0161, 0320	Hantor	0320	International	0277	Lenoir	0323, 0342, 0343
Friac	0161	Harman/Kardon	0010			Leyco	0320, 0337, 0349, 0350
Frontech	0282, 0323, 0337, 0343, 0346, 0347	Harvard	0058, 0179			LG	0031, 0053, 0066, 0116, 0117, 0140, 0161, 0164, 0175, 0195, 0269, 0277, 0282, 0300, 0309,
Fujitsu	0059, 0069, 0074, 0075, 0282						
Fujitsu General	0282						

	0317, 0320, 0323, 0328, 0342, 0343, 0346, 0349, 0350, 0366, 0368, 0377, 0466, 0471, 0478	Memphis	0323, 0343	Novatronic	0320	Phoenix	0161, 0277, 0320, 0339, 0349, 0350
LG/GoldStar	0164	Mercury	0320, 0323	Oceanic	0321, 0347	Phonola	0277, 0320, 0339, 0349, 0350
Liesenk	0349	Metz	0339	Okano	0161, 0320, 0351	Pilot	0007, 0008, 0050
Liesenkotter	0320	MGA	0008, 0026, 0031, 0050, 0053	Olevia	0102, 0199, 0200, 0207, 0222	Pioneer	0008, 0026, 0094, 0095, 0161, 0320, 0345, 0347, 0349, 0350, 0458, 0480
Life	0337, 0343	Micromaxx	0337, 0343	ONCEAS	0342	Plantron	0320, 0323, 0337, 0350
Lifetec	0320, 0323, 0337, 0343	Microstar	0337, 0343	Onwa	0058, 0179	Playsonic	0282
Lloyds	0323	Midland	0007, 0021, 0023, 0027, 0030, 0056, 0062	Opera	0320	Polaroid	0039, 0142, 0202, 0234
Loewe	0161, 0168, 0265, 0320, 0330, 0352	Minerva	0171	Oppo	0130	Poppy	0323, 0343
Loewe Opta	0339, 0349, 0350	Minoka	0320, 0350	Optimus	0017, 0019	Portland	0007, 0008, 0026, 0053
Logik	0054	Mintek	0153	Optoma	0144	Prandoni-Prince	0171, 0346
Luma	0320, 0323, 0346, 0349	Mitsubishi	0008, 0026, 0031, 0053, 0066, 0084, 0093, 0098, 0150, 0178, 0289, 0320, 0339, 0344, 0350, 0376	Optonica	0178	Precision	0282, 0342
Lumatron	0282, 0320, 0346, 0349, 0350			Orbit	0320, 0350	Prima	0157, 0243, 0323, 0343, 0347
Lux May	0350	Mivar	0161, 0168, 0171, 0277, 0282, 0342	Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350	Princeton	0140
Luxman	0008, 0026			Orline	0320	Prism	0023, 0056
Luxor	0282, 0342, 0346	Monivision	0140	Osaki	0282, 0320, 0337, 0340, 0342	Profex	0323, 0343
LXI	0010, 0019, 0021, 0026, 0027, 0031, 0049, 0111	Montgomery Ward	0054	Oso	0340	Profi-Tronic	0320, 0350
M Electronic	0342, 0343, 0345, 0347, 0349, 0350	Motion	0171	Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350	Proline	0320, 0350
MAG	0096	Motorola	0052, 0178	Pael	0277, 0342	Proscan	0021, 0027, 0049
Magnadyne	0339, 0341, 0349	MTC	0008, 0026, 0050, 0053, 0161, 0277	Palladium	0161, 0282, 0320, 0342, 0351	Prosonic	0161, 0277, 0282, 0320, 0342, 0349
Magnafon	0171, 0277, 0341, 0342			Panasonic	0277, 0282, 0320, 0323, 0337, 0342, 0343	Protech	0282, 0337, 0341, 0342, 0343, 0349, 0350
Magnavox	0008, 0009, 0010, 0013, 0026, 0032, 0033, 0048, 0050, 0128, 0211, 0212, 0224, 0226, 0239	Multi System	0349		0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356, 0483, 0485, 0490	Proton	0008, 0012, 0026, 0031
Magnum	0337, 0343	Multitech	0058, 0161, 0179, 0183, 0277, 0282, 0320, 0323, 0341, 0342, 0343, 0344, 0346, 0349	Panavision	0320	Prottron	0196
Majestic	0054	Murphy	0277, 0342	Pathe Cinema	0161, 0168, 0277, 0321, 0342	PROVIEW	0096, 0246
Mandor	0337	NAD	0026, 0031, 0111	Pausa	0323, 0343	Provision	0320, 0349
Manesth	0282, 0320, 0337, 0342, 0349, 0350	Naonis	0346	Penney	0021, 0023, 0031, 0050, 0111	Pulsar	0008, 0030, 0062
Marantz	0008, 0010, 0026, 0050, 0204, 0320, 0349, 0350	NEC	0008, 0026, 0050, 0052, 0053, 0072, 0103, 0282, 0344	Perdio	0277, 0320	Pye	0256, 0320, 0349, 0350, 0378
Marelli	0339	Neckermann	0161, 0282, 0320, 0339, 0342, 0346, 0349, 0350, 0351	Perfekt	0320	Pymi	0323, 0343
Mark	0277, 0282, 0320, 0323, 0349, 0350	NEI	0320, 0349, 0350	Philco	0008, 0009, 0010, 0012, 0026, 0050, 0052, 0053, 0161, 0171, 0320, 0339	Quandra Vision	0321
Masuda	0282	Net-TV	0176		0008, 0009, 0010, 0011, 0012, 00128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	Quasar	0017, 0023, 0052, 0056
Matsui	0282, 0320, 0323, 0342, 0343, 0344, 0346, 0349, 0350, 0455	New Funk	0320, 0323	Philharmonic	0282, 0342	Quelle	0282, 0320, 0337, 0342, 0349, 0350
Matsushita	0017	New Tech	0343, 0350	Philips	0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	Questa	0344
Maxent	0147, 0176	New World	0340		0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	Radiolva	0320
Mediator	0320, 0349, 0350	Nicamagic	0277, 0342		0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	RadioShack	0019, 0021, 0031, 0050, 0179, 0320
Medion	0320, 0337, 0343	Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350		0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	RadioShack/Realistic	0007, 0008, 0012, 0026, 0049, 0058
Megapower	0140	Nikko	0026, 0031, 0050		0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	Radiola	0282, 0320, 0349, 0350
Megatron	0026, 0031	Noblisko	0171, 0277, 0341, 0342		0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	Radiomarelli	0320, 0339
MElectronic	0277, 0282, 0320, 0323	Nokia	0347		0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	Radiotone	0161, 0320, 0323, 0350
Melvox	0321	Norcent	0201		0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	Rank	0344
Memorex	0019, 0026, 0031, 0053, 0054, 0137, 0215, 0323, 0343	Nordic	0282		0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	RCA	0008, 0021, 0024, 0025, 0026, 0027, 0042, 0049, 0052, 0053, 0063, 0136, 0225
		Nordmende	0339, 0345, 0347, 0350	Philips Magnavox	0011, 0032, 0033	Realistic	0019, 0031, 0050, 0179
		Nordvision	0349				

Recor	0320	Sentra	0323	Supra	0323, 0343	Tokai	0282, 0320, 0350
Redstar	0320	Serino	0277	Supre-Macy	0057	Tokyo	0277, 0342
Reflex	0320	Sharp	0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476, 0481	Supreme	0055, 0107	Tomashi	0348
Revox	0161, 0320, 0349, 0350			Susumu	0340	Toshiba	0018, 0019, 0040, 0041, 0046, 0073, 0100, 0103, 0108, 0109, 0111, 0121, 0132, 0166, 0208, 0210, 0214, 0217, 0260, 0268, 0282, 0283, 0293, 0304, 0306, 0307, 0329, 0344, 0355, 0454, 0491
Rex	0337, 0346, 0347			Sutron	0323, 0343		
RFT	0161, 0168, 0339			SVA	0151		
Rhapsody	0277			Sydney	0277, 0282, 0342		
R-Line	0320, 0349, 0350			Sylvania	0008, 0009, 0010, 0011, 0013, 0026, 0048, 0050, 0051, 0128, 0227, 0253		
Roadstar	0323, 0337, 0340, 0343			Symphonic	0051, 0058, 0062, 0128, 0179, 0215	Totevision	0007
Robotron	0339	Sheng Chia	0178			Towada	0282, 0347
Rowa	0277, 0282	Shogun	0008	Syntax	0199	Trakton	0282
Royal Lux	0161	Siarem	0320, 0339, 0341	Syntax-Brilliant	0199	Trans Continens	0282, 0320
RTF	0339	Sierra	0320, 0350	Sysline	0349	Transtec	0277
Runco	0030, 0050, 0062	Siesta	0161	Sytong	0277	Trident	0282
Saba	0298, 0322, 0339, 0345, 0347	Signature	0054	Tandy	0178, 0282, 0336, 0340, 0342, 0347	Triumph	0320
Saisho	0282, 0323, 0337, 0342, 0343	Silva	0277	Tashiko	0277, 0282, 0342, 0344, 0346	Uher	0161, 0171, 0320, 0347, 0350
Salora	0346, 0347	Silver	0344	Tatung	0052, 0177, 0282, 0320, 0342, 0349, 0350	Ultravox	0277, 0320, 0339, 0341, 0342
Sambers	0171, 0341	Singer	0321, 0339, 0341	TCM	0337, 0343	Unic Line	0320
Sampo	0007, 0008, 0026, 0050, 0176	Sinudyne	0320, 0339, 0341, 0349	Teac	0282, 0320	United	0349
Samsung	0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Skantic	0347	Tec	0282, 0323, 0342, 0343	Univox	0320
		Solavox	0347	Technics	0017, 0023, 0056	Vector Research	0050
		Sonitron	0161, 0282	TechniSat	0274, 0496, 0497, 0499	Vestel	0282, 0320, 0346, 0347, 0349, 0350, 0351
		Sonoko	0282, 0320, 0323, 0337, 0342, 0343, 0349, 0350	Techwood	0008, 0023, 0026, 0056	Vexa	0320, 0323, 0343, 0349
		Sonolor	0321, 0347	TEDELEX	0282	Victor	0015, 0344, 0350
		Sontec	0161, 0320, 0349, 0350	Teknika	0007, 0008, 0010, 0012, 0026, 0053, 0054, 0058, 0059, 0179	VIDEOLOGIC	0277
		Sony	0038, 0044, 0045, 0047, 0055, 0090, 0104, 0105, 0107, 0110, 0123, 0184, 0220, 0248, 0249, 0251, 0252, 0254, 0326, 0343, 0344, 0371, 0374, 0457, 0475, 0486	Teleavia	0345	Videologique	0277, 0282, 0340, 0342
Sandra	0277, 0282, 0342			Telecor	0282, 0320	VideoSystem	0320, 0350
Sansui	0043, 0109, 0320, 0350	Sound & Vision	0340, 0341	Telefunken	0320, 0322, 0345, 0350	Videotechnic	0277, 0282
Sanyo	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Soundesign	0008, 0026, 0031, 0058, 0059, 0179	Telegazi	0320	Vidikron	0010
		Soundwave	0320, 0349, 0350	Telemeister	0320	Vidtech	0008, 0026, 0031, 0053
SBR	0320, 0349	Squareview	0051	Telesonic	0320	Viewsonic	0176, 0203, 0232, 0364
Sceptre	0235, 0244	SSS	0008, 0058, 0179	Telestar	0320	Viking	0057
Schaub Lorenz	0347	Standard	0282, 0320, 0323, 0340, 0342, 0343, 0350	Teletech	0320, 0323, 0343, 0349	Viore	0148
Schneider	0282, 0316, 0318, 0320, 0333, 0340, 0342, 0349, 0350, 0382	Starlite	0058, 0179, 0320, 0323, 0349	Teleton	0282, 0342	Visiola	0277, 0342
		Stenway	0348	Televideon	0277	Vision	0282, 0320, 0350
Scotch	0026, 0031	Stern	0346, 0347	Televiso	0321	Vizio	0008, 0177, 0218, 0242, 0500, 0501, 0502, 0503, 0506
Scott	0008, 0012, 0026, 0031, 0058, 0059, 0149, 0179	Strato	0320, 0323	Tensai	0282, 0320, 0323, 0340, 0343, 0350	Vortec	0320, 0349, 0350
Sears	0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	Stylandia	0282	Tesmet	0350	Voxson	0171, 0320, 0339, 0346, 0347, 0350
SEG	0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Sunkai	0343	Tevion	0337, 0343	Waltham	0282, 0320, 0342
		Sunstar	0320, 0323	Textet	0277, 0282, 0323, 0342	Wards	0008, 0009, 0010, 0026, 0031, 0048, 0049, 0050, 0053, 0054, 0059
SEI	0320	Sunwood	0320, 0323, 0343, 0350	Thomson	0162, 0188, 0189, 0285, 0320, 0322, 0342, 0345, 0350		
SEI-Sinudyne	0339, 0341, 0347	Superla	0277, 0282, 0342	Thorn	0320, 0349		
Seleco	0344, 0346, 0347	Superscan	0013, 0178	TMK	0008, 0026, 0031	Watson	0320, 0349, 0350
Sencora	0323, 0343	SuperTech	0277, 0320, 0323	TNCi	0030	Watt Radio	0277, 0341, 0342

Waycon 0111
Wega 0320, 0339, 0344
Wegavox 0323
Weltblick 0282, 0320, 0349, 0350
Westinghouse 0107, 0216, 0220
White Westinghouse
0037, 0090, 0277, 0320, 0341,
0342, 0349
Wincom 0101, 0106
Xrypton 0320
Yamaha 0008, 0026, 0050, 0053, 0080,
0081, 0082, 0083, 0086, 0087
Yamishi 0282, 0320
Yokan 0320
Yoko 0161, 0277, 0282, 0320, 0323,
0337, 0340, 0342, 0343, 0349,
0350
Yorx 0340
Zanussi 0282, 0346
Zenith 0008, 0028, 0029, 0030, 0031,
0054, 0061, 0062

VCR

ABS 1016
Adventura 1069
Adyson 1008
Aiwa 1024, 1026, 1027, 1069
Akai 1021, 1027
Akiba 1008, 1029
Akura 1008, 1027, 1029
Alba 1008, 1009, 1024, 1025, 1029,
1030
Alienware 1016
Ambassador 1030
American High 1068
Amstrad 1008, 1009, 1026
Anitech 1008, 1029
Apex 1088
ASA 1028, 1031
Asha 1070
Asuka 1008, 1026, 1028, 1029, 1031
Audio Dynamics 1064
Audiosonic 1009
Audiovox 1071
Baird 1009, 1025, 1026, 1027
Bang & Olufsen 1017
Basic Line 1008, 1009, 1024, 1025, 1029,
1030
Baur 1028

Beaumark 1070
Bell & Howell 1065
Bestar 1009, 1025, 1030
Black Panther Line
1009, 1025
Blaupunkt 1028
Bondstec 1008, 1030
Broksonic 1100
Bush 1008, 1009, 1024, 1025, 1029,
1049, 1051, 1063, 1217
Calix 1071
Candle 1070, 1071
Canon 1068
Cathay 1009
Catron 1030
CGE 1026, 1027
Cimline 1008, 1024, 1029
CineVision 1104
Citizen 1070, 1071
Clatronic 1008, 1030
Colorzyme 1064
Condor 1009, 1025, 1030
Craig 1070, 1071
Crown 1008, 1009, 1025, 1029, 1030
Curtis Mathes 1064, 1068, 1070
Cybernex 1070
CyberPower 1016
Daewoo 1009, 1025, 1030, 1038, 1069,
1223
Dansai 1008, 1009, 1029
Dantax 1024
Daytron 1009, 1025
DBX 1064
De Graaf 1028
Decca 1026, 1027, 1028
Dell 1016
Denko 1008
DiamondVision 1096
DigiFusion 1014
DIRECTV 1019, 1105, 1110, 1111, 1113,
1116, 1122
Dish Network 1018
Dishpro 1018
Dual 1009, 1027, 1028
Dumont 1026, 1028
Durabrand 1114
Dynatech 1069
Echostar 1018
Elbe 1009
Elcatech 1008
Electrohome 1071

Electroponic 1071
Elsay 1008
Elta 1008, 1009, 1029
Emerson 1008, 1020, 1068, 1069, 1071
ESC 1009, 1025
Etzuko 1008, 1029
Expressvu 1018
Ferguson 1027
Fidelity 1008, 1026
Finlandia 1028
Finlux 1026, 1027, 1028
Firstline 1008, 1024, 1029, 1031
Fisher 1065
Flint 1024
Formenti/Phoenix 1028
Frontech 1030
Fuji 1068
Fujitsu 1026
Funai 1026, 1069
Galaxy 1026
Garrard 1069
Gateway 1016
GBC 1029, 1030
GE 1068, 1070
GEC 1028
Geloso 1029
General 1030
General Technic 1024
GOI 1018
GoldHand 1008, 1029
Goldstar 1026, 1031, 1064, 1071
Goodmans 1008, 1009, 1025, 1026, 1029,
1030, 1031
Gradiente 1069
Graetz 1027
Granada 1028
Grandin 1008, 1009, 1025, 1026, 1029,
1030, 1031
Grundig 1028, 1029
Hanseatic 1009, 1028, 1031
Harley Davidson 1069
Harman/Kardon 1064
Harwood 1008
HCM 1008, 1029
Headquarter 1065
Hewlett Packard 1016
Hinari 1008, 1009, 1024, 1029
Hisawa 1024
Hitachi 1011, 1026, 1027, 1028, 1046,
1062
HNS 1110

Howard Computers
1016
HP 1016
HTS 1018
Hughes 1111, 1113, 1122
Hughes Network Systems
1110, 1116
Humax 1012, 1110, 1113
Hush 1016
Hypson 1008, 1009, 1024, 1029
iBUYPOWER 1016
Impego 1030
Imperial 1026
Inno Hit 1008, 1009, 1025, 1028, 1029,
1030
Innovation 1024
Instant Replay 1068
Interbuy 1008, 1031
Interfunk 1028
Intervision 1009, 1026
Irradio 1008, 1029, 1031
ITT 1027
ITV 1009, 1025, 1031
JC Penney 1064, 1065, 1068, 1070, 1071
JCL 1068
JVC 1007, 1018, 1027, 1039, 1064,
1065, 1066, 1067, 1078, 1089,
1092, 1093, 1094, 1095, 1113,
1208, 1209, 1212, 1213, 1215,
1218
Kaisui 1008, 1029
Karcher 1028
Kendo 1008, 1024, 1025, 1030
Kenwood 1027, 1064, 1065
Kodak 1068, 1071
Korpel 1008, 1029
Kyoto 1008
Lenco 1025
Leyco 1008, 1029
LG 1010, 1026, 1031, 1047, 1054,
1056, 1071, 1103, 1221
Lifetec 1024
Linksys 1016
Lloyd's 1069
Loewe Opta 1028, 1031
Logik 1008, 1029
Lumatron 1009, 1025
Luxor 1008
LXI 1071
M Electronic 1026
Magnavox 1020, 1068, 1114, 1126

Magnin	1071	Philco	1008, 1068	Schaub Lorenz	1026, 1027	Teleavia	1027
Manesth	1008, 1029	Philips	1006, 1013, 1028, 1035, 1040, 1045, 1046, 1050, 1058, 1059, 1061, 1068, 1076, 1101, 1110, 1113, 1116, 1117, 1122, 1126, 1210, 1211	Schneider	1008, 1009, 1024, 1025, 1026, 1028, 1029, 1030, 1031	Telefunken	1027
Marantz	1028, 1064, 1065, 1068			Sears	1065, 1068, 1071	Teletch	1008, 1009
Mark	1009			SEG	1008, 1009, 1029	Tenosal	1008, 1029
Marta	1071			SEI-Sinudyne	1028	Tensai	1008, 1026, 1029, 1031
Matsui	1024, 1031			Seleco	1027	Tevion	1024
Matsushita	1068	Philips Magnavox	1076	Sentra	1008, 1030	Thomson	1005, 1027
Media Center PC	1016	Phonola	1028	Sentron	1008, 1029	Thorn	1027
Mediator	1028	Pilot	1071	Sharp	1003, 1033, 1077, 1107, 1127, 1219	Tivo	1108, 1110, 1111, 1113, 1117, 1118, 1119, 1122
Medion	1024	Pioneer	1028, 1036	Shintom	1008, 1029	TMK	1070
MEI	1068	Polaroid	1088, 1099	Shivaki	1031	Tokai	1008, 1029, 1031
Memorex	1023, 1026, 1031, 1065, 1068, 1069, 1070, 1071, 1098, 1114	Portland	1009, 1025, 1030	Shogun	1070	Tonsai	1029
Memphis	1008, 1029	Prinz	1026	Siemens	1031	Toshiba	1004, 1016, 1027, 1028, 1037, 1049, 1052, 1086, 1087, 1097, 1109, 1112, 1194
MGN Technology	1070	Profex	1029	Silva	1031	Totevision	1070, 1071
Micromaxx	1024	Proline	1026	Silver	1009	Touch	1016
Microsoft	1016	Proscan	1019	Singer	1068	Towada	1008, 1029
Microstar	1024	Prosonic	1009, 1024	Sinudyne	1028	Towika	1008, 1029
Migros	1026	Pulsar	1114	Solavox	1030	TVA	1030
Mind	1016	Pye	1028, 1102	Sonac Blue	1022, 1123	Uher	1031
Mitsubishi	1026, 1028, 1079	Quarter	1065	Sonneclair	1008	UltimateTV	1019
Motorola	1068	Quartz	1065	Sonoko	1009, 1025	Ultravox	1009
MTC	1070	Quasar	1068	Sontec	1031	Unitech	1070
Multitech	1008, 1026, 1028, 1029, 1030, 1069, 1070	Quelle	1026, 1028	Sony	1001, 1016, 1048, 1053, 1073, 1074, 1080, 1081, 1082, 1083, 1108, 1118, 1216	United Quick Star	1009, 1025
Murphy	1026	Radialva	1008	Stack	1016	Universum	1026, 1028, 1031
NEC	1027, 1064, 1065	RadioShack	1071	Stack 9	1016	Vector Research	1064
Neckermann	1027, 1028	RadioShack/Realistic	1065, 1068, 1069, 1070, 1071	Standard	1009, 1025	Video Concepts	1064
NEI	1028	Radiola	1028	Stern	1009	Videon	1024
Nesco	1008, 1029	Radix	1071	STS	1068	Videosonic	1070
Nikkai	1008, 1009, 1030	Randex	1071	Sunkai	1024	Viewsonic	1016
Nikko	1071	RCA	1019, 1068, 1070, 1075, 1110, 1113, 1122, 1125	Sunstar	1026	Voodoo	1016
Niveus Media	1016	Realistic	1065, 1068, 1069, 1070, 1071	Suntronic	1026	Wards	1068, 1069, 1070, 1071
Noblex	1070	ReplayTV	1022, 1123	Sunwood	1008, 1029	Weltblick	1031
Nokia	1009, 1027	Rex	1027	Superscan	1020	XR-1000	1068, 1069
Nordmende	1027	RFT	1008, 1028, 1030	Sylvania	1020, 1068, 1069, 1102, 1126	Yamaha	1064, 1065
Northgate	1016	Ricavision	1016	Symphonic	1008, 1069, 1126	Yamishi	1008, 1029
Oceanic	1026, 1027	Roadstar	1008, 1009, 1025, 1029, 1031	Systemax	1016	Yokan	1008, 1029
Okano	1008, 1009, 1024	Royal	1008	Tagar Systems	1016	Yoko	1008, 1029, 1030, 1031
Olympus	1068	Runco	1114	Taisho	1024	Zenith	1114
Optimus	1071	Saba	1027	Tandberg	1009	ZT Group	1016
Orion	1023, 1024, 1051, 1115, 1217	Saisho	1024, 1029	Tandy	1065		
Orson	1026	Samsung	1002, 1034, 1041, 1043, 1057, 1060, 1070, 1084, 1110, 1116, 1122, 1124, 1220, 1222	Tashiko	1026, 1071		
Osaki	1008, 1026, 1029, 1031			Tatung	1026, 1027, 1028	DVD	
Otto Versand	1028	Samurai	1008, 1030	TCM	1015, 1024, 1042	4Kus	2051
Palladium	1008, 1027, 1029, 1031	Sanky	1114	Teac	1009, 1069	Accurian	2142
Panasonic	1000, 1022, 1044, 1055, 1068, 1072, 1085, 1090, 1091, 1120, 1121, 1214	Sansui	1023, 1027, 1106, 1115	Tec	1008, 1009, 1030	Advent	2155, 2251
Pathe Marconi	1027	Sanyo	1032, 1065, 1070	Technics	1068	AEG	2362
Perdio	1026	Saville	1009	Teknika	1068, 1069, 1071	Airis	2364
		SBR	1028				

Aiwa	2322	Crown	2362	Global Sphere	2355	Lawson	2355
Akai	2145, 2177, 2179, 2248	C-Tech	2355	Go Video	2133, 2213	Lecson	2381
Akura	2356	Curtis Mathes	2139	Goodmans	2165, 2280, 2291, 2358, 2371,	Lenco	2358, 2362, 2367
Alba	2064, 2165, 2186, 2337, 2346	CVG	2377		2376, 2382	Lenoxx	2136, 2153
Alco	2149	CyberHome	2022, 2098, 2138, 2187, 2336	GPX	2227	LG	2002, 2033, 2038, 2057, 2129,
Alize	2361	Cytron	2244	Gradiente	2151		2133, 2189, 2191, 2223, 2238,
Allegro	2133	Daenyx	2363	Graetz	2380		2270, 2288, 2335, 2373, 2375
Amitech	2362	Daewoo	2001, 2133, 2276, 2298, 2330,	Greenhill	2131	Life	2182
Amphion MediaWorks			2362, 2363, 2377	Grundig	2349	Lifetec	2182
	2195	Daewoo International		Grunkel	2362, 2366	Limit	2355
AMW	2195, 2363		2363	GVG	2377	Liquid Video	2158
Apex	2030, 2124, 2125, 2126, 2127,	Dalton	2357	H&B	2358	Liteon	2043, 2051, 2142
	2130, 2131	Dansai	2362, 2381	H_her	2364	Loewe	2320
Apple	2241	Daytek	2184, 2195, 2363	Haaz	2354, 2355	LogicLab	2355
Arrgo	2138	Dayton	2363	Haier	2254	Magnavox	2025, 2050, 2137, 2150, 2159,
Asono	2364	DEC	2358	Harman/Kardon	2047, 2135		2224, 2230, 2358
Aspire	2152, 2222	Decca	2362	HiMAX	2359	Magnex	2367
Astar	2240	Denon	2059, 2151, 2193, 2332	Hitachi	2062, 2090, 2115, 2274, 2316,	Majestic	2360
ATACOM	2364	Denver	2356, 2358, 2360, 2370		2359, 2380	Marantz	2328
Audiovox	2061, 2149	Denzel	2380	Hiteker	2130	Marquant	2362
Avious	2367	Desay	2205	Home Tech Industries		Matsui	2148, 2378
Awa	2363	Diamond	2354, 2355		2364	McIntosh	2199
Axion	2249	DiamondVision	2225, 2232	Hyundai	2366	Mecotek	2362
Bang & Olufsen	2128	Disney	2010, 2028	Ilo	2245	Medion	2182
Baze	2367	DK Digital	2339	Initial	2131, 2245	Memorex	2028, 2145, 2234
BBK	2364	Dmtech	2176	Innovation	2182	MiCO	2354, 2382
Bellagio	2363	Dual	2380	Insignia	2002, 2137, 2253	Micromaxx	2182
Best Buy	2359	DUNE	2473	Integra	2157	Microsoft	2156
Blaupunkt	2131	Durabrand	2136	Irradio	2053	Microstar	2182
Blue Parade	2157	DVX	2355	iSymphony	2246	Minoka	2362
Boghe	2382	Easy Home	2359	JBL	2135	Minowa	2367
Brainwave	2362	Eclipse	2354	JVC	2020, 2096, 2097, 2099, 2100,	Mintek	2131, 2245
Brandt	2148, 2188	E-Dem	2364		2101, 2102, 2103, 2106, 2107,	Mitsubishi	2003
Broksonic	2145, 2146	Electrohome	2362		2160, 2257, 2260, 2262, 2263,	Mizuda	2358, 2359
Bush	2064, 2110, 2170, 2268, 2290,	Elin	2362		2321, 2324, 2326, 2327, 2343,	Monyka	2380
	2346, 2358, 2367, 2383	Elta	2341, 2361, 2362		2464, 2465, 2468, 2469, 2471	Mustek	2186
California Audio Labs		Emerson	2129, 2137, 2150	Jwin	2198	Mx Onda	2354
	2151	Enterprise	2129	Kansai	2360	Mystral	2366
Cambridge Audio	2354	Enzer	2380	Kawasaki	2149	Naiko	2362
CAT	2352, 2353	Epson	2247	Kennex	2362	Nesa	2131
CAVS	2192	ESA	2137	Kenwood	2041, 2151, 2348	Neufunk	2380
Centrum	2353	Finlux	2354, 2362, 2367	KeyPlug	2362	Nevir	2362
CGV	2354, 2362	Fintec	2377	Kiuro	2362	Next Base	2143
Changhong	2140	Fisher	2134	Kingavon	2358	Nexxtech	2243
Cinetec	2363	Funai	2137	Kiss	2380	NU-TEC	2383
CineVision	2133, 2237	Gateway	2051	KLH	2131, 2149	Onkyo	2159, 2368
Clatronic	2358, 2367	GE	2029, 2131, 2156	Koda	2358	Oopla	2051
Coby	2031, 2046, 2360	Gericom	2351	Koss	2013, 2148, 2158	Oppo	2196, 2255
Conia	2383	GFM	2226	KXD	2359	Optim	2381
Continental Edison		Giec	2382	Landel	2143	Optimus	2180
	2363	Global Solutions	2355	Lasonic	2132	Orava	2358

Orbit	2363	Rotel	2203	Sylvania	2012, 2137, 2150, 2178, 2230, 2239	Yukai	2186
Orion	2073, 2110	Rowa	2154, 2383	Symphonic	2108, 2230	Zenith	2002, 2129, 2133, 2159, 2223
Oritron	2148, 2158	Rownsonic	2353	Synn	2355		
P&B	2358	Saba	2148, 2188	T.D.E. Systems	2366		
Pacific	2355	Sabaki	2355	Tatung	2001, 2362		
Panasonic	2011, 2024, 2034, 2042, 2058, 2062, 2066, 2067, 2093, 2116, 2117, 2118, 2119, 2120, 2121, 2122, 2123, 2151, 2159, 2164, 2166, 2167, 2172, 2173, 2175, 2209, 2214, 2275, 2277, 2278, 2281, 2282, 2283, 2301, 2374, 2470	Saivod	2362	TCM	2182, 2297		
Parasound	2197	Sampo	2141	Teac	2149, 2333, 2355, 2383		
peeKTON	2364	Samsung	2000, 2045, 2077, 2112, 2113, 2114, 2115, 2151, 2200, 2216, 2219, 2228, 2264, 2265, 2271, 2279, 2294, 2303, 2329, 2365	Tec	2356		
Philips	2008, 2012, 2025, 2044, 2050, 2051, 2053, 2060, 2072, 2108, 2111, 2147, 2159, 2163, 2169, 2174, 2181, 2185, 2230, 2261, 2266, 2267, 2286, 2287, 2289, 2295, 2300, 2302, 2317, 2328, 2338, 2342, 2350, 2467	Sansui	2073, 2145, 2354, 2355, 2362	Technics	2151		
Phonotrend	2367	Sanyo	2134, 2145, 2217, 2292	Technika	2362, 2367		
Pioneer	2016, 2017, 2018, 2019, 2035, 2092, 2094, 2095, 2109, 2157, 2180, 2190, 2212, 2269, 2272, 2299, 2304, 2305, 2306, 2307, 2308, 2309, 2310, 2311, 2344, 2345, 2347, 2379	ScanMagic	2186	Telefunken	2353		
Pointer	2362	Schaub Lorenz	2362	Tensai	2362		
Polaroid	2125, 2215, 2235	Schneider	2176	Tevion	2182, 2355, 2357		
Portland	2362	Scientific Labs	2355	Theta Digital	2157		
Powerpoint	2363	Scott	2161, 2357	Thomson	2183, 2188, 2334, 2372		
Prima	2252	Seeltech	2364	Tokai	2356, 2380		
Proceed	2130	SEG	2161, 2355, 2363, 2380	Top Sucess	2364		
Proscan	2156	Sharp	2006, 2040, 2088, 2091, 2182, 2194, 2220, 2221, 2231, 2236, 2293, 2340	Toshiba	2032, 2036, 2037, 2039, 2048, 2049, 2054, 2055, 2072, 2073, 2076, 2078, 2079, 2086, 2145, 2159, 2218, 2233, 2256, 2259, 2296, 2369, 2472		
Prosonic	2360, 2377	Shinsonic	2245	TRANScontinents	2363, 2367		
Protron	2202	Sigmathek	2359, 2364	Transonic	2367		
Provision	2358	Silva	2356	Trio	2362		
Pye	2144	Singer	2354, 2355	Trutech	2242		
Qwestar	2148	Skymaster	2325, 2355	TruVision	2359		
Raite	2380	Skyworth	2356	TSM	2364		
RCA	2021, 2029, 2104, 2105, 2131, 2149, 2156, 2157, 2229	Slim Art	2362	Umax	2361		
RedStar	2356, 2360, 2362	SM Electronic	2355	United	2367		
Regent	2153	Sonic Blue	2133	Urban Concepts	2159		
Reoc	2355	Sontech	2366	US Logic	2245		
Rimax	2361	Sony	2004, 2005, 2007, 2009, 2014, 2015, 2023, 2026, 2027, 2052, 2068, 2069, 2070, 2071, 2074, 2075, 2084, 2085, 2087, 2168, 2171, 2208, 2210, 2211, 2258, 2273, 2284, 2285, 2312, 2313, 2314, 2315, 2318, 2319, 2466	Venturer	2149		
Rio	2133	Soundmaster	2355	Viewmaster	2364		
Roadstar	2331, 2358	Soundmax	2355	Vocopro	2206		
Ronin	2363	Spectra	2363	VocoStar	2207		
		Spectroniq	2201	Waitec	2364		
		Standard	2355	Welltech	2382		
		Star Cluster	2355	Westinghouse	2063, 2250		
		Starmedia	2358, 2364	Wharfedale	2354, 2355		
		Sungale	2204	Woxter	2361, 2364		
		Sunkai	2362	Xbox	2156, 2183		
		Superscan	2150	Xlogic	2355, 2362		
		Supervision	2355	XMS	2362		
				Xoro	2382		
				Yamada	2051, 2361, 2363		
				Yamaha	2056, 2064, 2065, 2080, 2081, 2082, 2083, 2089, 2118, 2151, 2323		
				Yamakawa	2363, 2380		

Blu-ray Disc	
Denon	2452, 2500, 2501
Hitachi	2460, 2461, 2463
JVC	2472, 2473, 2475, 2478, 2496, 2499, 2511
LG	2033, 2456, 2457
Marantz (US)	2454, 2455
Mitsubishi	2450, 2451
Onkyo	2504
Panasonic	2011, 2209, 2214, 2476, 2477, 2479
Philips	2510
Pioneer	2212, 2506
Samsung	2045, 2113, 2498
Sharp	2194, 2220, 2221, 2497, 2502, 2503
Sony	2075, 2453, 2458, 2459, 2507
Toshiba	2462
Yamaha	2064, 2448, 2449, 2474, 2505

DVR	
Bush	2110
Hitachi	2090
Panasonic	2066, 2067, 2093, 2116, 2117, 2119, 2120, 2122, 2123
Philips	2108, 2111
Pioneer	2016, 2017, 2018, 2019, 2092, 2094, 2095, 2109
RCA	2105
Samsung	2113, 2219
Sharp	2088, 2091
Sony	2084, 2085, 2087
Toshiba	2086, 2218
Victor	2475
Yamaha	2089, 2118

DVD Recorder	
Aspire	2222
Astar	2240
Broksonic	2146
Go Video	2213
Hitachi	2062
Insignia	2002

Irradio	2053
JVC	2100, 2101, 2106, 2107
LG	2033, 2057, 2223, 2238
Liteon	2043
Panasonic	2011, 2034, 2058, 2062, 2116, 2117, 2119, 2120, 2121, 2123
Philips	2008, 2044, 2050, 2051, 2147
Pioneer	2017, 2035
Pye	2144
Samsung	2000, 2112, 2216
Sansui	2073
Sanyo	2217
Sony	2004, 2005, 2007, 2052, 2068, 2069, 2074, 2208, 2210, 2211, 2239
Sylvania	2239
Toshiba	2032, 2036, 2037, 2039, 2049, 2054, 2055, 2076
Yamaha	2056

Cable

ABC	3002, 3003, 3017, 3066, 3067, 3086, 3093, 3119, 3122
ADB	3020
Adelphia	3081
Alcatel	3016
Americast	3124
Amstrad	3022, 3098
Antronix	3065, 3070
Archer	3070
Arcon	3098
AT&T	3095
Axis	3098
Bell South	3124
Cable Vision	3092
Cableteenna	3065
Cabletime	3104
Cableview	3087
Clearmaster	3127
ClearMax	3127
Clyde Cablevision	3105
Colour Voice	3068
Comcast	3084, 3088, 3117
Comcrypt	3107
Comtronics	3069
Contec	3074
Coolmax	3127
COX	3084
Cryptovision	3110
Director	3084

Eastern	3075
Everquest	3123
Fidelity	3098
Filmnet	3107
Filmnet Cablecrypt	3111
Filmnet Comcrypt	3111
Finlux	3097
FIOS	3004
Focus	3126
Foxtel	3022
France Telecom	3100, 3101
Freebox	3023
GC Electronics	3070
GE	3066, 3093
GEC	3105
Gemini	3072, 3123
General Instrument	3017, 3025, 3066, 3084, 3090, 3096, 3117
Goldstar	3120
Gooding	3099
Grundig	3098, 3099
Hamlin	3073, 3078
Hirschmann	3097
Hitachi	3066
HomeChoice	3106
Humax	3021, 3080, 3083
ITT Nokia	3097
Jasco	3123
Jerrold	3017, 3018, 3025, 3066, 3072, 3084, 3090, 3096, 3119, 3123
JVC	3099
Kabel Deutschland	3024, 3027, 3121
Macab	3101
Magnavox	3079
Maspro	3099
Matsui	3099
MegaCable	3117
Memorex	3076, 3122
Minerva	3099
Mnet	3107
Motorola	3025, 3026, 3084, 3088, 3090, 3095, 3117
Movie Time	3077, 3109
Mr Zapp	3101
Multichoice	3107
Multitech	3127
NEC	3064

NET Brazil	3085
Nokia	3097
Noos	3101
NSC	3077
Oak	3074
Pace	3006, 3089, 3121
Palladium	3099
Panasonic	3112, 3118, 3122
Paragon	3122
Philips	3068, 3071, 3079, 3099, 3100, 3101, 3103
Pioneer	3001, 3006, 3094, 3098, 3114, 3116, 3120
Popular Mechanics	3126
Proscan	3066, 3093
Pulsar	3122
PVP Stereo Visual Matrix	3018
Quasar	3122
RadioShack	3123, 3127
RCA	3030, 3031, 3087, 3118
Realistic	3070
Recoton	3126
Regal	3078
Regency	3075
Rembrandt	3066
Runco	3122
Sagem	3101
Samsung	3069, 3089, 3114, 3120
SAT	3098
Scientific Atlanta	3000, 3001, 3002, 3003, 3006, 3028, 3029, 3081, 3086, 3089, 3094, 3095, 3108
Signal	3072, 3123
Signature	3066
Sony	3092, 3125
Sprucer	3118
Standard Component	3115
Starcom	3017, 3072, 3119, 3123
Stargate	3072, 3123
Starquest	3072, 3123
Supercable	3090
Supermax	3127
Tele+1	3107, 3111
TELENET	3007
Telepiu	3107
Thomson	3082, 3091
TIME WARNER	3084
Tocom	3067

Torx	3017
Toshiba	3122
Tristar	3127
Tudi	3102
Tusa	3072, 3123
TV86	3077
Unika	3065, 3070
United Cable	3018, 3119
Universal	3065, 3070
Universum	3097, 3099
V2	3127
Videoway	3019
View Star	3074, 3077, 3079
Viewmaster	3127
Vision	3127
Visiopass	3097, 3100, 3101
Vortex View	3127
Wittenberg	3098
Zenith	3113, 3122, 3124
Zentek	3126

Satellite

AB Sat	4216, 4217
AccessHD	4104
ADB	4220
AGS	4216
Akai	4053, 4055
Alba	4001, 4004, 4006, 4007, 4062, 4217
Aldes	4005, 4007, 4010
Allsat	4048, 4053, 4055
Allsonic	4005, 4008, 4024
Alltech	4217
Alpha	4053
Alpha Digital	4104
Alphastar	4077
Amitronica	4217
Amstrad	4011, 4035, 4217, 4218
Anglo	4217
Ankaro	4005, 4008, 4024, 4217
Antron	4001, 4004
Apollo	4001
Armstrong	4011, 4053
Artec	4100
Asat	4053, 4055
ASLF	4217
Astacom	4216
Astra	4009, 4011, 4054, 4217, 4219

Astro	4004, 4008, 4010, 4015, 4024, 4213, 4218, 4219	DIRECTV	4056, 4064, 4067, 4068, 4070, 4071, 4074, 4107, 4116, 4119, 4121, 4122, 4123, 4127, 4192, 4193, 4194, 4195, 4196, 4197, 4198, 4199, 4200, 4201, 4202, 4203, 4206, 4207, 4221	Fuba	4001, 4008, 4014, 4015, 4024, 4055, 4215	JVC	4029, 4065, 4089, 4117
AudioTon	4004, 4048	Discoverer	4212	Galaxis	4005, 4008, 4009, 4024, 4048, 4050, 4215, 4222	Kamm	4217
Aurora	4222	Discovery	4216	GE	4066, 4093, 4111, 4197	Kathrein	4015, 4034, 4042, 4053, 4055, 4063, 4215, 4216, 4217
Austar	4222	Diseqc	4216	General Instrument	4019, 4073	Kathrein Eurostar	4215
Axiel	4216	Dish Network	4018, 4065, 4089, 4092, 4094, 4095, 4117	GMI	4011	Klap	4216
Axis	4008, 4009, 4024, 4050	Dishpro	4018, 4117	GOI	4117	Konig	4219
BBK	4205	Distrisat	4053	Goldbox	4213	Kosmos	4049
Best	4008, 4024	Ditristrad	4048	GoldStar	4049	KR	4004
Blaupunkt	4015	DNT	4014, 4053, 4055	Goodmans	4002, 4006, 4029	Kreiselmeier	4015
Blue Sky	4217	Drake	4072	Goodmind	4111	K-SAT	4217
Boca	4011, 4054, 4059, 4217	DSTv	4222	Grandin	4031	Kyostar	4001
Boston	4216	Dune	4024, 4240, 4242	Grothusen	4001, 4049	L&S Electronic	4024
Brain Wave	4013	Echostar	4014, 4018, 4065, 4089, 4117, 4217	Grundig	4004, 4006, 4015, 4035, 4211, 4218, 4222	Lasat	4008, 4010, 4024, 4054, 4212, 4215, 4219
Broadcast	4012	Einhell	4001, 4005, 4011, 4217, 4218	Hänsel & Gretel	4219	Lasonic	4108
Broco	4217	Elap	4216, 4217	Hantor	4001, 4013	Lenco	4001, 4024, 4049, 4215, 4217, 4219
BSkyB	4035, 4041	Elekta	4010	Hanuri	4010	Leng	4013
BT	4216	Elsat	4217	Hauppauge	4044	Lennox	4048
Bubu Sat	4217	Elta	4001, 4008, 4024, 4048, 4053, 4055	Heliocom	4219	Lenson	4218
Bush	4006, 4045	Emanon	4001	Helium	4219	Lexus	4053
Cambridge	4218	Emme Esse	4008, 4024	Hinari	4007	LG	4049, 4103, 4107
Canal Satellite	4213	Engel	4217	Hirschmann	4015, 4024, 4210, 4216, 4218, 4219	Lifesat	4008, 4024, 4212, 4217
Canal+	4213	Ep Sat	4006	Hisawa	4013	Lifetec	4008
CaptiveWorks	4099	EURIEULT	4031	Hisense	4016	Lorenzen	4219
Channel Master	4007, 4110	Eurodec	4052	Hitachi	4006, 4114, 4199, 4203	Lorraine	4049
Chaparral	4075	Europa	4053, 4218, 4219	Homecast	4084, 4085, 4087	Lupus	4008, 4024
CHEROKEE	4216	Europhon	4219	Houston	4048	Luxor	4218
Chess	4212, 4217	Eurosat	4011	HTS	4117	Lyonnaise	4052
CityCom	4006, 4215, 4219	Eurosky	4008, 4011, 4215, 4218, 4219, 4024	Hughes	4064, 4068, 4192, 4194, 4196, 4202	Macab	4052
Clatronic	4013	Eurostar	4011, 4215, 4219	Hughes Network Systems	4202	Magnavox	4127, 4101
CNT	4010	Eutelsat	4217	Humax	4025, 4030, 4060, 4097	Manata	4031, 4216, 4217
Comag	4080, 4081, 4082, 4083, 4086	Exator	4001, 4004	Huth	4005, 4011, 4012, 4013, 4048, 4050, 4219, 4223	Manhattan	4006, 4010, 4048, 4216
Commlink	4005	Expressvu	4117	Hypson	4031	Marantz	4055
Comtech	4050	Fenner	4024, 4212, 4217	Ilo	4016	Mascom	4010
Condor	4008, 4024, 4219	Ferguson	4006, 4052, 4214	Imex	4031	Maspro	4006, 4217
Connexions	4014, 4024	Fidelity	4218	Innovation	4008	Matsui	4216
Conrad	4024, 4215, 4218, 4219	Finlandia	4006	Insignia	4107	Max	4219
Conrad Electronic	4217, 4219	Finlux	4006	Intertronic	4011	Mediabox	4213
Contec	4050	FinnSat	4050, 4052	Intervision	4048, 4219	Mediamarkt	4011
Coolsat	4096	Flair Mate	4217	ITT Nokia	4006	Mediasat	4009, 4213, 4218
Cosat	4048	Foxtel	4222	Jerrold	4019	Medion	4008, 4024, 4217
Cosat	4048	Freecom	4001, 4049, 4218	Johansson	4013	Medison	4217
Coship	4109	FTEmaximal	4024, 4217	JOK	4216	Mega	4053, 4055
Crown	4011			JSR	4048	Memorex	4127
Daeryung	4014					Metronic	4001, 4004, 4005, 4010, 4028, 4031, 4217
Daewoo	4057, 4217					Metz	4015
DDC	4007					Micro electronic	4217, 4218, 4219
Delega	4007					Micro Technology	4217
Dew	4050						
Diamond	4051						
Digiality	4219						
Digital Stream	4105						

MicroGem	4106	Phonotrend	4006, 4005, 4048	Seemann	4009, 4011, 4014	Televés	4006, 4218
Micromaxx	4008, 4024	Pioneer	4046, 4213	SEG	4001, 4008, 4013, 4024	Telewire	4048
Microstar	4008	Polsat	4052	Seleco	4048	Tempo	4223
Microtec	4217	Predki	4013	Servi Sat	4031, 4217	Tevion	4008, 4217
Minerva	4015	Premiere	4048, 4213	Siemens	4015	Thomson	4006, 4020, 4052, 4058, 4208, 4213, 4215, 4216, 4217, 4219
Mitsubishi	4006, 4015, 4202	Priesner	4011	Silva	4049	Thorens	4051
Mitsumi	4054	Primestar	4076	Skantin	4217	Thorn	4006
Morgan's	4011, 4053, 4054, 4055, 4217	Profile	4216	Skardin	4009	Tivax	4104
Motorola	4019, 4088, 4090, 4091	Promax	4006	Skinsat	4218	Tivo	4196
Multichoice	4222	Prosat	4005, 4007	SKR	4217	Tokai	4053
Multitec	4212	Proscan	4066, 4093, 4122, 4197	Skymaster	4005, 4017, 4022, 4212, 4217	Tonna	4006, 4012, 4048, 4217, 4218
Muratto	4049	Protek	4051	Skymax	4053, 4055	Toshiba	4194, 4202, 4203
Mysat	4217	Proton	4016	SkySat	4212, 4217, 4218, 4219	Triad	4049
Navax	4013	Provision	4010	Skyvision	4048	Triasat	4218
Neuhaus	4009, 4048, 4217, 4218, 4219	Quadral	4005, 4007, 4008, 4216, 4024	SM Electronic	4212, 4217	Triax	4015, 4215, 4217, 4218
Neusat	4217	Quelle	4015, 4215, 4219	Smart	4215, 4217	Turnsat	4217
Next Level	4019	Quiero	4052	Sony	4067, 4070, 4213	Tvonic	4214
NextWave	4223	RadioShack	4019	SR	4011, 4054	Twiner	4031, 4217
Nikko	4011, 4217	Radiola	4053, 4055	Star Choice	4019	UEC	4222
Nokia	4006, 4040	Radix	4014, 4037	Starland	4217	Uher	4212
Nordmende	4001, 4006, 4007, 4010, 4052	Rainbow	4004	Starring	4013	UltimateTV	4070
Nova	4222	RCA	4066, 4093, 4112, 4113, 4116, 4118, 4119, 4197, 4122, 4207	Start Trak	4001	Uniden	4079, 4127
Novis	4013	Realistic	4078	Strong	4001, 4004, 4008, 4024, 4049, 4222	Unisat	4011, 4050, 4053
Oceanic	4051	Redpoint	4009	STS	4115	Unitor	4013
Octagon	4001, 4004, 4050	Redstar	4008, 4024	STVI	4031	Universum	4015, 4215, 4219
Okano	4011	RFT	4005, 4053, 4055	Sumida	4011	US Digital	4016
Optex	4048	Roadstar	4217	Sunny Sound	4024	Variosat	4015
Optus	4213, 4222, 4223	Roch	4031	Sunsat	4217	Vega	4024
Orbitech	4001, 4212, 4213, 4218	Rover	4024, 4217	Sunstar	4011, 4024, 4054	Ventana	4053, 4055
OSat	4004	Saba	4010, 4215, 4216, 4219	Supermax	4223	Viewsat	4098
Otto Versand	4015	Sabre	4006	Tandberg	4052	Visiosat	4013, 4048, 4216, 4217
Pace	4006, 4015, 4035, 4043, 4047, 4204, 4216, 4243	Sagem	4023, 4052	Tandy	4004	Voom	4019
Pacific	4051	Sakura	4050	Tantec	4006	Vortec	4001
Packsat	4216	Samsung	4000, 4001, 4003, 4032, 4064, 4069, 4071, 4120, 4123, 4196, 4200	TCM	4008	Welltech	4212
Palcom	4007	SAT	4007, 4218	Techniland	4012	WeTeKom	4212, 4218
Palladium	4011, 4218	Sat Cruiser	4223	TechniSat	4014, 4021, 4026, 4027, 4038, 4039, 4053, 4212, 4213, 4218	Wevasat	4006
Palsat	4212, 4218	Sat Partner	4001, 4004, 4010, 4013, 4049, 4218	Technology	4222	Wewa	4006
Panasat	4222	Sat Team	4217	Technosat	4223	Winersat	4013
Panasonic	4006, 4035, 4036, 4121, 4124, 4126, 4198, 4221	Satcom	4012, 4219	Technowelt	4219	Wisi	4006, 4014, 4015, 4218, 4219
Panda	4006, 4219	Satec	4217	Teco	4011, 4054	Woorisat	4010
Pansat	4125	Satelco	4024	Telanor	4007	Worldsat	4216
Patriot	4216	Satford	4012	Telasat	4215, 4219	Xrypton	4024
Paysat	4127	Satmaster	4012	Telecom	4217	XSat	4217
PCT	4110	Satplus	4212	Telefunken	4001, 4017, 4216	Zehnder	4008, 4209, 4010, 4215, 4024
Philco	4101	Schneider	4008, 4212, 4216	Teleka	4004, 4011, 4014, 4218, 4219	Zenith	4102, 4107, 4195
Philips	4006, 4033, 4053, 4055, 4061, 4068, 4071, 4127, 4196, 4201, 4202, 4203, 4206, 4213, 4216	Schwaiger	4051, 4212, 4219	Telemaster	4010	Zodiac	4004
Phoenix	4050	SCS	4215	TELENET	4241		
				Telesat	4219		
				Telestar	4212, 4213, 4218		

CD

Yamaha 5082, 5095

CD Recorder

Yamaha 5083

MD

Yamaha 5080, 5081, 5086

Tape

Yamaha 5084, 5087

Tuner

Yamaha 5066, 5085, 5088, 5090, 5092

LD

Yamaha 2080

Amplifier

Yamaha 5019, 5020, 5098

Apple TV

Apple 2241

“Apple TV” is a trademark or registered mark of Apple Inc.