

Quick Operation Guide



While holding down the [DEMO/SONG], [PIANO/VOICE], or [METRONOME] button,
press the highlighted keys shown below to select voice demos etc, or set parameters. (Refer to the diagram 1/2/3 below.)

1

Voice Demo

Preset Song (50 greats for the Piano)

Song loaded from the computer

2

Voice

Reverb Type

Reverb Depth

Dual Octave Setting

Dual Balance

Touch Sensitivity

3

Metronome Volume

Metronome Time Signature

Metronome / Preset Song Tempo

MASTER VOLUME
MIN MAX
METRONOME
PIANO/VOICE
FUNCTION
SELECT
- +
REC PLAY

MASTER VOLUME
MIN MAX
METRONOME
PIANO/VOICE
FUNCTION
SELECT
- +
REC PLAY

MASTER VOLUME
MIN MAX
METRONOME
PIANO/VOICE
FUNCTION
SELECT
- +
REC PLAY

A-1 B-1 **C0** D0 E0 F0 G0 A0 B0 **C1** D1 E1 F1 G1 A1 B1 **C2** D2 E2 F2 G2 A2 B2 **C3** D3 E3 F3 G3 A3 B3 **C4** D4 E4 F4 G4 A4 B4 **C5** D5 E5 F5 G5 A5 B5 **C6** D6 E6 F6 G6 A6 B6 **C7**

A-1 B-1 **C0** D0 E0 F0 G0 A0 B0 **C1** D1 E1 F1 G1 A1 B1 **C2** D2 E2 F2 G2 A2 B2 **C3** D3 E3 F3 G3 A3 B3 **C4** D4 E4 F4 G4 A4 B4 **C5** D5 E5 F5 G5 A5 B5 **C6** D6 E6 F6 G6 A6 B6 **C7**

A-1 B-1 **C0** D0 E0 F0 G0 A0 B0 **C1** D1 E1 F1 G1 A1 B1 **C2** D2 E2 F2 G2 A2 B2 **C3** D3 E3 F3 G3 A3 B3 **C4** D4 E4 F4 G4 A4 B4 **C5** D5 E5 F5 G5 A5 B5 **C6** D6 E6 F6 G6 A6 B6 **C7**


Grand Piano 1 Demo Grand Piano 2 Demo Harpsichord Demo
E. Piano Demo Church Organ Demo Strings Demo
Song No. 1 Song No. 2 Song No. 3 Song No. 4
Song No. 5 Song No. 6 Song No. 7 Song No. 8
Song No. 9 Song No. 10 Song No. 11 Song No. 12
Song No. 13 Song No. 14 Song No. 15 Song No. 16
Song No. 17 Song No. 18 Song No. 19 Song No. 20
Song No. 21 Song No. 22 Song No. 23 Song No. 24
Song No. 25 Song No. 26 Song No. 27 Song No. 28
Song No. 29 Song No. 30 Song No. 31 Song No. 32
Song No. 33 Song No. 34 Song No. 35 Song No. 36
Song No. 37 Song No. 38 Song No. 39 Song No. 40
Song No. 41 Song No. 42 Song No. 43 Song No. 44
Song No. 45 Song No. 46 Song No. 47 Song No. 48
Song No. 49 Song No. 50 Song No. 1st song Song No. 2nd song
Song No. 3rd song Song No. 4th song Song No. 5th song Song No. 6th song
Song No. 7th song Song No. 8th song Song No. 9th song Song No. 10th song

Does not change at all
Standard piano touch response
Changes very widely


Quick Operation Guide

While holding down the highlighted leftmost keys shown below, press the other highlighted keys to set the various parameters. (Refer to the diagram 4 / 5 / 6 below.) While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press the highlighted keys shown below to set parameters. (Refer to the diagram 7 below.)


4

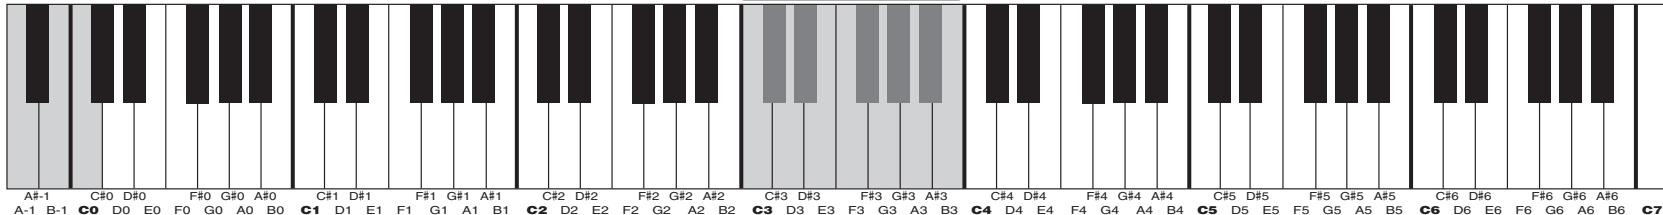

5

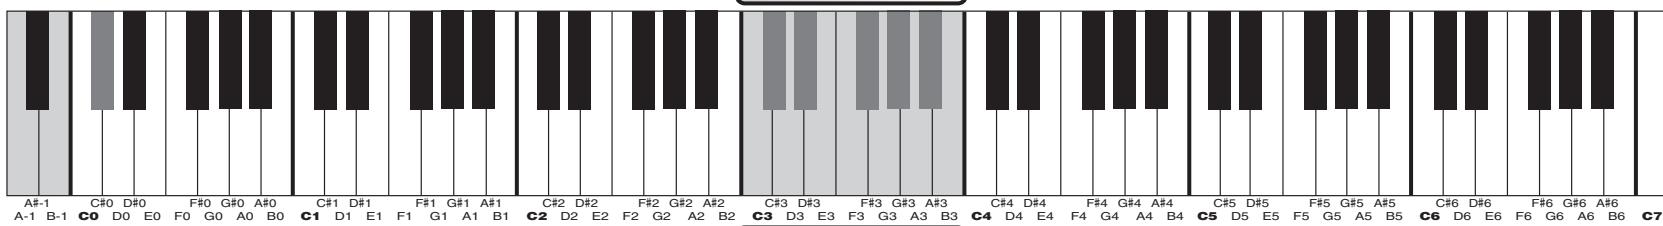

6

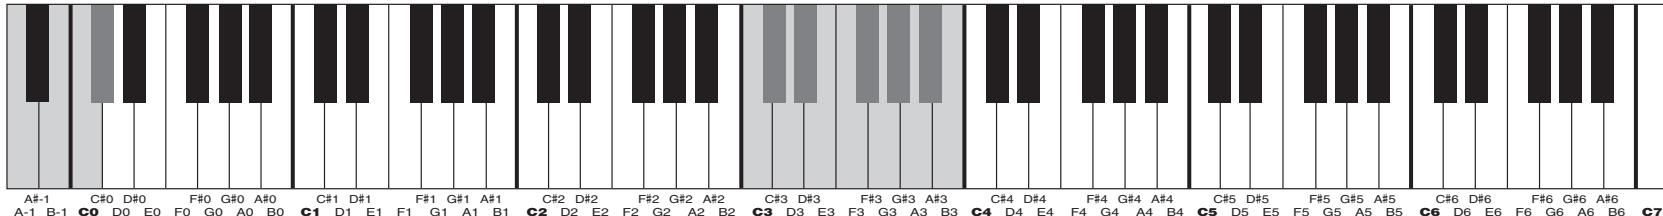

7

