

Clavinova®

DATA LIST

CLP-585

DATENLISTE

LISTE DES DONNÉES

LISTA DE DATOS

データリスト

XG Voice List..... 2

XG Voice-Liste

Liste des sonorités XG

Lista de sonidos XG

XG ボイス一覧

XG Drum Kit List 6

Liste der Drum Kits (Schlagzeug-Sets)

Liste des kits de percussion XG

Lista del kit de batería XG

XG ドラムキット一覧

EN

DE

FR

ES

JA

XG Voice List / XG Voice-Liste / Liste des sonorités XG / Lista de sonidos XG / XGボイス一覧

Voice group	Voice name	MSB	LSB	PRG	Element	
Piano	GrandPiano	0	0	1	2	
	GrndPianoKSP	0	1	1	1	
	MellowGrPno	0	18	1	2	
	PianoStrings	0	40	1	2	
	Dream	0	41	1	2	
	BrightPiano	0	0	2	2	
	BritePnoKSP	0	1	2	1	
	ElecGrandPno	0	0	3	2	
	ElecGrPnoKSP	0	1	3	2	
	DetunedCP80	0	32	3	2	
	LayeredCP1	0	40	3	2	
	LayeredCP2	0	41	3	2	
	Honkytonk	0	0	4	2	
	HonkytonkKSP	0	1	4	2	
	El.Piano1	0	0	5	2	
	El.Piano1KSP	0	1	5	1	
	MellowEP1	0	18	5	2	
	ChorusEP1	0	32	5	2	
	HardEl.Piano	0	40	5	2	
	VXfadeEl.P1	0	45	5	2	
	60sEl.Piano1	0	64	5	1	
	El.Piano2	0	0	6	2	
	El.Piano2KSP	0	1	6	1	
	ChorusEP2	0	32	6	2	
	DXEPHard	0	33	6	2	
	DXLegend	0	34	6	2	
	DXPhaseEP	0	40	6	2	
	DX+AnalogEP	0	41	6	2	
	DXKotoEP	0	42	6	2	
	VXfadeEl.P2	0	45	6	2	
	Harpsichord	0	0	7	1	
	Harpsi.KSP	0	1	7	1	
	Harpsichord2	0	25	7	2	
	Harpsichord3	0	35	7	2	
	Clavi.	0	0	8	1	
	Clavi.KSP	0	1	8	1	
	Clavi.Wah	0	27	8	2	
	PulseClavi.	0	64	8	1	
	PierceClavi.	0	65	8	2	
	Chromatic Percussion	Celesta	0	0	9	1
		Glockenspiel	0	0	10	1
		MusicBox	0	0	11	2
		Orgel	0	64	11	2
		Vibraphone	0	0	12	1
		VibesKSP	0	1	12	1
		HardVibes	0	45	12	2
		Marimba	0	0	13	1
		MarimbakSP	0	1	13	1
		SineMarimba	0	64	13	2
		Balimba	0	97	13	2
		LogDrums	0	98	13	2
		Xylophone	0	0	14	1
		TubularBells	0	0	15	1
ChurchBells		0	96	15	2	
Carillon		0	97	15	2	
Dulcimer		0	0	16	1	
Dulcimer2		0	35	16	2	
Cimbalom		0	96	16	2	
Santur		0	97	16	2	
Organ	DrawbarOrgan	0	0	17	1	
	DetDrawOrgan	0	32	17	2	
	60sDrawOrg1	0	33	17	2	
	60sDrawOrg2	0	34	17	2	
	70sDrawOrg1	0	35	17	2	
	DrawbarOrg2	0	36	17	2	
	60sDrawOrg3	0	37	17	2	
	EvenBarOrg	0	38	17	2	
	16+2'2_3Org	0	40	17	2	
	OrganBass	0	64	17	1	

Voice group	Voice name	MSB	LSB	PRG	Element
Organ	70sDrawOrg2	0	65	17	2
	CheezyOrgan	0	66	17	2
	DrawbarOrg3	0	67	17	2
	Perc.Organ	0	0	18	1
	70sPercOrg1	0	24	18	2
	DetPercOrgan	0	32	18	2
	LightOrgan	0	33	18	2
	Perc.Organ2	0	37	18	2
	RockOrgan	0	0	19	1
	RotaryOrgan	0	64	19	2
	SlowRotary	0	65	19	2
	FastRotary	0	66	19	2
	ChurchOrgan	0	0	20	2
	ChurchOrgan3	0	32	20	2
	ChurchOrgan2	0	35	20	2
	NotreDame	0	40	20	2
	OrganFlute	0	64	20	2
	Trem.OrganFl	0	65	20	2
	ReedOrgan	0	0	21	1
	PuffOrgan	0	40	21	2
	Accordion	0	0	22	1
	Accordlt	0	32	22	2
	Harmonica	0	0	23	1
Harmonica2	0	32	23	2	
TangoAccord	0	0	24	1	
TangoAccord2	0	64	24	2	
Guitar	NylonGuitar	0	0	25	1
	NylonGuitar2	0	16	25	1
	NylonGuitar3	0	25	25	2
	VelGtrHarmo	0	43	25	1
	Ukulele	0	96	25	1
	SteelGuitar	0	0	26	1
	SteelGuitar2	0	16	26	1
	12StrGuitar	0	35	26	2
	Nylon&Steel	0	40	26	2
	Steel&Body	0	41	26	2
	Mandolin	0	96	26	2
	JazzGuitar	0	0	27	1
	MellowGuitar	0	18	27	1
	JazzAmp	0	32	27	2
	CleanGuitar	0	0	28	1
	ChorusGuitar	0	32	28	2
	MutedGuitar	0	0	29	1
	FunkGuitar1	0	40	29	2
	MuteSteelGtr	0	41	29	2
	FunkGuitar2	0	43	29	1
	JazzMan	0	45	29	2
	Overdriven	0	0	30	1
	GuitarPinch	0	43	30	1
Distortion	0	0	31	1	
FeedbackGtr	0	40	31	2	
FeedbackGtr2	0	41	31	2	
GtrHarmonics	0	0	32	1	
GtrFeedback	0	65	32	1	
GtrHarmonic2	0	66	32	1	
Bass	AcousticBass	0	0	33	1
	JazzRhythm	0	40	33	2
	VXUprghtBass	0	45	33	2
	FingerBass	0	0	34	1
	FingerDark	0	18	34	2
	FlangeBass	0	27	34	2
	Bass&DistEG	0	40	34	2
	FingerSlap	0	43	34	1
	FingerBass2	0	45	34	2
	Mod.Bass	0	65	34	2
	PickBass	0	0	35	1
	MutePickBass	0	28	35	1
	FretlessBass	0	0	36	1
	Fretless2	0	32	36	2

Voice group	Voice name	MSB	LSB	PRG	Element	
Bass	Fretless3	0	33	36	2	
	Fretless4	0	34	36	2	
	Syn.Fretless	0	96	36	2	
	SmthFretless	0	97	36	2	
	SlapBass1	0	0	37	1	
	ResonantSlap	0	27	37	1	
	PunchThumb	0	32	37	2	
	SlapBass2	0	0	38	1	
	Velo.Sw.Slap	0	43	38	1	
	SynthBass1	0	0	39	1	
	SynBass1Dark	0	18	39	1	
	FastResoBass	0	20	39	1	
	AcidBass	0	24	39	1	
	ClaviBass	0	35	39	2	
	TechnoBass	0	40	39	2	
	Orbiter	0	64	39	2	
	SquareBass	0	65	39	1	
	RubberBass	0	66	39	2	
	Hammer	0	96	39	2	
	SynthBass2	0	0	40	2	
	MellowSyBass	0	6	40	1	
	SequenceBass	0	12	40	2	
	ClickSynBass	0	18	40	2	
	SynBass2Dark	0	19	40	1	
SmoothSyBass	0	32	40	2		
ModulrSyBass	0	40	40	2		
DXBass	0	41	40	2		
XWireBass	0	64	40	2		
Strings	Violin	0	0	41	1	
	SlwAtkViolin	0	8	41	1	
	Viola	0	0	42	1	
	Cello	0	0	43	1	
	Contrabass	0	0	44	1	
	Trem.Strings	0	0	45	1	
	SlwAtTremStr	0	8	45	1	
	SuspenseStr	0	40	45	2	
	PizzicatoStr	0	0	46	1	
	Orch.Harp	0	0	47	1	
	YangChin	0	40	47	2	
	Timpani	0	0	48	1	
	Ensemble	Strings1	0	0	49	1
		StereoStrngs	0	3	49	2
SlwAtkStrngs		0	8	49	1	
ArcoStrings		0	24	49	2	
60'sStrings		0	35	49	2	
Orchestra		0	40	49	2	
Orchestra2		0	41	49	2	
TremOrchestra		0	42	49	2	
Velo.Strings		0	45	49	2	
Strings2		0	0	50	1	
S.SlowStrings		0	3	50	2	
LegatoStrings		0	8	50	2	
WarmStrings		0	40	50	2	
Kingdom		0	41	50	2	
70'sStrings		0	64	50	1	
Strings3		0	65	50	1	
SynStrings1		0	0	51	2	
ResoStrings		0	27	51	2	
SynStrings4		0	64	51	2	
SynStrings5		0	65	51	2	
SynStrings2		0	0	52	2	
ChoirAahs		0	0	53	1	
StereoChoir		0	3	53	2	
ChoirAahs2		0	16	53	2	
MellowChoir		0	32	53	2	
ChoirStrings		0	40	53	2	
VoiceOohs		0	0	54	1	
SynthVoice		0	0	55	1	
SynthVoice2		0	40	55	2	

Voice group	Voice name	MSB	LSB	PRG	Element
Ensemble	Choral	0	41	55	2
	AnalogVoice	0	64	55	1
	OrchestraHit	0	0	56	2
	OrchestrHit2	0	35	56	2
	Impact	0	64	56	2
Brass	Trumpet	0	0	57	1
	Trumpet2	0	16	57	1
	BriteTrumpet	0	17	57	2
	WarmTrumpet	0	32	57	2
	Trombone	0	0	58	1
	Trombone2	0	18	58	2
	Tuba	0	0	59	1
	Tuba2	0	16	59	1
	MutedTrumpet	0	0	60	1
	FrenchHorn	0	0	61	1
	Fr.HornSolo	0	6	61	1
	FrenchHorn2	0	32	61	2
	HornOrchestr	0	37	61	2
	BrassSection	0	0	62	1
	Tp&TbSection	0	35	62	2
	BrassSect2	0	40	62	2
	HighBrass	0	41	62	2
	MellowBrass	0	42	62	2
	SynthBrass1	0	0	63	2
	QuackBrass	0	12	63	2
	ResoSynBrass	0	20	63	2
	PolyBrass	0	24	63	2
	SynthBrass3	0	27	63	2
	JumpBrass	0	32	63	2
AnaVelBrass1	0	45	63	2	
AnalogBrass1	0	64	63	2	
SynthBrass2	0	0	64	1	
SoftBrass	0	18	64	2	
SynthBrass4	0	40	64	2	
ChoirBrass	0	41	64	2	
AnaVelBrass2	0	45	64	2	
AnalogBrass2	0	64	64	2	
Reed	SopranoSax	0	0	65	1
	AltoSax	0	0	66	1
	SaxSection	0	40	66	2
	HyperAltoSax	0	43	66	1
	TenorSax	0	0	67	1
	BreathyTenor	0	40	67	2
	SoftTenorSax	0	41	67	2
	TenorSax2	0	64	67	1
	BaritoneSax	0	0	68	1
	Oboe	0	0	69	1
EnglishHorn	0	0	70	1	
Bassoon	0	0	71	1	
Clarinet	0	0	72	1	
Pipe	Piccolo	0	0	73	1
	Flute	0	0	74	1
	Recorder	0	0	75	1
	PanFlute	0	0	76	1
	BlownBottle	0	0	77	2
	Shakuhachi	0	0	78	1
	Whistle	0	0	79	1
Ocarina	0	0	80	1	
Synth. Lead	SquareLead	0	0	81	2
	SquareLead2	0	6	81	1
	LMSquare	0	8	81	2
	Hollow	0	18	81	1
	Shroud	0	19	81	2
	Mellow	0	64	81	2
	SoloSine	0	65	81	2
	SineLead	0	66	81	1
	SawtoothLead	0	0	82	2
	SawtoothLd2	0	6	82	1
ThickSaw	0	8	82	2	

Voice group	Voice name	MSB	LSB	PRG	Element	
Synth. Lead	DynamicSaw	0	18	82	1	
	DigitalSaw	0	19	82	2	
	BigLead	0	20	82	2	
	HeavySynth	0	24	82	2	
	WaspSynth	0	25	82	2	
	PulseSaw	0	40	82	2	
	Dr.Lead	0	41	82	2	
	VelocityLead	0	45	82	2	
	Seq.Analog	0	96	82	2	
	CalliopeLead	0	0	83	2	
	PureLead	0	65	83	2	
	ChiffLead	0	0	84	2	
	Rubby	0	64	84	2	
	CharangLead	0	0	85	2	
	DistortedLd	0	64	85	2	
	WireLead	0	65	85	2	
	VoiceLead	0	0	86	2	
	SynthAahs	0	24	86	2	
	VoxLead	0	64	86	2	
	FifthsLead	0	0	87	2	
	BigFive	0	35	87	2	
	Bass&Lead	0	0	88	2	
	Big&Low	0	16	88	2	
	Fat&Perky	0	64	88	2	
SoftWhiri	0	65	88	2		
Synth. Pad	NewAgePad	0	0	89	2	
	Fantasy	0	64	89	2	
	WarmPad	0	0	90	2	
	ThickPad	0	16	90	2	
	SoftPad	0	17	90	2	
	SinePad	0	18	90	2	
	HornPad	0	64	90	2	
	RotaryStrings	0	65	90	2	
	PolySynthPad	0	0	91	2	
	PolyPad80	0	64	91	2	
	ClickPad	0	65	91	2	
	AnalogPad	0	66	91	2	
	SquarePad	0	67	91	2	
	ChoirPad	0	0	92	2	
	Heaven	0	64	92	2	
	Itopia	0	66	92	2	
	CCPad	0	67	92	2	
	BowedPad	0	0	93	2	
	Glacier	0	64	93	2	
	GlassPad	0	65	93	2	
	MetallicPad	0	0	94	2	
	TinePad	0	64	94	2	
	PanPad	0	65	94	2	
	HaloPad	0	0	95	2	
	SweepPad	0	0	96	2	
	Shwimmer	0	20	96	2	
	Converge	0	27	96	2	
	PolarPad	0	64	96	2	
	Celestial	0	66	96	2	
	Synth. Effects	Rain	0	0	97	2
		ClaviPad	0	45	97	2
		HarmoRain	0	64	97	2
AfricanWind		0	65	97	2	
Carib		0	66	97	2	
SoundTrack		0	0	98	2	
Prologue		0	27	98	2	
Ancestral		0	64	98	2	
Crystal		0	0	99	2	
SynthDr.Comp		0	12	99	2	
Popcorn		0	14	99	2	
TinyBells		0	18	99	2	
RoundGlocken		0	35	99	2	
GlockenChime		0	40	99	2	
ClearBells		0	41	99	2	

Voice group	Voice name	MSB	LSB	PRG	Element
Synth. Effects	ChorusBells	0	42	99	2
	SynthMallet	0	64	99	1
	SoftCrystal	0	65	99	2
	LoudGlocken	0	66	99	2
	ChristmasBel	0	67	99	2
	VibeBells	0	68	99	2
	DigitalBells	0	69	99	2
	AirBells	0	70	99	2
	BellHarp	0	71	99	2
	Gamelimba	0	72	99	2
	Atmosphere	0	0	100	2
	WarmAtmos.	0	18	100	2
	HollowRelease	0	19	100	2
	NylonElPiano	0	40	100	2
	NylonHarp	0	64	100	2
	HarpVox	0	65	100	2
	Atmos.Pad	0	66	100	2
	Planet	0	67	100	2
	Brightness	0	0	101	2
	FantasyBells	0	64	101	2
	Smokey	0	96	101	2
	Goblins	0	0	102	2
	GoblinsSynth	0	64	102	2
	Creepier	0	65	102	2
	RingPad	0	66	102	2
	Ritual	0	67	102	2
	ToHeaven	0	68	102	2
	Night	0	70	102	2
	Glisten	0	71	102	2
	BellChoir	0	96	102	2
	Echoes	0	0	103	2
	Echoes2	0	8	103	2
	EchoPan	0	14	103	2
	EchoBells	0	64	103	2
	BigPan	0	65	103	2
	SynthPiano	0	66	103	2
	Creation	0	67	103	2
	StarDust	0	68	103	2
	Reso&Panning	0	69	103	2
	Sci-Fi	0	0	104	2
Starz	0	64	104	2	
Ethnic	Sitar	0	0	105	1
	DetunedSitar	0	32	105	2
	Sitar2	0	35	105	2
	Tambra	0	96	105	2
	Tamboura	0	97	105	2
	Banjo	0	0	106	1
	MutedBanjo	0	28	106	1
	Rabab	0	96	106	2
	Gopichant	0	97	106	2
	Oud	0	98	106	2
	Shamisen	0	0	107	1
	Koto	0	0	108	1
	Taisho-kin	0	96	108	2
	Kanoon	0	97	108	2
	Kalimba	0	0	109	1
	Bagpipe	0	0	110	2
	Fiddle	0	0	111	1
	Shanai	0	0	112	1
Shanai2	0	64	112	1	
Pungi	0	96	112	1	
Hichiriki	0	97	112	2	
Percussive	TinkleBell	0	0	113	2
	Bonang	0	96	113	2
	Altair	0	97	113	2
	GamelanGongs	0	98	113	2
	StereoGamlan	0	99	113	2
	RamaCymbal	0	100	113	2
	AsianBells	0	101	113	2

Voice group	Voice name	MSB	LSB	PRG	Element
Percussive	Agogo	0	0	114	2
	SteelDrums	0	0	115	1
	GlassPerc.	0	97	115	2
	ThaiBells	0	98	115	2
	Woodblock	0	0	116	1
	Castanets	0	96	116	1
	TaikoDrum	0	0	117	1
	GranCassa	0	96	117	1
	MelodicTom	0	0	118	2
	MelodicTom2	0	64	118	1
	RealTom	0	65	118	2
	RockTom	0	66	118	2
	SynthDrum	0	0	119	1
	AnalogTom	0	64	119	1
ElectroPerc.	0	65	119	2	
Rev.Cymbal	0	0	120	1	
Sound Effects	GtrFretNoise	0	0	121	1
	BreathNoise	0	0	122	1
	Seashore	0	0	123	2
	BirdTweet	0	0	124	2
	TelephonRing	0	0	125	1
	Helicopter	0	0	126	1
	Applause	0	0	127	1
	Gunshot	0	0	128	1
SFX	CuttingNoise	64	0	1	1
	CuttingNoiz2	64	0	2	2
	StringSlap	64	0	4	1
	Fl.KeyClick	64	0	17	1
	Shower	64	0	33	1
	Thunder	64	0	34	1
	Wind	64	0	35	1
	Stream	64	0	36	2
	Bubble	64	0	37	2
	Feed	64	0	38	2
	Dog	64	0	49	1
	Horse	64	0	50	1
	BirdTweet2	64	0	51	1
	Ghost	64	0	55	2
	Maou	64	0	56	2
	PhoneCall	64	0	65	1
	DoorSqueak	64	0	66	1
	DoorSlam	64	0	67	1
	ScratchCut	64	0	68	1
	ScratchSplit	64	0	69	2
	WindChime	64	0	70	1
	TelphonRing2	64	0	71	1
	CarEngineIgn	64	0	81	1
	CarTiresSql	64	0	82	1
	CarPassing	64	0	83	1
	CarCrash	64	0	84	1
	Siren	64	0	85	2
	Train	64	0	86	1
	JetPlane	64	0	87	2
	Starship	64	0	88	2
	Burst	64	0	89	2
	RollrCoaster	64	0	90	2
	Submarine	64	0	91	1
	Laugh	64	0	97	1
	Scream	64	0	98	1
	Punch	64	0	99	1
Heartbeat	64	0	100	1	
FootSteps	64	0	101	1	
MachineGun	64	0	113	1	
LaserGun	64	0	114	2	
Explosion	64	0	115	2	
Firework	64	0	116	2	

XG Drum Kit List / Liste der Drum Kits (Schlagzeug-Sets) /

Liste des kits de percussion XG / Lista del kit de batería XG / XGドラムキット一覧

		Standard Kit 1		Standard Kit 2		Room Kit			Rock Kit			Electro Kit		
Bank Select MSB (0-127)		127		127		127			127			127		
Bank Select LSB (0-127)		0		0		0			0			0		
Program Change (0-127)		0		1		8			16			24		
Program Change (1-128)		1		2		9			17			25		
MIDI														
Note#	Note	Key Off (*1)	Alt Grp (*2)	Key Off	Alt Grp	Key Off	Alt Grp	Key Off	Alt Grp	Key Off	Alt Grp	Key Off	Alt Grp	
13	C#-1		3											
14	D-1		3											
15	D#-1													
16	E-1													
17	F-1		4											
18	F#-1		4											
19	G-1													
20	G#-1													
21	A-1													
22	A#-1													
23	B-1													
24	C0													
25	C#0													
26	D0	●												
27	D#0													
28	E0	●										Reverse Cymbal	●	
29	F0	●												
30	F#0											Hi Q 2		
31	G0			Snare Soft 2				Snare Noisy				Snare Snappy Electro		
32	G#0													
33	A0											Kick 3		
34	A#0			Open Rim Shot	Open Rim Shot H Short									
35	B0													
36	C1							Kick 2				Kick Gate		
37	C#1							Kick Gate				Kick Gate Heavy		
38	D1			Side Stick	Side Stick Light									
39	D#1			Snare	Snare Short		Snare Snappy		Snare Rock			Snare Noisy 2		
40	E1			Hand Clap										
41	F1			Snare Tight	Snare Tight H		Snare Tight Snappy		Snare Rock Tight			Snare Noisy 3		
42	F#1		1	Floor Tom L			Tom Room 1		Tom Rock 1			Tom Electro 1		
43	G1			Hi-Hat Closed										
44	G#1		1	Floor Tom H			Tom Room 2		Tom Rock 2			Tom Electro 2		
45	A1			Hi-Hat Pedal										
46	A#1		1	Low Tom			Tom Room 3		Tom Rock 3			Tom Electro 3		
47	B1			Hi-Hat Open										
48	C2			Mid Tom L			Tom Room 4		Tom Rock 4			Tom Electro 4		
49	C#2			Mid Tom H			Tom Room 5		Tom Rock 5			Tom Electro 5		
50	D2			Crash Cymbal 1										
51	D#2			High Tom			Tom Room 6		Tom Rock 6			Tom Electro 6		
52	E2			Ride Cymbal 1										
53	F2			Chinese Cymbal										
54	F#2			Ride Cymbal Cup										
55	G2			Tambourine										
56	G#2			Splash Cymbal										
57	A2			Cowbell										
58	A#2			Crash Cymbal 2										
59	B2			Vibraslap										
60	C3			Ride Cymbal 2										
61	C#3			Bongo H										
62	D3			Bongo L										
63	D#3			Conga H Mute										
64	E3			Conga H Open										
65	F3			Conga L										
66	F#3			Timbale H										
67	G3			Timbale L										
68	G#3			Agogo H										
69	A3			Agogo L										
70	A#3			Cabasa										
71	B3	●		Maracas										
72	C4	●		Samba Whistle H										
73	C#4	●		Samba Whistle L										
74	D4	●		Guiro Short										
75	D#4			Guiro Long										
76	E4			Claves										
77	F4			Wood Block H										
78	F#4			Wood Block L										
79	G4			Cuica Mute								Scratch H 2		
80	G#4		2	Cuica Open								Scratch L 2		
81	A4		2	Triangle Mute										
82	A#4			Triangle Open										
83	B4			Shaker										
84	C5			Jingle Bells										
85	C#5			Bell Tree										
86	D5													
87	D#5													
88	E5													
89	F5													
90	F#5													
91	G5													

Same as Standard Kit 1
Standard Kit 1と同じ

No Sound
音は鳴りません

*1 Key Off: Keys marked *●* stop sounding the instant they are released.

*1 Key Off 属に (●) がついている楽器は、鍵盤を離したとき発音が止まります。

*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

*2 Alt Grp (Alternate Group)欄の番号はグループを表し、同じグループ番号の中で、1つの楽器を発音させると同じグループの中の他の楽器の発音が止まります。

		Analog Kit		Dance Kit		Jazz Kit		Brush Kit		Symphony Kit	
Bank Select MSB (0-127)		127		127		127		127		127	
Bank Select LSB (0-127)		0		0		0		0		0	
Program Change (0-127)		25		27		32		40		48	
Program Change (1-128)		26		28		33		41		49	
MIDI		Key Off (*1)	Alt Grp (*2)	Key Off	Alt Grp	Key Off	Alt Grp	Key Off	Alt Grp	Key Off	Alt Grp
Note#	Note										
13	C#-1										
14	D-1										
15	D#-1										
16	E-1										
17	F-1										
18	F#-1										
19	G-1										
20	G#-1										
21	A-1										
22	A#-1										
23	B-1										
24	C0										
25	C#0										
26	D0							Brush Tap			
27	D#0							Brush Swirl	●		
28	E0	Reverse Cymbal	●	Reverse Cymbal	●			Brush Slap			
29	F0							Brush Tap Swirl	●		
30	F#0	Hi Q 2		Hi Q 2				Snare Roll	●		
31	G0	Snare Noisy 4		Snare Techno		Snare Jazz H		Brush Slap 2			
32	G#0										
33	A0	Kick 3		Kick Techno Q				Kick Soft		Kick Soft 2	
34	A#0			Rim Gate				Open Rim Shot Light			
35	B0	Kick Analog Short		Kick Techno L				Kick Tight		Gran Cassa	
36	C1	Kick Analog		Kick Techno		Kick Jazz		Kick Jazz		Gran Cassa Mute	
37	C#1	Side Stick Analog		Side Stick Analog		Side Stick Light		Side Stick Light			
38	D1	Snare Analog		Snare Clap		Snare Jazz L		Brush Slap 3		Band Snare	
39	D#1							Hand Clap			
40	E1	Snare Analog 2		Snare Dry		Snare Jazz M		Brush Tap 2		Band Snare 2	
41	F1	Tom Analog 1		Tom Analog 1				Tom Brush 1			
42	F#1	Hi-Hat Closed Analog	1	Hi-Hat Closed 3	1			Hi-Hat Closed	1		
43	G1	Tom Analog 2		Tom Analog 2				Tom Brush 2			
44	G#1	Hi-Hat Closed Analog 2	1	Hi-Hat Closed Analog 3	1			Hi-Hat Pedal	1		
45	A1	Tom Analog 3		Tom Analog 3				Tom Brush 3			
46	A#1	Hi-Hat Open Analog	1	Hi-Hat Open 3	1			Hi-Hat Open	1		
47	B1	Tom Analog 4		Tom Analog 4				Tom Brush 4			
48	C2	Tom Analog 5		Tom Analog 5				Tom Brush 5			
49	C#2	Crash Analog		Crash Analog				Crash Cymbal 1		Hand Cymbal	
50	D2	Tom Analog 6		Tom Analog 6				Tom Brush 6			
51	D#2							Ride Cymbal 1		Hand Cymbal Short	
52	E2							Chinese Cymbal			
53	F2							Ride Cymbal Cup			
54	F#2							Tambourine			
55	G2							Splash Cymbal			
56	G#2	Cowbell Analog		Cowbell Dance				Cowbell			
57	A2							Crash Cymbal 2		Hand Cymbal 2	
58	A#2										
59	B2							Ride Cymbal 2		Hand Cymbal Short 2	
60	C3							Bongo H			
61	C#3							Bongo L			
62	D3	Conga Analog H		Conga Analog H				Conga H Mute			
63	D#3	Conga Analog M		Conga Analog M				Conga H Open			
64	E3	Conga Analog L		Conga Analog L				Conga L			
65	F3							Timbale H			
66	F#3							Timbale L			
67	G3										
68	G#3										
69	A3							Cabasa			
70	A#3	Maracas 2		Maracas 2				Maracas			
71	B3										
72	C4										
73	C#4							Guiro Short			
74	D4							Guiro Long	●		
75	D#4	Claves 2		Claves 2							
76	E4										
77	F4										
78	F#4	Scratch H 2		Scratch H 2				Cuica Mute			
79	G4	Scratch L 2		Scratch L 2				Cuica Open			
80	G#4							Triangle Mute	2		
81	A4							Triangle Open	2		
82	A#4							Shaker			
83	B4										
84	C5										
85	C#5							Bell Tree			
86	D5										
87	D#5										
88	E5										
89	F5										
90	F#5										
91	G5										

		Power Kit		SFX Kit 1		SFX Kit 2		Pop Latin Kit	
Bank Select MSB (0-127)		127		126		126		126	
Bank Select LSB (0-127)		0		0		0		0	
Program Change (0-127)		87		0		1		43	
Program Change (1-128)		88		1		2		44	
MIDI		Key Off (*1)	Alt Grp (*2)	Key Off	Alt Grp	Key Off	Alt Grp	Key Off	Alt Grp
Note#	Note								
13	C#-1								
14	D-1								
15	D#-1								
16	E-1								
17	F-1								
18	F#-1								
19	G-1								
20	G#-1								
21	A-1								
22	A#-1								
23	B-1								
24	C0								
25	C#0	Brush Tap							
26	D0	Brush Swirl	●						
27	D#0	Brush Slap							
28	E0	Brush Tap Swirl	●						
29	F0	Snare Roll	●						
30	F#0	Castanet							
31	G0	Snare Soft Power 1							
32	G#0								
33	A0	Kick Amb+							
34	A#0	Open Rim Power 1							
35	B0	Kick Power Open							
36	C1	Kick Power Closed							
37	C#1	Side Stick Power							
38	D1	Snare Power							
39	D#1	Hand Clap Power							
40	E1	Snare Rough							
41	F1	Tom Power 1							
42	F#1	Hi-Hat Closed Power	1						
43	G1	Tom Power 2							
44	G#1	Hi-Hat Pedal Power	1						
45	A1	Tom Power 3							
46	A#1	Hi-Hat Open Power	1						
47	B1	Tom Power 4							
48	C2	Tom Power 5							
49	C#2	Crash Cymbal 1							
50	D2	Tom Power 6							
51	D#2	Ride Cymbal 1							
52	E2	Chinese Cymbal							
53	F2	Ride Cymbal Cup							
54	F#2	Tambourine							
55	G2	Splash Cymbal							
56	G#2	Cowbell							
57	A2	Crash Cymbal 2							
58	A#2								
59	B2	Ride Cymbal 2							
60	C3	Bongo H							
61	C#3	Bongo L							
62	D3	Conga H Mute							
63	D#3	Conga H Open							
64	E3	Conga L							
65	F3	Timbale H							
66	F#3	Timbale L							
67	G3								
68	G#3								
69	A3	Cabasa							
70	A#3	Maracas							
71	B3								
72	C4								
73	C#4	Guiro Short							
74	D4	Guiro Long	●						
75	D#4								
76	E4								
77	F4								
78	F#4	Cuica Mute							
79	G4	Cuica Open							
80	G#4	Triangle Mute	2						
81	A4	Triangle Open	2						
82	A#4	Shaker							
83	B4								
84	C5	Bell Tree							
85	C#5								
86	D5								
87	D#5								
88	E5								
89	F5								
90	F#5								
91	G5								



ZK58840

C.S.G., DMI Development Division
© 2014 Yamaha Corporation

ZK58840

311MWAP*. *-01A0
Printed in Vietnam