



СЦЕНИЧЕСКОЕ ФОРТЕПИАНО

YC88

YC73

YC61

ДОПОЛНИТЕЛЬНОЕ РУКОВОДСТВО

Содержание

Новые функции в версии YC 2.00	3
Новый Chorus Type (тип хора).....	4
Дополнительный параметр Section SW Mode (Режим переключения раздела)	5
Дополнительные функции MIDI для разъема USB [TO DEVICE].....	6
Расширение страниц Live Set.....	7
Новые Live Set Sounds (звуки живых наборов).....	8
Новый тембр	10
Обновление Data List (Перечень данных)	11
MIDI Data Format	12
MIDI Data Table (YC61).....	13
MIDI Data Table (YC88/YC73)	18
Новые функции в версии YC 1.40	23
Новый тип органа	24
Дополнительный Live Set EQ.....	25
Изменение продолжительности действия функции Auto Power Off.....	26
Новые звуки живого набора	27
Новые функции в версии YC 1.30	28
Новые эффекты Vibrato/Chorus (Вибрато/Хорус) для тембров FM Organ	29
Дополнительный параметр панорамирования.....	30
Новая функция, позволяющая одновременно изменять несколько параметров в секции клавиш.....	31
Новый параметр скорости вращающегося динамика в панели управления	31
Новые звуки живого набора	32
Новые тембры.....	33

Новые функции в версии YC 1.20	34
Новый эффект вращающегося динамика	35
Новые типы органов	36
Дополнительные параметры для типов органов FM.....	37
Новый тип эквалайзера	37
Новый параметр Touch Sensitivity (Чувствительность к силе нажатия клавиш)	38
Изменения макета меню для параметров EG Control (Управление с помощью генератора огибающих) и Filter Control (Управление с помощью фильтра)	39
Новые звуки живого набора	40
Новый тембр	41
Новые функции в версии YC 1.10	42
Изменение метода настройки вибрато (СС # 1: модуляция).....	43
Повышение функциональности.....	44
Список Live Set Sound (Звуки живого набора)	45
Новые дополнительные Live Set Sounds	49
Voice List (Список тембров)	50
Дополнительные новые Voices (Тембры)	52


Новые функции в версии YC 2.00

Следующие функции были добавлены в YC88/YC73/YC61 в связи с обновлением версии прошивки. В данном руководстве описаны дополнения и изменения, внесенные в руководство пользователя, поставляемое с инструментом.

- Добавлен новый Chorus Type (тип хоруса).
- В MENU (МЕНЮ) добавлен параметр Section SW Mode (Режим переключения раздела).
- Теперь разъем USB [TO DEVICE] допускает подключение MIDI-устройств.
- Расширены страницы Live Set.
- Добавлены новые Live Set Sounds (звуки живых наборов).
- Добавлены новые тембры.
- Обновлен Data List (Перечень данных).

Новый Chorus Type (тип хоруса)

YC88/YC73/YC61 V2.00

Категория	Название типа	Выражение	Описание	Сtereo/ Моно
Chorus	GS1 Ensemble		Приятный эффект Chorus (хорус), который воспроизводит эффект Ensemble (ансамбль), встроенный в Yamaha GS1, винтажную FM-клавиатуру. Глубину эффекта можно регулировать с помощью регулятора [DEPTH], а его скорость — с помощью регулятора [RATE].	Моно

Дополнительный параметр Section SW Mode (Режим переключения раздела)

[MENU] кнопка → «Control Panel» → «Section SW Mode»

В переключатель [ON/OFF] раздела Voice (Тембр) добавлен новый режим.
Доступны следующие два типа.

Название функции		Описание
Section SW Mode	Realtime	При выключении переключателя [ON/OFF] в каждом разделе Voice (Тембр) звук в соответствующем разделе Voice (Тембр) прекращается немедленно.
	Next-Key	При выключении переключателя [ON/OFF] в каждом разделе Voice (Тембр) нота нажатой клавиши продолжает воспроизводиться до тех пор, пока эта клавиша не будет отпущена. Звучание соответствующего раздела Voice (Тембр) не начинается со следующей ноты.
	По умолчанию: Realtime	

Дополнительные функции MIDI для разъема USB [TO DEVICE]

Теперь разъем USB [TO DEVICE] можно использовать для подключения MIDI-устройства к MIDI-входу. При подключении USB-MIDI-клавиатуры к USB [TO DEVICE] терминалу вы можете использовать ее так же, как встроенную клавиатуру YC, насколько это позволяют характеристики подключенной клавиатуры.

УВЕДОМЛЕНИЕ

- Номинальные характеристики USB [TO DEVICE] терминала составляют максимум 5 В/500 мА для каждого терминала. Не подключайте USB-устройства с характеристиками выше этих значений, так как это может повредить инструмент.
- Используйте USB-кабель типа AB длиной менее 3 метров.

Совместимые MIDI-устройства

- MIDI-устройства, поддерживающие класс USB
USB-MIDI-клавиатуры
- Совместимые MIDI-устройства Yamaha
CP1, CP4 STAGE, CP40 STAGE, CP88, CP73, MODX, MODX+, MONTAGE, MOTIF XF, MOXF, MX, reface, YC, MONTAGE M, CK

Специальные примечания относительно MIDI-коммуникации

Обмен данными MIDI с устройством, подключенным через разъем USB [TO DEVICE], осуществляется по специальным правилам, что позволяет использовать устройство как встроенную клавиатуру.

- Обмен данными MIDI выполняется только в одну сторону (данные передаются из внешнего MIDI-устройства и принимаются YC).
- Все MIDI-данные принимаются независимо от настроек MIDI-порта и MIDI-канала.

Использование инструмента в сочетании с функцией внешней клавиатуры

Можно определить, какие разделы или партии воспроизводить на встроенной клавиатуре, а какие — на подключенной MIDI-клавиатуре USB, с помощью «External Keyboard», подключив внешнюю клавиатуру к разъему MIDI [IN]. Например, если установить Organ на 2ManualUp, вы сможете играть партию UPPER с помощью подключенной USB MIDI-клавиатуры, а также играть партию LOWER с помощью клавиатуры этого инструмента.

Расширение страниц Live Set

Количество страниц Live Set было увеличено с 20 до 40.

При отображении верхнего экрана можно пролистать 10 страниц Live Set одновременно, нажав кнопку PAGE [–] или PAGE [+] и удерживая нажатой кнопку [EXIT].

ПРИМЕЧАНИЕ

В инструмент со старой версией микропрограммы можно загрузить не более 20 страниц Live Set, даже если страницы Live Set созданы в версии 2.0.

Новые Live Set Sounds (звuky живых наборов)

Добавлены новые Live Set Sounds (звuky живых наборов) с использованием нового типа эффекта. Несколько Live Set Sounds (звукoв живых наборов) были переработаны. Выделенные цветом части () — это те, которые были добавлены или изменены по сравнению с предыдущими версиями.

Список Live Set Sound V2.00

YC61

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
1	1	Drawbar Soul	C3	Organ	H4	63	0	1
				Key A	-			
				Key B	-			
1	2	Rock Organ	G2	Organ	H2	63	0	2
				Key A	-			
				Key B	-			
1	3	78Rd Smooth EP	G2	Organ	-	63	0	3
				Key A	78Rd			
				Key B	-			
1	4	Live Reed	G2	Organ	-	63	0	4
				Key A	Wr Wide			
				Key B	-			
1	5	CFX Grand	G2	Organ	-	63	0	5
				Key A	CFX			
				Key B	-			
1	6	U1Upright-Felt	G2	Organ	-	63	0	6
				Key A	U1			
				Key B	Felt Piano			
1	7	FM Brass-DX EP	G2	Organ	-	63	0	7
				Key A	FM Brass			
				Key B	FM DX EP			
1	8	Super DX EP	G2	Organ	-	63	0	8
				Key A	FM DX EP			
				Key B	FM Pf's Heart			
2	1	70sTines-CF3-Or	G2	Organ	H4	63	1	1
				Key A	74Rd Stage			
				Key B	Live CF3			
2	2	Gospel Trio	G2	Organ	H4	63	1	2
				Key A	Live CF3			
				Key B	DX E. Piano 1			
2	3	Vintage 60-70s	G2	Organ	-	63	1	3
				Key A	67Rd Dark			
				Key B	74Rd Stage			
2	4	Retro Keys	G2	Organ	-	63	1	4
				Key A	Wr Wide			
				Key B	-			
2	5	CFX2 Grand	G2	Organ	-	63	1	5
				Key A	CFX2			
				Key B	-			
2	6	Hamburg-AnaPad	G2	Organ	-	63	1	6
				Key A	Hamburg Grand			
				Key B	Analog Pad			
2	7	C7-Analog Pad	G2	Organ	-	63	1	7
				Key A	C7			
				Key B	Analog Pad			
2	8	FM EP-Pno Synth	G2	Organ	-	63	1	8
				Key A	FM Piano DA			
				Key B	Piano Synth			
3	1	FM Church Organ	G2	Organ	-	63	2	1
				Key A	FM Warm Pad			
				Key B	FM Warm Pad			
3	2	Light Organ	G2	Organ	F2	63	2	2
				Key A	78Rd			
				Key B	-			
3	3	SuperClav>WahPe	G2	Organ	-	63	2	3
				Key A	Clavi B			
				Key B	FM PowerClavi			
3	4	CP80-BrightCFX	G2	Organ	-	63	2	4
				Key A	CP80 Stage			
				Key B	CFX			
3	5	Tape Flutes	G2	Organ	-	63	2	5
				Key A	Tape Flute			
				Key B	Tape Strings			

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
3	6	Village Strings	G2	Organ	-	63	2	6
				Key A	Marcato Str			
				Key B	Analog Pad			
3	7	80s Power Synth	G2	Organ	-	63	2	7
				Key A	OB Brass 1			
				Key B	Synth Brass 2			
3	8	70sFusionBrass	G2	Organ	-	63	2	8
				Key A	Synth Brass 2			
				Key B	FM Brass			

YC73

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
1	1	78Rd Smooth EP	G2	Organ	-	63	0	1
				Key A	78Rd			
				Key B	-			
1	2	Live Reed	G2	Organ	-	63	0	2
				Key A	Wr Wide			
				Key B	-			
1	3	Drawbar Soul	C3	Organ	H4	63	0	3
				Key A	-			
				Key B	-			
1	4	Rock Organ	G2	Organ	H2	63	0	4
				Key A	-			
				Key B	-			
1	5	CFX Grand	G2	Organ	-	63	0	5
				Key A	CFX			
				Key B	-			
1	6	U1Upright-Felt	G2	Organ	-	63	0	6
				Key A	U1			
				Key B	Felt Piano			
1	7	FM Brass-DX EP	G2	Organ	-	63	0	7
				Key A	FM Brass			
				Key B	FM DX EP			
1	8	Super DX EP	G2	Organ	-	63	0	8
				Key A	FM DX EP			
				Key B	FM Pf's Heart			
2	1	Vintage 60-70s	G2	Organ	-	63	1	1
				Key A	67Rd Dark			
				Key B	74Rd Stage			
2	2	Retro Keys	G2	Organ	-	63	1	2
				Key A	Wr Wide			
				Key B	-			
2	3	70sTines-CF3-Or	G2	Organ	H4	63	1	3
				Key A	74Rd Stage			
				Key B	Live CF3			
2	4	Gospel Trio	G2	Organ	H4	63	1	4
				Key A	Live CF3			
				Key B	DX E. Piano 1			
2	5	CFX2 Grand	G2	Organ	-	63	1	5
				Key A	CFX2			
				Key B	-			
2	6	Hamburg-AnaPad	G2	Organ	-	63	1	6
				Key A	Hamburg Grand			
				Key B	Analog Pad			
2	7	C7-Analog Pad	G2	Organ	-	63	1	7
				Key A	C7			
				Key B	Analog Pad			
2	8	FM EP-Pno Synth	G2	Organ	-	63	1	8
				Key A	FM Piano DA			
				Key B	Piano Synth			

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
3	1	SuperClav>WahPe	G2	Organ	-	63	2	1
				Key A	Clavi B			
				Key B	FM PowerClavi			
3	2	CP80-BrightCFX	G2	Organ	-	63	2	2
				Key A	CP80 Stage			
				Key B	CFX			
3	3	FM Church Organ	G2	Organ	-	63	2	3
				Key A	FM Warm Pad			
				Key B	FM Warm Pad			
3	4	Light Organ	G2	Organ	F2	63	2	4
				Key A	78Rd			
				Key B	-			
3	5	Tape Flutes	G2	Organ	-	63	2	5
				Key A	Tape Flute			
				Key B	Tape Strings			
3	6	Village Strings	G2	Organ	-	63	2	6
				Key A	Marcato Str			
				Key B	Analog Pad			
3	7	80s Power Synth	G2	Organ	-	63	2	7
				Key A	OB Brass 1			
				Key B	Synth Brass 2			
3	8	70sFusionBrass	G2	Organ	-	63	2	8
				Key A	Synth Brass 2			
				Key B	FM Brass			

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
3	1	CP80-BrightCFX	G2	Organ	-	63	2	1
				Key A	CP80 Stage			
				Key B	CFX			
3	2	SuperClav>WahPe	G2	Organ	-	63	2	2
				Key A	Clavi B			
				Key B	FM PowerClavi			
3	3	FM Church Organ	G2	Organ	-	63	2	3
				Key A	FM Warm Pad			
				Key B	FM Warm Pad			
3	4	Light Organ	G2	Organ	F2	63	2	4
				Key A	78Rd			
				Key B	-			
3	5	Tape Flutes	G2	Organ	-	63	2	5
				Key A	Tape Flute			
				Key B	Tape Strings			
3	6	Village Strings	G2	Organ	-	63	2	6
				Key A	Marcato Str			
				Key B	Analog Pad			
3	7	80s Power Synth	G2	Organ	-	63	2	7
				Key A	OB Brass 1			
				Key B	Synth Brass 2			
3	8	70sFusionBrass	G2	Organ	-	63	2	8
				Key A	Synth Brass 2			
				Key B	FM Brass			

YC88

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
1	1	CFX Grand	G2	Organ	-	63	0	1
				Key A	CFX			
				Key B	-			
1	2	U1Upright-Felt	G2	Organ	-	63	0	2
				Key A	U1			
				Key B	Felt Piano			
1	3	78Rd Smooth EP	G2	Organ	-	63	0	3
				Key A	78Rd			
				Key B	-			
1	4	Live Reed	G2	Organ	-	63	0	4
				Key A	Wr Wide			
				Key B	-			
1	5	Drawbar Soul	C3	Organ	H4	63	0	5
				Key A	-			
				Key B	-			
1	6	Rock Organ	G2	Organ	H2	63	0	6
				Key A	-			
				Key B	-			
1	7	FM Brass-DX EP	G2	Organ	-	63	0	7
				Key A	FM Brass			
				Key B	FM DX EP			
1	8	Super DX EP	G2	Organ	-	63	0	8
				Key A	FM DX EP			
				Key B	FM PF's Heart			
2	1	CFX2 Grand	G2	Organ	-	63	1	1
				Key A	CFX2			
				Key B	-			
2	2	Hamburg-AnaPad	G2	Organ	-	63	1	2
				Key A	Hamburg Grand			
				Key B	Analog Pad			
2	3	C7-Analog Pad	G2	Organ	-	63	1	3
				Key A	C7			
				Key B	Analog Pad			
2	4	FM EP-Pno Synth	G2	Organ	-	63	1	4
				Key A	FM Piano DA			
				Key B	Piano Synth			
2	5	Vintage 60-70s	G2	Organ	-	63	1	5
				Key A	67Rd Dark			
				Key B	74Rd Stage			
2	6	Retro Keys	G2	Organ	-	63	1	6
				Key A	Wr Wide			
				Key B	-			
2	7	70sTines-CF3-Or	G2	Organ	H4	63	1	7
				Key A	74Rd Stage			
				Key B	Live CF3			
2	8	Gospel Trio	G2	Organ	H4	63	1	8
				Key A	Live CF3			
				Key B	DX E. Piano 1			

YC88/YC73/YC61

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
19	1	CFX2	G2	Organ	-	63	18	1
				Key A	CFX2			
				Key B	-			
19	2	CFX2/EP	G2	Organ	-	63	18	2
				Key A	CFX2			
				Key B	78Rd			
19	3	CFX2 Cinema	G2	Organ	-	63	18	3
				Key A	CFX2			
				Key B	Slow Strings			
19	4	GS E.Piano	G2	Organ	-	63	18	4
				Key A	GS E.Piano M			
				Key B	-			
19	5	GS Church	G2	Organ	H4	63	18	5
				Key A	GS PipeOrgan			
				Key B	GS PipeOrgan			
19	6	GS Spit Brass	G2	Organ	-	63	18	6
				Key A	GS Brass			
				Key B	GS Brass			
19	7	Double Pad	G2	Organ	-	63	18	7
				Key A	FM Saw Pad			
				Key B	Analog Pad			
19	8	Wet Sweep	G2	Organ	-	63	18	8
				Key A	Mystic Pad			
				Key B	FM FrnchTines			

Новый тембр

YC88/YC73/YC61 V2.00


Section	Category	Sub Category	No.	Name	Parameter Value (*)
Keys A/B	Piano	Grand	7	CFX2	192
	Synth	VintageFM	91	GS A.Piano	193
			92	GS E.Piano M	194
			93	GS E.Piano W	195
			94	GS Harpsi	196
			95	GS Brass	197
			96	GS Vibe	198
			97	GS Celeste	199
			98	GS PipeOrgan	200

Обновление Data List (Перечень данных)

Обновлен Data List (Перечень данных).

MIDI Data Format

(4) SYSTEM OVERVIEW (Keyboard and Tone Generator)

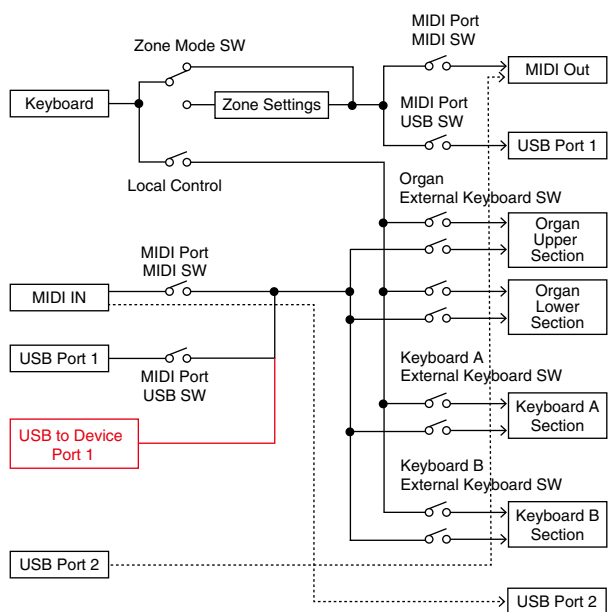

USB Port 2 is enabled when 'MIDI Port MIDI SW = OFF' and 'MIDI Port USB SW = ON'

ALL SOUND OFF clears all the sounds in the specific channel(s) played by both the keyboard and the data via MIDI.
ALL NOTES OFF received via MIDI clears the sounds in the specific channel(s) played via MIDI.

USB to Device Port 1 is only for receiving data, not for transmitting.

MIDI Data Table (YC61)

Выделенные цветом части () — это те, которые были добавлены или изменены по сравнению с предыдущими версиями.

Bank Select

MSB		LSB		Program No.	Type	Memory	Description
DEC	HEX	DEC	HEX				
63	3F	0	00	0 – 7	Live Set Sound	User	Live Set Page 1
		1	01	0 – 7		User	Live Set Page 2
		2	02	0 – 7		User	Live Set Page 3
		3	03	0 – 7		User	Live Set Page 4
		4	04	0 – 7		User	Live Set Page 5
		5	05	0 – 7		User	Live Set Page 6
		6	06	0 – 7		User	Live Set Page 7
		7	07	0 – 7		User	Live Set Page 8
		8	08	0 – 7		User	Live Set Page 9
		9	09	0 – 7		User	Live Set Page 10
		10	0A	0 – 7		User	Live Set Page 11
		11	0B	0 – 7		User	Live Set Page 12
		12	0C	0 – 7		User	Live Set Page 13
		13	0D	0 – 7		User	Live Set Page 14
		14	0E	0 – 7		User	Live Set Page 15
		15	0F	0 – 7		User	Live Set Page 16
		16	10	0 – 7		User	Live Set Page 17
		17	11	0 – 7		User	Live Set Page 18
		18	12	0 – 7		User	Live Set Page 19
		19	13	0 – 7		User	Live Set Page 20
		20	14	0 – 7		User	Live Set Page 21
		21	15	0 – 7		User	Live Set Page 22
		22	16	0 – 7		User	Live Set Page 23
		23	17	0 – 7		User	Live Set Page 24
		24	18	0 – 7		User	Live Set Page 25
		25	19	0 – 7		User	Live Set Page 26
		26	1A	0 – 7		User	Live Set Page 27
		27	1B	0 – 7		User	Live Set Page 28
		28	1C	0 – 7		User	Live Set Page 29
		29	1D	0 – 7		User	Live Set Page 30
		30	1E	0 – 7		User	Live Set Page 31
		31	1F	0 – 7		User	Live Set Page 32
		32	20	0 – 7		User	Live Set Page 33
		33	21	0 – 7		User	Live Set Page 34
		34	22	0 – 7		User	Live Set Page 35
		35	23	0 – 7		User	Live Set Page 36
		36	24	0 – 7		User	Live Set Page 37
		37	25	0 – 7		User	Live Set Page 38
		38	26	0 – 7		User	Live Set Page 39
		39	27	0 – 7		User	Live Set Page 40

Parameter Base Address

Group Number = 7F 1C, Model ID = 09

Parameter Block	Top Address			Description
	High	Mid	Low	
System	20	00	00	System
	20	40	00	Master EQ
	00	7F	00	Soundmondo Format Version
BULK CONTROL	0E	00	00	Header
	0F	00	00	Footer
STORE TO FLASH	0D	00	00	Store To Flash
Live Set Sound	46	00	00	Common
Zone	4A	zz	00	Zone (zz: 00 – 03)
Organ Section	50	00	00	Common
	50	1p	00	Part (p: 0 – 1 (0: UPPER, 1: LOWER))
Keys Sections	60	0s	00	Section (s: 0 – 1 (0: A, 1: B))

Bulk Dump Block

"Top Address" indicates the top address of each block designated by the bulk dump operation. "Byte Count" indicates the data size contained in each block designated by the bulk dump operation.

The block from the Bulk Header to the Bulk Footer of the Live Set Sound can be received regardless of their order; however, they cannot be received if an irrelevant Block is included. To execute 1 Live Set Sound bulk dump request, designate its corresponding Bulk Header address.

For information about "pp" and "n" shown in the following list, refer to the MIDI PARAMETER CHANGE TABLE (BULK CONTROL).

Group Number = 7F 1C, Model ID = 09

Parameter Block	Description	Byte Count		Top Address		
		DEC	HEX	High	Mid	Low
System	System	49	31	20	00	00
	Master EQ	20	14	20	40	00
Live Set Sound	Bulk Header	0	00	0E	pp	0n
	Soundmondo Format Version	4	04	00	7F	00
	Master EQ	20	14	20	40	00
	Common	1	01	46	00	00
	Zone	Zone 1	16	10	4A	00
		:			:	
		Zone 4				03
	Organ Section	Organ Section Common	36	24	50	00
		Organ Section Part Upper	20	14	50	10
		Organ Section Part Lower	20	14	50	11
	Keys Sections	Key A Section	58	3A	60	00
		Key B Section	58	3A		01
		Bulk Footer	0	00	0F	pp

Message Type	Data
Parameter Change	F0, 43, 1n, gh, gl, id, ah, am, al, dt, ... F7
Parameter Request	F0, 43, 3n, gh, gl, id, ah, am, al F7
Bulk Dump	F0, 43, 0n, gh, gl, bh, bl, id, ah, am, al, dt, ..., cc, F7
Bulk Request	F0, 43, 2n, gh, gl, id, ah, am, al, F7

n: Device Number
gh: Group Number High
gl: Group Number Low
bh: Byte Count High
bl: Byte Count Low
id: Model ID
ah: Parameter Address High
am: Parameter Address Middle
al: Parameter Address Low
dt: Data
cc: Data Checksum

MIDI PARAMETER CHANGE TABLE (BULK CONTROL)

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range (HEX)	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
0E	pp	0n	1	-	Bulk Header	Live Set Sound User (pp = 0 – 39, n = 0 – 7)	-	
	7F	00	1	-		Current Sound Buffer	-	
0F	pp	0n	1	-	Bulk Footer	Live Set Sound User (pp = 0 – 39, n = 0 – 7)	-	
	7F	00	1	-		Current Sound Buffer	-	

Address			Size	Data Range	Parameter Name	Description	Default (HEX) YC61	Notes
High	Mid	Low						
		2A	1	00 – 27	Power On Page	1 – 40	00	
		2B	1	00 – 07	Power On Sound	1 – 8	00	
		2C	1	00 – 79	FS Control Number	Off, 1 – 119, 120 (Live Set +), 121 (Live Set -)	78	
		2D	1	00 – 01	EG/Filter Reset	Off, On	01	
		2E	1		reserved			
		2F	1	00 – 7F	USB Audio Volume	0 – 127	40	
		30	1	00 – 02	Sustain Pedal Select	FC3A (Half On), FC3A (Half Off), FC4A/5	00	

TOTAL SIZE = 49 31 (HEX)

SYSTEM

System Common

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range	Parameter Name	Description	Default (HEX) YC61	Notes
High	Mid	Low						
20	00	00	1		reserved			
		01	1		reserved			
		02	4	00 – 00 00 – 07 00 – 0F 00 – 0F	Master Tune	414.72 – 466.78 [Hz] 1st bit3-0: bit15-12 2nd bit3-0: bit11-8 3rd bit3-0: bit 7-4 4th bit3-0: bit 3-0	00 04 00 00	
		06	1	3D – 43	Keyboard Octave Shift	-3 – 0 – +3	40	
		07	1	34 – 4C	Keyboard Transpose	-12 – +12 [semitones]	40	
		08	1	00 – 01	Controller Reset	Hold, Reset	01	
		09	1	00 – 01	Local Control	Off, On	01	
		0A	1	00 – 0F, 7F	Tx Channel	1 – 16, Off	00	
		0B	1	00 – 10	Rx Channel	1 – 16, All	00	
		0C	1	00 – 03	MIDI Control	Off, On, Invert	00	
		0D	1	00 – 01	Section SW Mode	Realtime, Next-Key	00	
		0E	1	38 – 48	Output Gain	-24 – 0 – +24 [dB]	40	In 3 dB increments
		0F	1		reserved			
		10	1	00 – 04	Keyboard Touch Curve	Normal, Soft, Hard, Wide, Fixed	00	
		11	1	01 – 7F	Keyboard Fixed Velocity	1 – 127	40	
		12	1	00 – 01	Transmit/Receive Bank Select	Off, On	01	
		13	1	00 – 01	Transmit/Receive Program Change	Off, On	01	
		14	1		reserved			
		15	1	00 – 01	MIDI In/Out	Off, On	01	
		16	1	00 – 01	USB In/Out	Off, On	01	
		17	1		reserved			
		18	1		reserved			
		19	1	00 – 01	Display Lights Section	Off, On	01	
		1A	1	00 – 01	Display Lights Ins Effect	Off, On	01	
		1B	1	00 – 01	Display Lights LCD	Off, On	01	
		1C	1		reserved			
		1D	1		reserved			
		1E	1	00 – 01	Value Indication	Off, On	01	
		1F	1	00 – 01	Drawbar Mode	Jump, Catch	00	
		20	1	00 – 01	SW Direction	Default, Reverse	00	
		21	1		reserved			
		22	1	00 – 3F	LCD Contrast	1 – 63	20	
		23	1	00 – 01	Panel Lock Live Set	Off, On	01	
		24	1	00 – 01	Panel Lock Organ/Keys	Off, On	01	
		25	1	00 – 01	Panel Lock Effect/Sp Amp/Reverb	Off, On	01	
		26	1	00 – 01	Panel Lock Master EQ	Off, On	01	
		27	1	00 – 01	Rotary Speaker Speed	Change, Hold	00	
		28	1	00 – 01	Section Hold	Disable, Enable	00	
		29	1	00 – 01	Live Set View Mode	Close, Keep	00	

System MEQ

Address			Size	Data Range	Parameter Name	Description	Default (HEX) YC61	Notes
High	Mid	Low						
20	40	00	1	34 – 4C	Low Gain	-12dB – +12dB	40	
		01	1		reserved			
		02	1		reserved			
		03	1		reserved			
		04	1		reserved			
		05	1		reserved			
		06	1		reserved			
		07	1		reserved			
		08	1	34 – 4C	Mid Gain	-12dB – +12dB	40	
		09	1	0E – 36	Mid Frequency	100Hz – 10kHz	1C	
		0A	1		reserved			
		0B	1		reserved			
		0C	1		reserved			
		0D	1		reserved			
		0E	1		reserved			
		0F	1		reserved			
		10	1	34 – 4C	High Gain	-12dB – +12dB	40	
		11	1		reserved			
		12	1		reserved			
		13	1	00 – 01	EQ On/Off	Off, On	01	

TOTAL SIZE = 20 14 (HEX)

Soundmondo Format Version

Address			Size	Data Range	Parameter Name	Description	Default (HEX) YC61	Notes
High	Mid	Low						
00	7F	00	1	00 – 7F	Soundmondo Format Version Major		01	
			1	00 – 7F	Soundmondo Format Version Minor		01	
			1	00 – 7F	Soundmondo Format Version Bugfix		00	
			1		reserved		00	

TOTAL SIZE = 4 4 (HEX)

LIVE SET SOUND

Common

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range	Parameter Name	Description	Default (HEX) YC61	Notes
High	Mid	Low						
46	00	00	1	20 – 7F	Live Set Sound Name 1	32 – 127 (ASCII)	40	'I'
		01	1	20 – 7F	Live Set Sound Name 2	32 – 127 (ASCII)	6E	'n'
		02	1	20 – 7F	Live Set Sound Name 3	32 – 127 (ASCII)	69	'i'
		03	1	20 – 7F	Live Set Sound Name 4	32 – 127 (ASCII)	74	't'
		04	1	20 – 7F	Live Set Sound Name 5	32 – 127 (ASCII)	20	''
		05	1	20 – 7F	Live Set Sound Name 6	32 – 127 (ASCII)	53	'S'
		06	1	20 – 7F	Live Set Sound Name 7	32 – 127 (ASCII)	6F	'o'
		07	1	20 – 7F	Live Set Sound Name 8	32 – 127 (ASCII)	75	'u'
		08	1	20 – 7F	Live Set Sound Name 9	32 – 127 (ASCII)	6E	'n'
		09	1	20 – 7F	Live Set Sound Name 10	32 – 127 (ASCII)	64	'd'
		0A	1	20 – 7F	Live Set Sound Name 11	32 – 127 (ASCII)	20	
		0B	1	20 – 7F	Live Set Sound Name 12	32 – 127 (ASCII)	20	
		0C	1	20 – 7F	Live Set Sound Name 13	32 – 127 (ASCII)	20	
		0D	1	20 – 7F	Live Set Sound Name 14	32 – 127 (ASCII)	20	
		0E	1	20 – 7F	Live Set Sound Name 15	32 – 127 (ASCII)	20	
		0F	1	02	Bulk Format Version	2	02	
		10	1	00 – 01	Live Set EQ Mode Switch	Off, On	00	
		11	1	00 – 01	Zone Mode Switch	Off, On	00	
		12	1	00 – 01	Advanced Zone Mode Switch	Off, On	00	
		13	2	00 – 12 00 – 60	Tempo	42.0 – 240.0	0704	
		15	1	34 – 4C	Sound Transpose	-12 – +12	40	
		16	1	01 – 7F	Split Point	C#-2 – G8	37	
		17	1		reserved			
		18	1	00 – 01	Bend Lever Mode	Pitch Bend, Rotary S/F	00	
		19	1	00 – 3F, 41, 43 – 77	Modulation Lever Assign	Off, 1 – 63, 65, 67 – 119, 120 (USB Audio Volume)	01	Sustain (= 64), and Sostenuto (= 66) cannot be assigned
		1A	1	00 – 7F	Modulation Lever Limit Low	0 – 127	00	
		1B	1	00 – 7F	Modulation Lever Limit High	0 – 127	7F	
		1C	1	00 – 3F, 41, 43 – 78	FC1 Assign	Off, 1 – 63, 65, 67 – 119, 120 (USB Audio Volume)	0B	Sustain (= 64), and Sostenuto (= 66) cannot be assigned
		1D	1	00 – 7F	FC1 Limit Low	0 – 127	00	
		1E	1	00 – 7F	FC1 Limit High	0 – 127	7F	
		1F	1	00 – 3F, 41, 43 – 78	FC2 Assign	Off, 1 – 63, 65, 67 – 119, 120 (USB Audio Volume)	04	Sustain (= 64), and Sostenuto (= 66) cannot be assigned
		20	1	00 – 7F	FC2 Limit Low	0 – 127	00	
		21	1	00 – 7F	FC2 Limit High	0 – 127	7F	
		22	1	00 – 01	Sustain Pedal Mode	Sustain, Rotary S/F	00	
		23	1		reserved			
		24	1		reserved			
		25	1	00 – 02	Keys A/B Select	A, B, A+B	00	
		26	1	00 – 01	Reverb Switch	Off, On	00	
		27	1	00 – 03	Reverb Depth Knob Section Select	All, Organ, Keys A, Keys B	01	
		28	1		reserved			
		29	1		reserved			
		2A	1	00 – 01	Effect Switch	Off, On	00	

Address			Size	Data Range	Parameter Name	Description	Default (HEX) YC61	Notes
High	Mid	Low						
			2B	1	00 – 15, 17 – 1F, 21 – 25	Effect Type	*1	*2
			2C	1	00 – 02	Effect Section Select	Organ, Keys A, Keys B	00
			2D	1	00 – 7F	Effect Depth	0 – 127	40
			2E	1	00 – 7F	Effect Rate	0 – 127	40
			2F	1	00 – 0E	Effect Tempo Delay Time	1/32 Tri., 1/64 Dot., 1/32, 1/16 Tri., 1/32 Dot., 1/16, 1/8 Tri., 1/16 Dot., 1/8, 1/4 Tri., 1/8 Dot., 1/4, 1/2 Tri., 1/4 Dot., 1/2	0B
			30	1	00 – 01	Effect Looper Delay Rec Switch	Off, On	01
			31	1	00 – 01	Speaker/Amp Switch	Off, On	01
			32	1	00 – 05	Speaker/Amp Type	Rotary Speaker A, Rotary Speaker B, UK Lead, UK Crunch, US Double, US Case	00
			33	1	00 – 02	Speaker/Amp Section Select	Organ, Keys A, Keys B	00
			34	1	00 – 7F	Speaker/Amp Drive	0 – 127	40
			35	1	00 – 7F	Speaker/Amp Tone	0 – 127	40
			36	1	00 – 01	Rotary Speaker Slow/Fast	Slow, Fast	00
			37	1	00 – 01	Rotary Speaker Rotation Switch	Off, On	01
			38	1	00 – 7F	Rotary Speaker Horn Level	0 – 127	40
			39	1	00 – 7F	Rotary Speaker Rotor Level	0 – 127	40
			3A	1	01 – 7F	Rotary Speaker Horn Speed Fast	209.4 – 817.6 [rpm]	40
			3B	1	01 – 7F	Rotary Speaker Rotor Speed Fast	189.3 – 736.8 [rpm]	40
			3C	1	01 – 7F	Rotary Speaker Horn Speed Slow	23.0 – 89.6 [rpm]	40
			3D	1	01 – 7F	Rotary Speaker Rotor Speed Slow	22.7 – 88.3 [rpm]	40
			3E	1	0E – 7F	Rotary Speaker Horn Acceleration	0.21 – 1.00 – 2.00	53
			3F	1	0E – 7F	Rotary Speaker Rotor Acceleration	0.21 – 1.00 – 2.00	40
			40	1	0E – 7F	Rotary Speaker Horn Deceleration	0.21 – 1.00 – 2.00	53
			41	1	0E – 7F	Rotary Speaker Rotor Deceleration	0.21 – 1.00 – 2.00	40
			42	1	00 – 01	Rotary Speaker Stereo/Mono	Stereo, Mono	00
			43	1	00 – 01	Background Noise Switch	Off, On	01
			44	1	00 – 7F	Background Noise Level	0 – 127	40
			45	1	00 – 02	Rotary Speaker Slot A Type	Studio, Classic, Overdrive	00
			46	1	00 – 02	Rotary Speaker Slot B Type	Studio, Classic, Overdrive	01
			47	1		reserved		

TOTAL SIZE = 72 48 (HEX)

*1: G Chorus, SPX Chorus, Symphonic, 816 Chorus, VCM Flanger, Cross FB Flanger, VCM Stereo Phaser, Small Phaser, Max90, Dual Phaser, Tremolo, Auto Pan, Simple Rotary, British Combo, British Lead, Small Stereo, Compressor, Auto Wah, Touch Wah, Pedal Wah, Cross Delay, Tempo Delay, Analog Delay, Looper Delay, Room Reverb, Hall Reverb, Reverse Reverb, Lo-Fi, Ring Modulator, Slicer, LP Filter, Harmonic Enhancer, Tone Control, 1 Band EQ Narrow, 1 Band EQ Wide, GS1 Ensemble

*2: For the LED indication, refer to the Insertion Effect Type List in the YC61 Owner's Manual.

*3: Classic = Rotary Speaker A in the previous version
Overdrive = Rotary Speaker B in the previous version
When receiving MIDI bulk data of the previous version, "Classic" is set to Slot A Type while "Overdrive" is set to Slot B Type.

ZONE

Zone 1-4

zz: Zone Number, 00 – 03 (HEX)

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low					YC61	
4A	zz	00	1	00 – 01	Zone Switch	Off, On	00 – 01	With the default settings, only the Zone 1 is set to "on."
		01	1	00 – 0F	Transmit Channel	1 – 16	00 – 03	Default settings: Zone1(0), Zone2(1), Zone3(2), Zone4(3)
		02	1	3D – 43	Transpose (Octave)	-3 – +3	40	
		03	1	35 – 4B	Transpose (Semitone)	-11 – +11	40	
		04	1	00 – 7F	Note Limit Low	C-2 – G8	00	The upper limit will be determined with "Note Limit High."
		05	1	00 – 7F	Note Limit High	C-2 – G8	7F	The lower limit will be determined with "Note Limit Low."
		06	1		reserved			
		07	1	00 – 7F	MIDI Volume	0 – 127	7F	
		08	1	00 – 7F	MIDI Pan	L64 – C – R63	40	
		09	1	00 – 7F	MIDI Bank MSB	0 – 127	00	
		0A	1	00 – 7F	MIDI Bank LSB	0 – 127	00	
		0B	1	00 – 7F	MIDI Program Number	1 – 128	00	
		0C	1	00 – 1F	Transmit Bank Select Transmit Program Change Transmit Volume Transmit Pan Transmit Note	bit0: Off, On Bank Select bit1: Off, On Program Change bit2: Off, On Volume bit3: Off, On Pan bit4: Off, On Note	1F	CC#11 (Expression) will not be transmitted when the Volume is set to "off."
		0D	1	00 – 3F	Transmit PB Transmit Mod Transmit FC1 Transmit FC2 Transmit FS Transmit Sus	bit0: Off, On PB bit1: Off, On Mod bit2: Off, On FC1 bit3: Off, On FC2 bit4: Off, On FS bit5: Off, On Sus	3F	
		0E	1		reserved			
		0F	1		reserved			

TOTAL SIZE = 16 10 (HEX)

Organ Section

Organ Section Common

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low					YC61	
50	00	00	2	00 – 01 00 – 3E	Voice Number	H1, H2, H3, H4, F1, F2, F3, F4, F5, F6 1st bit6-0 → bit13-7 2nd bit6-0 → bit6-0	00 00	*3
		02	1	00 – 01	Section Switch	Off, On	01	
		03	1	00 – 01	Part Select	Upper, Lower	00	
		04	1	00 – 03	Split Mode	Off, L&U, Upper, Lower	00	
		05	1	00 – 7F	Section Volume	0 – 127	7F	
		06	1	00 – 7F	Pre Drive	0 – 127	00	
		07	1	01 – 7F	Pan	L63 – C – R63	40	
		08	1	28 – 58	Pitch Bend Range	-24 – 0 – +24	42	
		09	1	00 – 7F	Pitch Modulation Depth	0 – 127	0A	*1
		0A	1	00 – 7F	Pitch Modulation Speed	-64 – +63	40	*1
		0B	1	00 – 7F	Pitch Modulation Initial	0 – 127	00	*1

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low					YC61	
		0C	1	00 – 01	Receive Expression	Off, On	01	
		0D	1	00 – 01	Receive Sustain	Off, On	01	
		0E	1	00 – 01	Receive Sostenuto	Off, On	01	
		0F	1		reserved			
		10	1	00 – 04	External Keyboard	External + Internal, External Only, 2 manual (Upper), 2 manual (Lower), Off	00	
		11	1		reserved			
		12	1		reserved			
		13	1	00 – 01	Percussion Switch	Off, On	00	*2
		14	1	00 – 01	Percussion Type	3rd, 2nd	00	*2
		15	1	00 – 01	Percussion Decay	Slow, Fast	00	*2
		16	1	00 – 01	Percussion Volume	Soft, Normal	01	*2
		17	1	00 – 01	Percussion Link to 1feet	Off, On	01	*2
		18	1		reserved			
		19	1		reserved			
		1A	1	00 – 05	Vibrato/Chorus Type	V1, C1, V2, C2, V3, C3	05	
		1B	1		reserved			
		1C	1	00 – 7F	Leak Level	0 – 127	40	*2
		1D	1	00 – 7F	Key Click Level	0 – 127	40	*2
		1E	1		reserved			
		1F	1	00 – 01	Expression Type	Drive+Volume, Volume	00	*2
		20	1		reserved			
		21	1	00 – 02	FM Drawbar Color Type	1 Color, 2 Colors, 3 Colors	02	*1
		22	1		reserved			
		23	1	00 – 7F	Reverb Depth	0 – 127	00	

TOTAL SIZE = 36 24 (HEX)

*1: Effective only when the FM organ type (F1–F6) is selected.

*2: Effective only when the VCM organ type (H1–H4) is selected.

*3: 0 = H1, 1 = H2, 2 = H3, 190 = H4, 3 = F1, 4 = F2, 5 = F3, 149 = F4, 150 = F5, 151 = F6

Organ Section Part Upper/Lower

p: Part number, 0-1 (0: Upper, 1: Lower)

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low					YC61	
50	1p	00	1		reserved			
		01	1		reserved			
		02	1	3E – 42	Octave Shift	-2 – 0 – +2	40	
		03	1		reserved			
		04	1	00 – 7F	Drawbar 16'	0 – 127	7F	Correspondence between drawbar position and parameter value 0: 0 1: 1 - 18 2: 19 - 36 3: 37 - 54 4: 55 - 72 5: 73 - 90 6: 91 - 108 7: 109 - 126 8: 127
		05	1	00 – 7F	Drawbar 5 1/3'	0 – 127	7F	
		06	1	00 – 7F	Drawbar 8'	0 – 127	7F	
		07	1	00 – 7F	Drawbar 4'	0 – 127	00	
		08	1	00 – 7F	Drawbar 2 2/3'	0 – 127	00	
		09	1	00 – 7F	Drawbar 2'	0 – 127	00	
		0A	1	00 – 7F	Drawbar 1 3/5'	0 – 127	00	
		0B	1	00 – 7F	Drawbar 1 1/3'	0 – 127	00	
		0C	1	00 – 7F	Drawbar 1'	0 – 127	00	
		0D	1	00 – 06	Drawbar Color	1: White, 2: Red, 3: Yellow, 4: Green, 5: Cyan, 6: Blue, 7: Magenta	00	
		0E	1		reserved			
		0F	1		reserved			
		10	1		reserved			
		11	1		reserved			
		12	1	00 – 01	Vibrato/Chorus Switch	Off, On	00	*1
		13	1		reserved			

TOTAL SIZE = 20 14 (HEX)

*1: When an FM Voice (F1–F6) is selected, Upper and Lower are linked with the same setting.

Keys Sections

Key A/Key B Section

s: Section number, 0-1 (0: A, 1: B)

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range	Parameter Name	Description	Default (HEX) YC61	Notes
High	Mid	Low						
60	0s	00	1	00 – 03	Current Category	Piano, E.Piano, Synth, Others	A: 00, B: 02	
		01	2	00 – 01 06 – 3F	Category 1 Voice Number	6 – 13, 145, 146, 152, 153, 189, 191 1st bit6-0 → bit13-7 2nd bit6-0 → bit6-0	00 06	
		03	2	00 – 01 0E – 1F	Category 2 Voice Number	14 – 31, 147, 148, 157 1st bit6-0 → bit13-7 2nd bit6-0 → bit6-0	00 0E	
		05	2	00 – 01 1E – 5A	Category 3 Voice Number	32 – 90, 158 – 188, 192 – 199 1st bit6-0 → bit13-7 2nd bit6-0 → bit6-0	00 20	
		07	2	00 – 01 00 – 7F	Category 4 Voice Number	90 – 144, 154 – 156 1st bit6-0 → bit13-7 2nd bit6-0 → bit6-0	00 5B	
		09	1	02	Bulk Format Version	2	02	
		0A	1	00 – 01	Section Switch	Off, On	00	
		0B	1	00 – 02	Split Mode	L&R, L, R	00	
		0C	1	3E – 42	Octave Shift	-2 – 0 – +2	40	
		0D	1	01 – 7F	Pan	L63 – C – R63	40	
		0E	1	00 – 7F	Section Volume	0 – 127	7F	
		0F	1	00 – 7F	Tone	0 – 127	40	
		10	1	00 – 01	EG/Filter Select	EG, Filter	00	
		11	1	00 – 7F	EG	0 – 127	40	
		12	1	00 – 0A	EG Control	Atk&Dcy&Rls A, Atk&Dcy&Rls B, Attack, Decay, Release, Atk&Rls A, Atk&Rls B, Atk&Rls Minus, Dcy&Rls, Atk&Dcy A, Atk&Dcy B	00	
		13	1	00 – 7F	Filter	0 – 127	40	
		14	1	00 – 06	Filter Control	Flat Reso, Reso Plus, Reso Minus A, Reso Minus B, Reso Minus C, Reso Boost A, Reso Boost B	00	
		15	1	00 – 7F	Touch Sensitivity Depth	-64 – +63	40	
		16	1	00 – 7F	Touch Sensitivity Offset	-64 – +63	40	
		17	1	00 – 02	FM Unison	Off, 2 Unison, 4 Unison	00	*1
		18	1	00 – 0F	FM Detune	0 – 15	00	*1
		19	1	00 – 0F	FM Spread	0 – 15	00	*1
		1A	1		reserved			
		1B	1		reserved			
		1C	1	00 – 01	Mono/Poly	Mono, Poly	01	
		1D	1	00 – 01	Portamento Switch	Off, On	00	*2
		1E	1	00 – 7F	Portamento Time	0 – 127	40	*2
		1F	1	00 – 01	Portamento Mode	Fingered, Full-time	01	*2
		20	1	00 – 01	Portamento Time Mode	Rate, Time	00	*2
		21	1	28 – 58	Pitch Bend Range	-24 – 0 – +24	42	
		22	1	00 – 7F	Pitch Modulation Depth	0 – 127	0A	
		23	1	00 – 7F	Pitch Modulation Speed	-64 – +63	40	
		24	1	00 – 7F	Pitch Modulation Initial	0 – 127	00	
		25	1		reserved			
		26	1	00 – 01	Receive Expression	Off, On	01	
		27	1	00 – 01	Receive Sustain	Off, On	01	
		28	1	00 – 01	Receive Sostenuto	Off, On	01	
		29	1	00 – 01	Receive Soft	Off, On	01	
		2A	1	00 – 02	External Keyboard	External + Internal, External Only, Off	00	
		2B	1		reserved			
		2C	1		reserved			
		2D	1	00 – 01	Effect 1 Switch	Off, On	00	
		2E	1	00 – 14, 16 – 17, 19 – 25	Effect 1 Type	*3	00	*4
		2F	1	00 – 7F	Effect 1 Depth	0 – 127	40	
		30	1	00 – 7F	Effect 1 Rate	0 – 127	40	

Address			Size	Data Range	Parameter Name	Description	Default (HEX) YC61	Notes
High	Mid	Low						
		31	1	00 – 01	Effect 2 Switch	Off, On	00	
		32	1	00 – 14, 16 – 17, 19 – 25	Effect 2 Type	*3	00	*4
		33	1	00 – 7F	Effect 2 Depth	0 – 127	40	
		34	1	00 – 7F	Effect 2 Speed	0 – 127	40	
		35	1		reserved			
		36	1		reserved			
		37	1		reserved			
		38	1		reserved			
		39	1	00 – 7F	Reverb Depth	0 – 127	00	

TOTAL SIZE = 58 3A (HEX)

*1: Available only when an FM Voice is selected.

*2: Available only when the Mono/Poly parameter is set to "Mono."

*3: G Chorus, SPX Chorus, Symphonic, 816 Chorus, VCM Flanger, Cross FB Flanger, VCM Stereo Phaser, Small Phaser, Max90, Dual Phaser, Tremolo, Auto Pan, Simple Rotary, British Combo, British Lead, Small Stereo, Compressor, Auto Wah, Touch Wah, Pedal Wah, Cross Delay, Digital Delay, Analog Delay, Room Reverb, Hall Reverb, Reverse Reverb, Lo-Fi, Ring Modulator, Slicer, LP Filter, Damper Resonance, Harmonic Enhancer, **Tone Control, 1 Band EQ Narrow, 1 Band EQ Wide, GS1 Ensemble**

*4: For the LED indication, refer to the Insertion Effect Type List in the YC61 Owner's Manual.

MIDI Data Table (YC88/YC73)

Выделенные цветом части () — это те, которые были добавлены или изменены по сравнению с предыдущими версиями.

Bank Select

MSB		LSB		Program No.	Type	Memory	Description
DEC	HEX	DEC	HEX				
63	3F	0	00	0–7	Live Set Sound	User	Live Set Page 1
		1	01	0–7		User	Live Set Page 2
		2	02	0–7		User	Live Set Page 3
		3	03	0–7		User	Live Set Page 4
		4	04	0–7		User	Live Set Page 5
		5	05	0–7		User	Live Set Page 6
		6	06	0–7		User	Live Set Page 7
		7	07	0–7		User	Live Set Page 8
		8	08	0–7		User	Live Set Page 9
		9	09	0–7		User	Live Set Page 10
		10	0A	0–7		User	Live Set Page 11
		11	0B	0–7		User	Live Set Page 12
		12	0C	0–7		User	Live Set Page 13
		13	0D	0–7		User	Live Set Page 14
		14	0E	0–7		User	Live Set Page 15
		15	0F	0–7		User	Live Set Page 16
		16	10	0–7		User	Live Set Page 17
		17	11	0–7		User	Live Set Page 18
		18	12	0–7		User	Live Set Page 19
		19	13	0–7		User	Live Set Page 20
		20	14	0–7		User	Live Set Page 21
		21	15	0–7		User	Live Set Page 22
		22	16	0–7		User	Live Set Page 23
		23	17	0–7		User	Live Set Page 24
		24	18	0–7		User	Live Set Page 25
		25	19	0–7		User	Live Set Page 26
		26	1A	0–7		User	Live Set Page 27
		27	1B	0–7		User	Live Set Page 28
		28	1C	0–7		User	Live Set Page 29
		29	1D	0–7		User	Live Set Page 30
		30	1E	0–7		User	Live Set Page 31
		31	1F	0–7		User	Live Set Page 32
		32	20	0–7		User	Live Set Page 33
		33	21	0–7		User	Live Set Page 34
		34	22	0–7		User	Live Set Page 35
		35	23	0–7		User	Live Set Page 36
		36	24	0–7		User	Live Set Page 37
		37	25	0–7		User	Live Set Page 38
		38	26	0–7		User	Live Set Page 39
		39	27	0–7		User	Live Set Page 40

Parameter Base Address

Group Number = 7F 1C, Model ID = 09

Parameter Block	Top Address			Description
	High	Mid	Low	
System	20	00	00	System
	20	40	00	Master EQ
	00	7F	00	Soundmondo Format Version
BULK CONTROL	0E	00	00	Header
	0F	00	00	Footer
STORE TO FLASH	0D	00	00	Store To Flash
Live Set Sound	46	00	00	Common
Zone	4A	zz	00	Zone (zz: 00–03)
Organ Section	50	00	00	Common
	50	1p	00	Part (p: 0–1 (0: UPPER, 1: LOWER))
Keys Sections	60	0s	00	Section (s: 0–1 (0: A, 1: B))

Bulk Dump Block

"Top Address" indicates the top address of each block designated by the bulk dump operation. "Byte Count" indicates the data size contained in each block designated by the bulk dump operation.

The block from the Bulk Header to the Bulk Footer of the Live Set Sound can be received regardless of their order; however, they cannot be received if an irrelevant Block is included. To execute 1 Live Set Sound bulk dump request, designate its corresponding Bulk Header address.

For information about "pp" and "n" shown in the following list, refer to the MIDI PARAMETER CHANGE TABLE (BULK CONTROL).

Group Number = 7F 1C, Model ID = 09

Parameter Block	Description	Byte Count		Top Address		
		DEC	HEX	High	Mid	Low
System	System	49	31	20	00	00
	Master EQ	20	14	20	40	00
Live Set Sound	Bulk Header	0	00	0E	pp	0n
	Soundmondo Format Version	4	04	00	7F	00
	Master EQ	20	14	20	40	00
	Common	1	01	46	00	00
	Zone	Zone 1	16	10	4A	00
		:			:	
		Zone 4				03
	Organ Section	Organ Section Common	36	24	50	00
		Organ Section Part Upper	20	14	50	10
		Organ Section Part Lower	20	14	50	11
	Keys Sections	Key A Section	58	3A	60	00
		Key B Section	58	3A		01
		Bulk Footer	0	00	0F	pp

Message Type	Data
Parameter Change	F0, 43, 1n, gh, gl, id, ah, am, al, dt, ... F7
Parameter Request	F0, 43, 3n, gh, gl, id, ah, am, al F7
Bulk Dump	F0, 43, 0n, gh, gl, bh, bl, id, ah, am, al, dt, ..., cc, F7
Bulk Request	F0, 43, 2n, gh, gl, id, ah, am, al, F7

n: Device Number
gh: Group Number High
gl: Group Number Low
bh: Byte Count High
bl: Byte Count Low
id: Model ID
ah: Parameter Address High
am: Parameter Address Middle
al: Parameter Address Low
dt: Data
cc: Data Checksum

MIDI PARAMETER CHANGE TABLE (BULK CONTROL)

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range (HEX)	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
0E	pp	0n	1	-	Bulk Header	Live Set Sound User (pp = 0 – 39, n = 0 – 7)	-	
	7F	00	1	-		Current Sound Buffer	-	
0F	pp	0n	1	-	Bulk Footer	Live Set Sound User (pp = 0 – 39, n = 0 – 7)	-	
	7F	00	1	-		Current Sound Buffer	-	

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
		2B	1	00 – 07	Power On Sound	1 – 8	00	
		2C	1	00 – 79	FS Control Number	Off, 1 – 119, 120 (Live Set +), 121 (Live Set -)	78	
		2D	1	00 – 01	EG/Filter Reset	Off, On	01	
		2E	1		reserved			
		2F	1	00 – 7F	USB Audio Volume	0 – 127	40	
		30	1	00 – 02	Sustain Pedal Select	FC3A (Half On), FC3A (Half Off), FC4A/5	00	

TOTAL SIZE = 49 31 (HEX)

SYSTEM

System Common

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
20	00	00	1		reserved			
		01	1		reserved			
		02	4	00 – 00 00 – 07 00 – 0F 00 – 0F	Master Tune	414.72 – 466.78 [Hz] 1st bit3-0: bit15-12 2nd bit3-0: bit11-8 3rd bit3-0: bit 7-4 4th bit3-0: bit 3-0	00 04 00 00	
		06	1	3D – 43	Keyboard Octave Shift	-3 – 0 – +3	40	
		07	1	34 – 4C	Keyboard Transpose	-12 – +12 [semitones]	40	
		08	1	00 – 01	Controller Reset	Hold, Reset	01	
		09	1	00 – 01	Local Control	Off, On	01	
		0A	1	00 – 0F, 7F	Tx Channel	1 – 16, Off	00	
		0B	1	00 – 10	Rx Channel	1 – 16, All	00	
		0C	1	00 – 03	MIDI Control	Off, On, Invert	00	
		0D	1	00 – 01	Section SW Mode	Realtime, Next-Key	00	
		0E	1	38 – 48	Output Gain	-24 – 0 – +24 [dB]	40	In 3 dB increments
		0F	1		reserved			
		10	1	00 – 04	Keyboard Touch Curve	Normal, Soft, Hard, Wide, Fixed	00	
		11	1	01 – 7F	Keyboard Fixed Velocity	1 – 127	40	
		12	1	00 – 01	Transmit/Receive Bank Select	Off, On	01	
		13	1	00 – 01	Transmit/Receive Program Change	Off, On	01	
		14	1		reserved			
		15	1	00 – 01	MIDI In/Out	Off, On	01	
		16	1	00 – 01	USB In/Out	Off, On	01	
		17	1		reserved			
		18	1		reserved			
		19	1	00 – 01	Display Lights Section	Off, On	01	
		1A	1	00 – 01	Display Lights Ins Effect	Off, On	01	
		1B	1	00 – 01	Display Lights LCD	Off, On	01	
		1C	1		reserved			
		1D	1		reserved			
		1E	1	00 – 01	Value Indication	Off, On	01	
		1F	1	00 – 01	Drawbar Mode	Jump, Catch	00	
		20	1	00 – 01	SW Direction	Default, Reverse	00	
		21	1		reserved			
		22	1	00 – 3F	LCD Contrast	1 – 63	20	
		23	1	00 – 01	Panel Lock Live Set	Off, On	01	
		24	1	00 – 01	Panel Lock Organ/Keys	Off, On	01	
		25	1	00 – 01	Panel Lock Effect/Sp Amp/Reverb	Off, On	01	
		26	1	00 – 01	Panel Lock Master EQ	Off, On	01	
		27	1	00 – 01	Rotary Speaker Speed	Change, Hold	00	
		28	1	00 – 01	Section Hold	Disable, Enable	00	
		29	1	00 – 01	Live Set View Mode	Close, Keep	00	
		2A	1	00 – 27	Power On Page	1 – 40	00	

System MEQ

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
20	40	00	1	34 – 4C	Low Gain	-12dB – +12dB	40	
		01	1		reserved			
		02	1		reserved			
		03	1		reserved			
		04	1		reserved			
		05	1		reserved			
		06	1		reserved			
		07	1		reserved			
		08	1	34 – 4C	Mid Gain	-12dB – +12dB	40	
		09	1	0E – 36	Mid Frequency	100Hz – 10kHz	1C	
		0A	1		reserved			
		0B	1		reserved			
		0C	1		reserved			
		0D	1		reserved			
		0E	1		reserved			
		0F	1		reserved			
		10	1	34 – 4C	High Gain	-12dB – +12dB	40	
		11	1		reserved			
		12	1		reserved			
		13	1	00 – 01	EQ On/Off	Off, On	01	

TOTAL SIZE = 20 14 (HEX)

Soundmondo Format Version

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
00	7F	00	1	00 – 7F	Soundmondo Format Version Major		01	
			1	00 – 7F	Soundmondo Format Version Minor		01	
			1	00 – 7F	Soundmondo Format Version Bugfix		00	
			1		reserved		00	

TOTAL SIZE = 4 4 (HEX)

LIVE SET SOUND

Common

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
46	00	00	1	20 – 7F	Live Set Sound Name 1	32 – 127 (ASCII)	40	'i'
		01	1	20 – 7F	Live Set Sound Name 2	32 – 127 (ASCII)	6E	'n'
		02	1	20 – 7F	Live Set Sound Name 3	32 – 127 (ASCII)	69	'i'
		03	1	20 – 7F	Live Set Sound Name 4	32 – 127 (ASCII)	74	't'
		04	1	20 – 7F	Live Set Sound Name 5	32 – 127 (ASCII)	20	''
		05	1	20 – 7F	Live Set Sound Name 6	32 – 127 (ASCII)	53	'S'
		06	1	20 – 7F	Live Set Sound Name 7	32 – 127 (ASCII)	6F	'o'
		07	1	20 – 7F	Live Set Sound Name 8	32 – 127 (ASCII)	75	'u'
		08	1	20 – 7F	Live Set Sound Name 9	32 – 127 (ASCII)	6E	'n'
		09	1	20 – 7F	Live Set Sound Name 10	32 – 127 (ASCII)	64	'd'
		0A	1	20 – 7F	Live Set Sound Name 11	32 – 127 (ASCII)	20	
		0B	1	20 – 7F	Live Set Sound Name 12	32 – 127 (ASCII)	20	
		0C	1	20 – 7F	Live Set Sound Name 13	32 – 127 (ASCII)	20	
		0D	1	20 – 7F	Live Set Sound Name 14	32 – 127 (ASCII)	20	
		0E	1	20 – 7F	Live Set Sound Name 15	32 – 127 (ASCII)	20	
		0F	1	02	Bulk Format Version	2	02	
		10	1	00 – 01	Live Set EQ Mode Switch	Off, On	00	
		11	1	00 – 01	Zone Mode Switch	Off, On	00	
		12	1	00 – 01	Advanced Zone Mode Switch	Off, On	00	
		13	2	00 – 12 00 – 60	Tempo	42.0 – 240.0	0704	
		15	1	34 – 4C	Sound Transpose	-12 – +12	40	
		16	1	01 – 7F	Split Point	C#-2 – G8	37	
		17	1		reserved			
		18	1	00 – 01	Bend Lever Mode	Pitch Bend, Rotary S/F	00	
		19	1	00 – 3F, 41, 43 – 77	Modulation Lever Assign	Off, 1 – 63, 65, 67 – 119, 120 (USB Audio Volume)	01	Sustain (= 64), and Sostenuato (= 66) cannot be assigned
		1A	1	00 – 7F	Modulation Lever Limit Low	0 – 127	00	
		1B	1	00 – 7F	Modulation Lever Limit High	0 – 127	7F	
		1C	1	00 – 3F, 41, 43 – 78	FC1 Assign	Off, 1 – 63, 65, 67 – 119, 120 (USB Audio Volume)	0B	Sustain (= 64), and Sostenuato (= 66) cannot be assigned
		1D	1	00 – 7F	FC1 Limit Low	0 – 127	00	
		1E	1	00 – 7F	FC1 Limit High	0 – 127	7F	
		1F	1	00 – 3F, 41, 43 – 78	FC2 Assign	Off, 1 – 63, 65, 67 – 119, 120 (USB Audio Volume)	04	Sustain (= 64), and Sostenuato (= 66) cannot be assigned
		20	1	00 – 7F	FC2 Limit Low	0 – 127	00	
		21	1	00 – 7F	FC2 Limit High	0 – 127	7F	
		22	1	00 – 01	Sustain Pedal Mode	Sustain, Rotary S/F	00	
		23	1		reserved			
		24	1		reserved			
		25	1	00 – 02	Keys A/B Select	A, B, A+B	00	
		26	1	00 – 01	Reverb Switch	Off, On	01	
		27	1	00 – 03	Reverb Depth Knob Section Select	All, Organ, Keys A, Keys B	00	
		28	1		reserved			
		29	1		reserved			
		2A	1	00 – 01	Effect Switch	Off, On	00	

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
		2B	1	00 – 15, 17 – 1F, 21 – 25	Effect Type	*1	00	*2
		2C	1	00 – 02	Effect Section Select	Organ, Keys A, Keys B	01	
		2D	1	00 – 7F	Effect Depth	0 – 127	40	
		2E	1	00 – 7F	Effect Rate	0 – 127	40	
		2F	1	00 – 0E	Effect Tempo Delay Time	1/32 Tri., 1/64 Dot., 1/32, 1/16 Tri., 1/32 Dot., 1/16, 1/8 Tri., 1/16 Dot., 1/8, 1/4 Tri., 1/8 Dot., 1/4, 1/2 Tri., 1/4 Dot., 1/2	0B	
		30	1	00 – 01	Effect Looper Delay Rec Switch	Off, On	01	
		31	1	00 – 01	Speaker/Amp Switch	Off, On	00	
		32	1	00 – 05	Speaker/Amp Type	Rotary Speaker A, Rotary Speaker B, UK Lead, UK Crunch, US Double, US Case	00	
		33	1	00 – 02	Speaker/Amp Section Select	Organ, Keys A, Keys B	01	
		34	1	00 – 7F	Speaker/Amp Drive	0 – 127	40	
		35	1	00 – 7F	Speaker/Amp Tone	0 – 127	40	
		36	1	00 – 01	Rotary Speaker Slow/Fast	Slow, Fast	00	
		37	1	00 – 01	Rotary Speaker Rotation Switch	Off, On	01	
		38	1	00 – 7F	Rotary Speaker Horn Level	0 – 127	40	
		39	1	00 – 7F	Rotary Speaker Rotor Level	0 – 127	40	
		3A	1	01 – 7F	Rotary Speaker Horn Speed Fast	209.4 – 817.6 [rpm]	40	
		3B	1	01 – 7F	Rotary Speaker Rotor Speed Fast	189.3 – 736.8 [rpm]	40	
		3C	1	01 – 7F	Rotary Speaker Horn Speed Slow	23.0 – 89.6 [rpm]	40	
		3D	1	01 – 7F	Rotary Speaker Rotor Speed Slow	22.7 – 88.3 [rpm]	40	
		3E	1	0E – 7F	Rotary Speaker Horn Acceleration	0.21 – 1.00 – 2.00	53	
		3F	1	0E – 7F	Rotary Speaker Rotor Acceleration	0.21 – 1.00 – 2.00	40	
		40	1	0E – 7F	Rotary Speaker Horn Deceleration	0.21 – 1.00 – 2.00	53	
		41	1	0E – 7F	Rotary Speaker Rotor Deceleration	0.21 – 1.00 – 2.00	40	
		42	1	00 – 01	Rotary Speaker Stereo/Mono	Stereo, Mono	00	
		43	1	00 – 01	Background Noise Switch	Off, On	01	
		44	1	00 – 7F	Background Noise Level	0 – 127	40	
		45	1	00 – 02	Rotary Speaker Slot A Type	Studio, Classic, Overdrive	00	*3
		46	1	00 – 02	Rotary Speaker Slot B Type	Studio, Classic, Overdrive	01	*3
		47	1		reserved			

TOTAL SIZE = 72 48 (HEX)

*1: G Chorus, SPX Chorus, Symphonic, 816 Chorus, VCM Flanger, Cross FB Flanger, VCM Stereo Phaser, Small Phaser, Max90, Dual Phaser, Tremolo, Auto Pan, Simple Rotary, British Combo, British Lead, Small Stereo, Compressor, Auto Wah, Touch Wah, Pedal Wah, Cross Delay, Tempo Delay, Analog Delay, Looper Delay, Room Reverb, Hall Reverb, Reverse Reverb, Lo-Fi, Ring Modulator, Slicer, LP Filter, Harmonic Enhancer, Tone Control, 1 Band EQ Narrow, 1 Band EQ Wide, GS1 Ensemble

*2: For the LED indication, refer to the Insertion Effect Type List in the YC88 YC73 Owner's Manual.

*3: Classic = Rotary Speaker A in the previous version
Overdrive = Rotary Speaker B in the previous version
When receiving MIDI bulk data of the previous version, "Classic" is set to Slot A Type while "Overdrive" is set to Slot B Type.

ZONE

Zone 1-4

zz: Zone Number, 00 – 03 (HEX)

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
4A	zz	00	1	00 – 01	Zone Switch	Off, On	00 – 01	With the default settings, only the Zone 1 is set to "on."
		01	1	00 – 0F	Transmit Channel	1 – 16	00 – 03	Default settings: Zone1(0), Zone2(1), Zone3(2), Zone4(3)
		02	1	3D – 43	Transpose (Octave)	-3 – +3	40	
		03	1	35 – 4B	Transpose (Semitone)	-11 – +11	40	
		04	1	00 – 7F	Note Limit Low	C-2 – G8	00	The upper limit will be determined with "Note Limit High."
		05	1	00 – 7F	Note Limit High	C-2 – G8	7F	The lower limit will be determined with "Note Limit Low."
		06	1		reserved			
		07	1	00 – 7F	MIDI Volume	0 – 127	7F	
		08	1	00 – 7F	MIDI Pan	L64 – C – R63	40	
		09	1	00 – 7F	MIDI Bank MSB	0 – 127	00	
		0A	1	00 – 7F	MIDI Bank LSB	0 – 127	00	
		0B	1	00 – 7F	MIDI Program Number	1 – 128	00	
		0C	1	00 – 1F	Transmit Bank Select Transmit Program Change Transmit Volume Transmit Pan Transmit Note	bit0: Off, On Bank Select bit1: Off, On Program Change bit2: Off, On Volume bit3: Off, On Pan bit4: Off, On Note	1F	CC#11 (Expression) will not be transmitted when the Volume is set to "off."
		0D	1	00 – 3F	Transmit PB Transmit Mod Transmit FC1 Transmit FC2 Transmit FS Transmit Sus	bit0: Off, On PB bit1: Off, On Mod bit2: Off, On FC1 bit3: Off, On FC2 bit4: Off, On FS bit5: Off, On Sus	3F	
		0E	1		reserved			
		0F	1		reserved			

TOTAL SIZE = 16 10 (HEX)

Organ Section

Organ Section Common

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
50	00	00	2	00 – 01 00 – 3E	Voice Number	H1, H2, H3, H4, F1, F2, F3, F4, F5, F6 1st bit6-0 → bit13-7 2nd bit6-0 → bit6-0	00 00	*3
		02	1	00 – 01	Section Switch	Off, On	00	
		03	1	00 – 01	Part Select	Upper, Lower	00	
		04	1	00 – 03	Split Mode	Off, L&U, Upper, Lower	00	
		05	1	00 – 7F	Section Volume	0 – 127	7F	
		06	1	00 – 7F	Pre Drive	0 – 127	00	
		07	1	01 – 7F	Pan	L63 – C – R63	40	
		08	1	28 – 58	Pitch Bend Range	-24 – 0 – +24	42	
		09	1	00 – 7F	Pitch Modulation Depth	0 – 127	0A	*1
		0A	1	00 – 7F	Pitch Modulation Speed	-64 – +63	40	*1
		0B	1	00 – 7F	Pitch Modulation Initial	0 – 127	00	*1
		0C	1	00 – 01	Receive Expression	Off, On	01	

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
		0D	1	00 – 01	Receive Sustain	Off, On	01	
		0E	1	00 – 01	Receive Sostenuto	Off, On	01	
		0F	1		reserved			
		10	1	00 – 04	External Keyboard	External + Internal, External Only, 2 manual (Upper), 2 manual (Lower), Off	00	
		11	1		reserved			
		12	1		reserved			
		13	1	00 – 01	Percussion Switch	Off, On	00	*2
		14	1	00 – 01	Percussion Type	3rd, 2nd	00	*2
		15	1	00 – 01	Percussion Decay	Slow, Fast	00	*2
		16	1	00 – 01	Percussion Volume	Soft, Normal	01	*2
		17	1	00 – 01	Percussion Link to 1feet	Off, On	01	*2
		18	1		reserved			
		19	1		reserved			
		1A	1	00 – 05	Vibrato/Chorus Type	V1, C1, V2, C2, V3, C3	05	
		1B	1		reserved			
		1C	1	00 – 7F	Leak Level	0 – 127	40	*2
		1D	1	00 – 7F	Key Click Level	0 – 127	40	*2
		1E	1		reserved			
		1F	1	00 – 01	Expression Type	Drive+Volume, Volume	00	*2
		20	1		reserved			
		21	1	00 – 02	FM Drawbar Color Type	1 Color, 2 Colors, 3 Colors	02	*1
		22	1		reserved			
		23	1	00 – 7F	Reverb Depth	0 – 127	00	

TOTAL SIZE = 36 24 (HEX)

*1: Effective only when the FM organ type (F1–F6) is selected.

*2: Effective only when the VCM organ type (H1–H4) is selected.

*3: 0 = H1, 1 = H2, 2 = H3, 190 = H4, 3 = F1, 4 = F2, 5 = F3, 149 = F4, 150 = F5, 151 = F6

Organ Section Part Upper/Lower

p: Part number, 0-1 (0: Upper, 1: Lower)

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
50	1p	00	1		reserved			
		01	1		reserved			
		02	1	3E – 42	Octave Shift	-2 – 0 – +2	40	
		03	1		reserved			
		04	1	00 – 7F	Drawbar 16'	0 – 127	7F	Correspondence between drawbar position and parameter value 0: 0 1: 1 - 18 2: 19 - 36 3: 37 - 54 4: 55 - 72 5: 73 - 90 6: 91 - 108 7: 109 - 126 8: 127
		05	1	00 – 7F	Drawbar 5 1/3'	0 – 127	7F	
		06	1	00 – 7F	Drawbar 8'	0 – 127	7F	
		07	1	00 – 7F	Drawbar 4'	0 – 127	00	
		08	1	00 – 7F	Drawbar 2 2/3'	0 – 127	00	
		09	1	00 – 7F	Drawbar 2'	0 – 127	00	
		0A	1	00 – 7F	Drawbar 1 3/5'	0 – 127	00	
		0B	1	00 – 7F	Drawbar 1 1/3'	0 – 127	00	
		0C	1	00 – 7F	Drawbar 1'	0 – 127	00	
		0D	1	00 – 06	Drawbar Color	1: White, 2: Red, 3: Yellow, 4: Green, 5: Cyan, 6: Blue, 7: Magenta	00	
		0E	1		reserved			
		0F	1		reserved			
		10	1		reserved			
		11	1		reserved			
		12	1	00 – 01	Vibrato/Chorus Switch	Off, On	00	*1
		13	1		reserved			

TOTAL SIZE = 20 14 (HEX)

*1: When an FM Voice (F1–F6) is selected, Upper and Lower are linked with the same setting.

Keys Sections

Key A/Key B Section

s: Section number, 0-1 (0: A, 1: B)

Group Number = 7F 1C, Model ID = 09

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
60	0s	00	1	00 – 03	Current Category	Piano, E.Piano, Synth, Others	A: 00, B: 02	
		01	2	00 – 01 06 – 3F	Category 1 Voice Number	6 – 13, 145, 146, 152, 153, 189, 191 1st bit6-0 → bit13-7 2nd bit6-0 → bit6-0	00 06	
		03	2	00 – 01 0E – 1F	Category 2 Voice Number	14 – 31, 147, 148, 157 1st bit6-0 → bit13-7 2nd bit6-0 → bit6-0	00 0E	
		05	2	00 – 01 1E – 5A	Category 3 Voice Number	32 – 90, 158 – 188, 192 – 199 1st bit6-0 → bit13-7 2nd bit6-0 → bit6-0	00 20	
		07	2	00 – 01 00 – 7F	Category 4 Voice Number	90 – 144, 154 – 156 1st bit6-0 → bit13-7 2nd bit6-0 → bit6-0	00 5B	
		09	1	02	Bulk Format Version	2	02	
		0A	1	00 – 01	Section Switch	Off, On	A: 01, B: 00	
		0B	1	00 – 02	Split Mode	L&R, L, R	00	
		0C	1	3E – 42	Octave Shift	-2 – 0 – +2	40	
		0D	1	01 – 7F	Pan	L63 – C – R63	40	
		0E	1	00 – 7F	Section Volume	0 – 127	7F	
		0F	1	00 – 7F	Tone	0 – 127	40	
		10	1	00 – 01	EG/Filter Select	EG, Filter	00	
		11	1	00 – 7F	EG	0 – 127	40	
		12	1	00 – 0A	EG Control	Atk&Dcy&Rls A, Atk&Dcy&Rls B, Attack, Decay, Release, Atk&Rls A, Atk&Rls B, Atk&Rls Minus, Dcy&Rls, Atk&Dcy A, Atk&Dcy B	00	
		13	1	00 – 7F	Filter	0 – 127	40	
		14	1	00 – 06	Filter Control	Flat Reso, Reso Plus, Reso Minus A, Reso Minus B, Reso Minus C, Reso Boost A, Reso Boost B	00	
		15	1	00 – 7F	Touch Sensitivity Depth	-64 – +63	40	
		16	1	00 – 7F	Touch Sensitivity Offset	-64 – +63	40	
		17	1	00 – 02	FM Unison	Off, 2 Unison, 4 Unison	00	*1
		18	1	00 – 0F	FM Detune	0 – 15	00	*1
		19	1	00 – 0F	FM Spread	0 – 15	00	*1
		1A	1		reserved			
		1B	1		reserved			
		1C	1	00 – 01	Mono/Poly	Mono, Poly	01	
		1D	1	00 – 01	Portamento Switch	Off, On	00	*2
		1E	1	00 – 7F	Portamento Time	0 – 127	40	*2
		1F	1	00 – 01	Portamento Mode	Fingered, Full-time	01	*2
		20	1	00 – 01	Portamento Time Mode	Rate, Time	00	*2
		21	1	28 – 58	Pitch Bend Range	-24 – 0 – +24	42	
		22	1	00 – 7F	Pitch Modulation Depth	0 – 127	0A	
		23	1	00 – 7F	Pitch Modulation Speed	-64 – +63	40	
		24	1	00 – 7F	Pitch Modulation Initial	0 – 127	00	
		25	1		reserved			
		26	1	00 – 01	Receive Expression	Off, On	01	
		27	1	00 – 01	Receive Sustain	Off, On	01	
		28	1	00 – 01	Receive Sostenuto	Off, On	01	
		29	1	00 – 01	Receive Soft	Off, On	01	
		2A	1	00 – 02	External Keyboard	External + Internal, External Only, Off	00	
		2B	1		reserved			
		2C	1		reserved			
		2D	1	00 – 01	Effect 1 Switch	Off, On	00	
		2E	1	00 – 14, 16 – 17, 19 – 25	Effect 1 Type	*3	00	*4
		2F	1	00 – 7F	Effect 1 Depth	0 – 127	40	
		30	1	00 – 7F	Effect 1 Rate	0 – 127	40	

Address			Size	Data Range	Parameter Name	Description	Default (HEX)	Notes
High	Mid	Low						
		31	1	00 – 01	Effect 2 Switch	Off, On	00	
		32	1	00 – 14, 16 – 17, 19 – 25	Effect 2 Type	*3	00	*4
		33	1	00 – 7F	Effect 2 Depth	0 – 127	40	
		34	1	00 – 7F	Effect 2 Speed	0 – 127	40	
		35	1		reserved			
		36	1		reserved			
		37	1		reserved			
		38	1		reserved			
		39	1	00 – 7F	Reverb Depth	0 – 127	00	

TOTAL SIZE = 58 3A (HEX)

*1: Available only when an FM Voice is selected.

*2: Available only when the Mono/Poly parameter is set to "Mono."

*3: G Chorus, SPX Chorus, Symphonic, 816 Chorus, VCM Flanger, Cross FB Flanger, VCM Stereo Phaser, Small Phaser, Max90, Dual Phaser, Tremolo, Auto Pan, Simple Rotary, British Combo, British Lead, Small Stereo, Compressor, Auto Wah, Touch Wah, Pedal Wah, Cross Delay, Digital Delay, Analog Delay, Room Reverb, Hall Reverb, Reverse Reverb, Lo-Fi, Ring Modulator, Slicer, LP Filter, Damper Resonance, Harmonic Enhancer, **Tone Control, 1 Band EQ Narrow, 1 Band EQ Wide, GS1 Ensemble**

*4: For the LED indication, refer to the Insertion Effect Type List in the YC88 YC73 Owner's Manual.

Новые функции в версии YC 1.40

Следующие функции были добавлены в YC88/YC73/YC61 в связи с обновлением версии прошивки. В этом руководстве описаны дополнения и изменения по отношению к Руководству пользователя, поставляемому с вашим инструментом.

- Добавлен новый тип органа VCM.
- Добавлена новая настройка «Live Set EQ».
- Изменена продолжительность действия функции Auto Power Off.
- Добавлены новые звуки живого набора, а также обновленный звук живого набора.

Новый тип органа

Добавлен новый тип органа H4.
Теперь на выбор предлагается четыре типа органов VCM.

H1	Этот тип точно воспроизводит стандартный винтажный орган. Подходит для органных соло и музыки, в которой орган является основным инструментом.
H2	Этот тип характеризуется глубоким звучанием с акцентом на средних и низких тонах. Это идеальный вариант, когда необходимо, чтобы инструмент был замечен на фоне остальной группы или ансамбля.
H3	Этот тип имеет уникальный перкуссионный звук. Этот тип хорошо работает с эффектами драйва и подходит для воспроизведения быстрых отрывков.
H4	В этом типе особое внимание уделяется перкуссии и мощному низкочастотному звуку, что делает его идеальным для использования в джазовом трио.

Voice List V1.40

YC88/YC73/YC61


Section	Category	Sub Category	No.	Name	Parameter Value (*)
Organ			H4	H4	191

Дополнительный Live Set EQ

В раздел SETTINGS (Настройки) добавлен Live Set EQ.
Теперь можно сохранять настройку Master EQ для каждого звука живого набора.

[SETTINGS] кнопка → «Sound» → «Function» → «Live Set EQ»

Sound (Звук)

Имя функции		Описание
Function	Transpose	Транспонирование высоты звука в полутонах. Настройки: -12 – +12 По умолчанию: +0 ПРИМЕЧАНИЕ Эта настройка не влияет на выходные данные MIDI.
	Split Point	Положение клавиши, разделяющей клавиатуру на левую и правую области. Предустановленное значение — самая низкая нота в области правой руки. Настройки: C#-2 – G8 По умолчанию: G2
Live Set EQ	Mode SW	Определяет, сохранять или нет настройки Master EQ в звуке живого набора. Если для этого параметра установлено значение «On», на главном экране отображается значок эквалайзера. <div></div>
	EQ Settings	Просмотр сохраненных настроек Master EQ в настройках эквалайзера. Вы также можете настроить эквалайзер с помощью настроек эквалайзера, а также с помощью ручек и кнопок.
	High Gain	Для настройки усиления (от -12 до +12) верхнего диапазона. Настройки: -12 дБ – +12 дБ
	Mid Gain	Служит для настройки усиления (от -12 до +12) среднего диапазона (от 100 до 10 кГц). Настройки: -12 дБ – +12 дБ
	Mid Frequency	Для установки центральной частоты среднего диапазона. Настройки: 100 – 10 Гц
	Low Gain	Для настройки усиления (от -12 до +12) нижнего диапазона. (80 Гц). Настройки: -12 дБ – +12 дБ
	ON/OFF	Используйте эту функцию для определения, следует применять Master EQ (On (Вкл.)) или нет (Off (Выкл.)).

Изменение продолжительности действия функции Auto Power Off

Время действия функции Auto Power Off, автоматически выключающей инструмент, изменено с 30 минут на 15 минут.

Кроме того, сообщение «Energy consumption might increase depending on the setting» теперь появляется при открытии экрана настроек Auto Power Off.

[MENU] кнопка → «General» → «Auto Power Off» → «Enable»

Новые звуки живого набора

Добавлены новые звуки живого набора с использованием нового типа органа.

Звук живого набора «Jazz Lead» был заменен новым звуком живого набора «Soft Jazzy», в котором используется орган типа H4.

Live Set Sound List V1.40

YC61

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
1	1	Soft Jazzy	G2	Organ	H4	63	0	1
				Key A	-			
				Key B	-			

YC88/YC73

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
1	5	Soft Jazzy	G2	Organ	H4	63	0	5
				Key A	-			
				Key B	-			

YC88/YC73/YC61

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
18	1	Loudest!	G2	Organ	H4	63	17	1
				Key A	-			
				Key B	-			
18	2	Prog Organ	G2	Organ	H4	63	17	2
				Key A	-			
				Key B	-			
18	3	Detroit Organ	G2	Organ	H4	63	17	3
				Key A	-			
				Key B	-			
18	4	Ballad Organ	G2	Organ	H4	63	17	4
				Key A	-			
				Key B	-			
18	5	Gospel Layer	G2	Organ	H4	63	17	5
				Key A	CFX			
				Key B	-			
18	6	Wr-Organ	G2	Organ	H4	63	17	6
				Key A	Wr Wide			
				Key B	-			
18	7	Funky Split	G2	Organ	H4	63	17	7
				Key A	Finger Bass			
				Key B	-			
18	8	Fathoms Down	G2	Organ	H4	63	17	8
				Key A	FM Trans EDM			
				Key B	Dark Light			

Новые функции в версии YC 1.30


Следующие функции были добавлены в YC88/YC73/YC61 в связи с обновлением версии микропрограммного обеспечения.

В данном руководстве описаны дополнения и изменения, внесенные в руководство пользователя, поставляемое с инструментом.

- К тембрам FM Organ добавлен новый эффект Vibrato/Chorus.
- Новая настройка Pan (панорамирование) добавлена в настройках звука живого набора.
- Добавлена новая функция, позволяющая одновременно изменять параметры в секции клавиш.
- Добавлена новая функция, позволяющая поддерживать скорость вращения эффекта вращающегося динамика.
- Добавлены новые звуки живого набора.
- Добавлены новые тембры.

Новые эффекты Vibrato/Chorus (Вибрато/Хорус) для тембров FM Organ

Теперь для тембров FM Organ типов F1-F6 в секции Organ доступны новые эффекты Vibrato/Chorus.

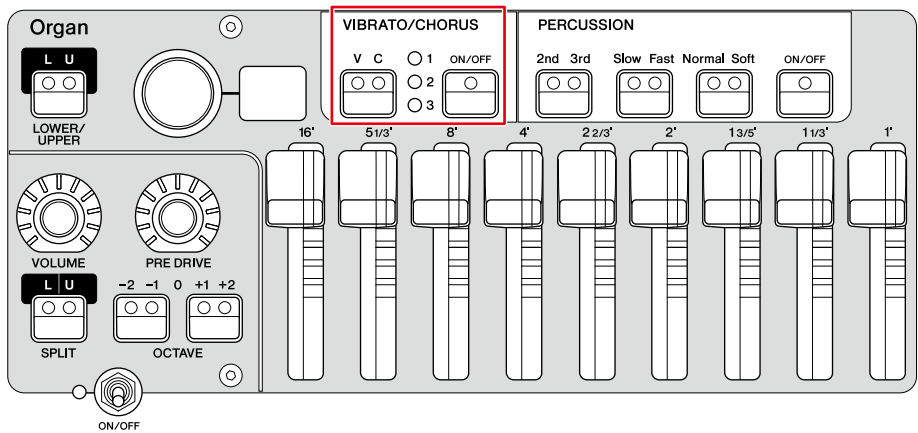

F1	VIBRATO	Эффект вибрато — благодаря схеме вибрато на основе сканера.
	CHORUS	Эффект хоруса — благодаря схеме вибрато на основе сканера.
F2	VIBRATO	Простая модуляция высоты звука путем изменения только глубины звука.
	CHORUS	Эффект хоруса — благодаря схеме вибрато на основе сканера.
F3	VIBRATO	Вибрато, изменяющее глубину и скорость.
	CHORUS	Простая амплитудная модуляция путем изменения только глубины громкости.
F4	VIBRATO	Простая модуляция высоты звука путем изменения только глубины звука.
	CHORUS	Однофазный хорус, воспроизводящий аналоговый звук хоруса.
F5	VIBRATO	Простая модуляция высоты звука путем изменения только глубины звука.
	CHORUS	Эффект Flanger (Флэнджер), меняющий скорость.
F6	VIBRATO	Эффект Phaser (Фазер), который изменяет скорость и количество откликов.
	CHORUS	Модулятор речи, меняющий произношение гласных.

Когда выбран один из типов органов F1–F6, значения On/Off (Вкл./Выкл.) параметров Vibrato/Chorus для частей Upper и Lower будут одинаковыми.

Дополнительный параметр панорамирования

В настройки Organ (Орган), Key A (Клавиша A) и Key B (Клавиша B) был добавлен параметр Pan (Панорамирование).


Кнопка [SETTINGS] (Настройки) → [Sound] (Звук) → [Organ Settings] (Настройки органа) [Key A Settings] (Настройки клавиши A) [Key B Settings] (Настройки клавиши B) → [Pan] (Панорамирование)

Может быть установлен в диапазоне от L63 до C и до R63.


Помимо добавления параметра Pan (Панорамирование) были добавлены индикаторы Mono/Poly (Моно/Полифония) и Portamento (Портаменто).

Сравнение старых и новых древовидных диаграмм

• V1.20

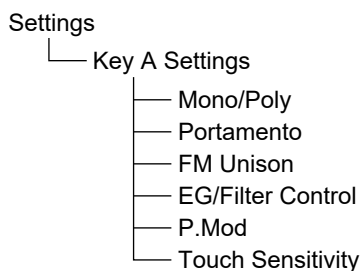

• V1.30

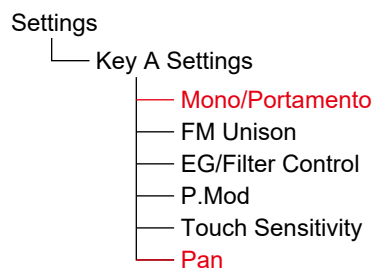


Если настройка отличается от «C», отображается полоса.



Новая функция, позволяющая одновременно изменять несколько параметров в секции клавиш.

Одновременно можно изменять следующие параметры в секциях Key A (Клавиша А) и Key B (Клавиша В): Voice (Тембр), Split (Разделение), Octave (Октава), Volume (Громкость), Tone (Тон), EG (Генератор огибающих), Filter (Фильтр), Effect 1 (Эффект 1) и Effect (Эффект 2).

Нажатие и удержание кнопки Keys [A B] в момент, когда обе секции Key A (Клавиша А) и Key B (Клавиша В) активны, вызовет одновременное включение индикаторов и свяжет параметры секций Key A и Key B. Светодиоды не загорятся, если значения параметров Key A и Key B различаются.

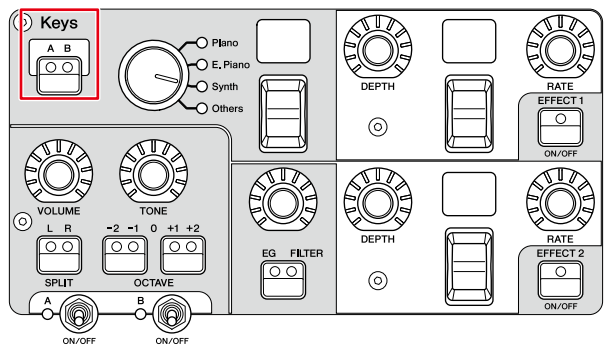

Новый параметр скорости вращения динамика в панели управления

Кнопка [MENU] (Меню) → [Control Panel] (Панель управления) → [Rotary Speaker Speed] (Скорость вращения динамика)

Если для этого параметра установлено значение «Hold» (Удержание), скорость вращения сохраняется даже при переключении живого набора. Это полезно, если необходимо сохранять ту же скорость вращения даже при изменении живого набора.

Установите значение «Change» (Изменение), если вы хотите играть с предустановленной скоростью вращения каждого вновь выбранного живого набора.

Меню Rotary Speaker Speed (Скорость вращения динамика)

Название функции	Описание
Change (Изменение)	При переключении между живыми наборами применяется предустановленная для каждого живого набора скорость вращения.
Hold (Удержание)	Даже при переключении между живыми наборами сохраняется текущая скорость вращения.

ПРИМЕЧАНИЕ

По умолчанию установлено значение «Change» (Изменение).

Новые звуки живого набора

YC88/YC73/YC61 V1.30

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
14	1	Hamburg Grand	G2	Organ	-	63	13	1
				Key A	Hamburg Grand			
				Key B	-			
14	2	Gentle Hamburg	G2	Organ	-	63	13	2
				Key A	Hamburg Grand			
				Key B	-			
14	3	Shoegaze Piano	G2	Organ	-	63	13	3
				Key A	Hamburg Grand			
				Key B	-			
14	4	Utility Felt	G2	Organ	-	63	13	4
				Key A	Felt Piano			
				Key B	-			
14	5	Funky CP	G2	Organ	-	63	13	5
				Key A	CP80 Stage			
				Key B	-			
14	6	Power Ballad CP	G2	Organ	-	63	13	6
				Key A	CP80 Stage			
				Key B	-			
14	7	Churchy FM	G2	Organ	F5	63	13	7
				Key A	-			
				Key B	-			
14	8	FM Club Organ	G2	Organ	F4	63	13	8
				Key A	-			
				Key B	-			
15	1	FM 80s Bld EP	G2	Organ	-	63	14	1
				Key A	FM 80s Bld EP			
				Key B	-			
15	2	FM Warm Pad	G2	Organ	-	63	14	2
				Key A	FM Warm Pad			
				Key B	-			
15	3	FM Club Pad	G2	Organ	-	63	14	3
				Key A	FM Club Pad			
				Key B	-			
15	4	FM Saw Lead	G2	Organ	-	63	14	4
				Key A	FM Saw Lead			
				Key B	-			
15	5	FM Trans EDM	G2	Organ	-	63	14	5
				Key A	FM Trans EDM			
				Key B	-			
15	6	FM EDM Lead	G2	Organ	-	63	14	6
				Key A	FM EDM Lead			
				Key B	-			
15	7	FM Solo Lead	G2	Organ	-	63	14	7
				Key A	FM Solo Lead			
				Key B	-			
15	8	FM 80s Disco Ba	G2	Organ	-	63	14	8
				Key A	FM 80sDiscoBa			
				Key B	-			

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
16	1	FM Y2K Bass	G2	Organ	-	63	15	1
				Key A	FM Y2K Bass			
				Key B	-			
16	2	FM Deep Bass	G2	Organ	-	63	15	2
				Key A	FM Deep Bass			
				Key B	-			
16	3	FM Chorus Bells	G2	Organ	-	63	15	3
				Key A	FM Cho Bells			
				Key B	-			
16	4	FM French Tines	G2	Organ	-	63	15	4
				Key A	FM FrnchTines			
				Key B	-			
16	5	FM Plucky SQR	G2	Organ	-	63	15	5
				Key A	FM Plucky SQR			
				Key B	-			
16	6	FM Saw Pluck	G2	Organ	-	63	15	6
				Key A	FM Saw Pluck			
				Key B	-			
16	7	FM AM Pluck	G2	Organ	-	63	15	7
				Key A	FM AM Pluck			
				Key B	-			
16	8	FM Synth Pluck	G2	Organ	-	63	15	8
				Key A	FM SynPluck			
				Key B	-			
17	1	DX7 Brass 1	G2	Organ	-	63	16	1
				Key A	DX Brass 1			
				Key B	-			
17	2	DX7 Strings 2	G2	Organ	-	63	16	2
				Key A	DX Strings 2			
				Key B	-			
17	3	DX7 E.Piano 1	G2	Organ	-	63	16	3
				Key A	DX E.Piano 1			
				Key B	-			
17	4	DX7 Guitar 1	G2	Organ	-	63	16	4
				Key A	DX Guitar 1			
				Key B	-			
17	5	DX7 E.Organ 1	G2	Organ	-	63	16	5
				Key A	DX E.Organ 1			
				Key B	-			
17	6	DX7 Marimba	G2	Organ	-	63	16	6
				Key A	DX Marimba			
				Key B	-			
17	7	DX7 Harp 2	G2	Organ	-	63	16	7
				Key A	DX Harp 2			
				Key B	-			
17	8	TX LatelyBass	G2	Organ	-	63	16	8
				Key A	TX LatelyBass			
				Key B	-			

Новые тембры

YC88/YC73/YC61 V1.30

Section	Category	Sub Category	No.	Name	Parameter Value(*)
Keys A/B	Piano	Grand	6	Hamburg Grand	152
		Upright	8	Felt Piano	153
		CP	11	CP80 Stage	189
	E.Piano	FM	20	FM 80s Bld EP	157
	Synth	Pad	16	FM Warm Pad	158
			17	FM Club Pad	159
		Lead	46	FM Saw Lead	160
			47	FM Trans EDM	161
			48	FM EDM Lead	162
			49	FM Solo Lead	163
		Bass	60	FM 80sDiscoBa	164
			61	FM Y2K Bass	165
			62	FM Deep Bass	166
		ChromPerc	69	FM Cho Bells	167
		Comp	70	FM FrnchTines	168
			71	FM Plucky SQR	169
			72	FM Saw Pluck	170
			73	FM AM Pluck	171
			74	FM SynPluck	172
		VintageFM	75	DX Brass 1	173
			76	DX Brass 2	174
			77	DX Brass 3	175
			78	DX Strings 2	176
			79	DX Piano 2	181
			80	DX E.Piano 1	177
			81	DX Guitar 1	178
			82	DX Guitar 2	179
			83	DX Bass 1	180
			84	DX E.Organ 1	182
			85	DX Vibe 1	183
			86	DX Marimba	184
			87	DX Flute 1	185
			88	DX Tub Bells	186
			89	DX Harp 2	187
			90	TX LatelyBass	188
	Others	Strings	9	Harp	154
		Choir	56	Choir	155
			57	Air Choir	156

Новые функции в версии YC 1.20

Следующие функции были добавлены в YC88/YC73/YC61 в связи с обновлением версии микропрограммного обеспечения.

В данном руководстве описаны дополнения и изменения, внесенные в руководство пользователя, поставляемое с инструментом.

- Добавлен новый эффект вращающегося динамика.
- Добавлены новые типы органов FM.
- Новый параметр FM Color Type (Тип цвета FM) добавлен к настройке Drawbar Color (Цвет регистра).
- К типам эффектов добавлены три эквалайзера.
- Новая настройка Touch Sensitivity (Чувствительность к силе нажатия клавиш) добавлена в разделе SETTINGS (Настройки).
- Местоположения в меню EG Control (Управление с помощью генератора огибающих) или Filter Control (Управление с помощью фильтра) были изменены.
- Добавлены новые звуки живого набора.
- Добавлены новые тембры.

Новый эффект вращающегося динамика

Добавлен новый эффект вращающегося динамика, Studio (Студийный). Кроме того, привычные Rtr A и Rtr B были переименованы в Classic (Классический) и Overdrive (Овердрайв) соответственно.

YC88/YC73/YC61 V1.20

Эффект	Пояснение
Studio (Студийный)	Вращающийся динамик с трехмерным эффектом и улучшенным чувством движения.
Classic (Классический)	Стандартный вращающийся динамик для органов.
Overdrive (Овердрайв)	Вращающийся динамик с имитацией транзисторного предусилителя и сильными искажениями.

Настройки эффекта вращающегося динамика


Кнопка [SETTINGS] (Настройки) → [Sound] (Звук) → [Rotary Speaker] (Вращающийся динамик) → [Type] (Тип)

В раздел SETTINGS (Настройки) добавлен тип вращающегося динамика. Значение параметра Rotary Speaker Type (Тип вращающегося динамика) можно задать независимо для Rtr A и Rtr B.

Тип вращающегося динамика

Название функции	Описание
Slot A (Слот A)	Устанавливает эффект вращающегося динамика, назначенный для типа Rtr A. Настройки: Studio (Студийный), Classic (Классический), Overdrive (Овердрайв) Начальная настройка: Studio (Студийный)
Slot B (Слот B)	Sets the rotary speaker effect assigned for the Rtr B type. Настройки: Studio (Студийный), Classic (Классический), Overdrive (Овердрайв) Начальная настройка: Classic (Классический)

Выбор эффектов вращающегося динамика

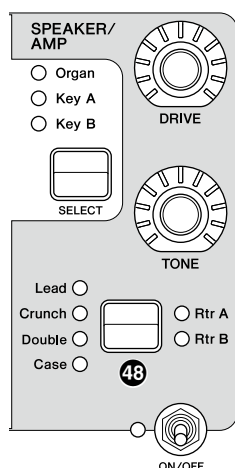

Если вы выберете Rtr A или Rtr B с помощью **кнопки переключения типа эффекта 48** в разделе SPEAKER / AMP (Динамик/усилитель), вы можете применить эффект вращающегося динамика, заданный в разделе Rotary speaker effect settings (Настройки эффекта вращающегося динамика) выше.

 

ПРИМЕЧАНИЕ

При выборе типа Rtr A или Rtr B в разделе SPEAKER/AMP (Динамик/усилитель) можно использовать регуляторы [EXIT] (Выход) + [TONE] (Тон) для непосредственного изменения параметра Rotary speaker effect settings (Настройки эффекта вращающегося динамика) для выбранного типа.



Новые типы органов

Были добавлены новые типы органов FM (от F4 до F6), в результате чего теперь имеется в общей сложности шесть типов органов FM.

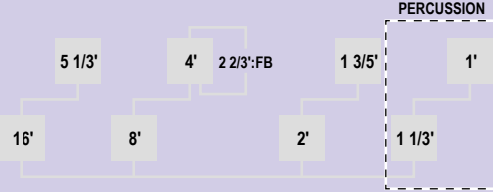F1		Несущие формы немодулированной синусоидальной волны позволяют генерировать звуки, подобные звуку органа.
F2		Этот тип состоит из всех несущих форм прямоугольной волны для оператора. Подходит для генерации звуков, подобных звуку британских транзисторных органов.
F3		Этот тип состоит из несущей формы пилообразной волны для всех операторов. Подходит для генерации звуков, подобных звуку итальянских транзисторных органов.
F4		Этот тип имеет по одному модулятору для каждой из четырех несущих форм. Понижение уровня модулятора приближает его к прямоугольной волне, а повышение — увеличивает обертоны подобно пилообразной волне, в результате чего звук органа находится где-то между типами F2 и F3. Звук перкуссии можно включить/выключить с помощью кнопки PERCUSSION (Перкуссия).
F5		У двух несущих форм есть по три модулятора. Повышая уровень каждого модулятора, можно генерировать звуки со сложными обертонами, которых нет в обычных органах.
F6		Этот тип имеет по одному модулятору для каждой из четырех несущих форм. Поскольку модулятор установлен на EG (Генератор огибающих) или LFO (Низкочастотный осциллятор), увеличение уровня модулятора дает звук, похожий на звук синтезатора. Звук перкуссии можно включить/выключить с помощью кнопки PERCUSSION (Перкуссия).

ПРИМЕЧАНИЕ

Числа операторов для каждого алгоритма представляют соответствующие регистры. Обратите внимание, что для типов от F4 до F6 числа (футы), отображаемые на регистре, не соответствуют высоте звука.

Дополнительные параметры для типов органов FM

В раздел SETTINGS (Настройки) → Drawbar Color (Цвет регистра) добавлен параметр **FM Color Type** (Тип цвета FM).


В новых регистрах типа органов FM добавлены две характеристики, помимо несущих форм также включены модуляторы и обратная связь. В этих типах органов цвет несущей формы будет совпадать с цветом, заданным параметрами Upper (Верхний) и Lower (Нижний), а модуляторы и петли обратной связи будут разделены на цвета, связанные с цветом несущей формы.

Drawbar Color (Цвет регистра)


Название функции	Описание
Upper (Верхний) Lower (Нижний)	Задаёт цвета светодиодов регистра. Для параметров Upper (Верхний) и Lower (Нижний) их можно установить по отдельности. Настройки: White (Белый), Red (Красный), Yellow (Желтый), Green (Зеленый), Cyan (Голубой), Blue (Синий), Magenta (Розовый) Начальная настройка: Upper (Верхний) = White (Белый), Lower (Нижний) = Red (Красный)
FM Color Type (Цвет типа FM)	Задаёт комбинацию цветов светодиодов регистра. Его можно разделить на 3 цвета в зависимости от характеристик несущей формы, модулятора и обратной связи. Настройки: 1 Color (1 цвет): несущие формы, модуляторы и обратная связь имеют один цвет 2 Colors (2 цвета): используются два разных цвета: один для несущих форм и другой цвет для модулятора и обратной связи 3 Colors (3 цвета): несущие формы, модуляторы и обратная связь имеют разные цвета Начальная настройка: 3 Colors (3 цвета) ПРИМЕЧАНИЕ Органы типа H и органы типа FM от F1 до F3 всегда имеют цвета, заданные для параметров Upper (Верхний) и Lower (Нижний), независимо от значения параметра FM Color Type (Тип цвета FM).

Сравнение старых и новых древовидных диаграмм

• V1.00, V1.10

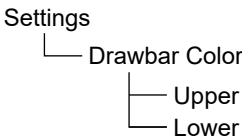

• V1.20

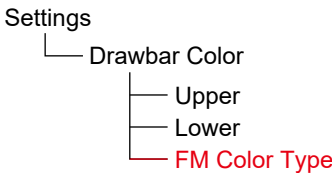

Новый тип эквалайзера

YC88/YC73/YC61 V1.20

Категория	Название типа	Выражение	Описание	Сtereo/Моно
EQ (Эквалайзер)	Tone Control (Регулировка тона)	E1	Ступенчатый эквалайзер. Низкие частоты можно регулировать с помощью регулятора [DEPTH], а высокие частоты — с помощью регулятора [RATE].	Сtereo
	1 Band EQ Narrow (Однополосный эквалайзер узкий)	E2	Пиковый эквалайзер с узкой Q (полосой пропускания). Усиление можно регулировать с помощью регулятора [DEPTH], а центральную частоту — с помощью регулятора [RATE].	Сtereo
	1 Band EQ Wide (Однополосный эквалайзер широкий)	E3	Пиковый эквалайзер с широкой Q (полосой пропускания). Усиление можно регулировать с помощью регулятора [DEPTH], а центральную частоту — с помощью регулятора [RATE].	Сtereo

Новый параметр Touch Sensitivity (Чувствительность к силе нажатия клавиш)

Кнопка [SETTINGS] (Настройки) → [Sound] (Звук) → Выберите раздел тембра* для настройки → [Touch Sensitivity] (Чувствительность к силе нажатия клавиш)
(* Key A Settings / Key B Settings (Настройки Клавиша A / Настройки Клавиша B))

Параметр Touch Sensitivity (Чувствительность к силе нажатия клавиш) был добавлен в раздел SETTINGS (Настройки) и может быть задан для разделов тембра Key A и Key B.

Чувствительность к силе нажатия клавиш

Название функции	Описание
Depth (Глубина)	<p>Этот параметр используется для определения того, как сила удара по клавишам будет влиять на значения силы удара, фактически передаваемые на тон-генератор для текущего раздела тембра. Как показано на приведенном ниже графике, чем больше заданное значение, тем сильнее изменяются передаваемые значения силы удара в ответ на изменения силы нажатия на клавиши (т. е. тем более крутой наклон кривой графика).</p> <p>Если установлено значение 0, сила удара по клавишам абсолютно не влияет на передаваемые значения силы удара, как, например, в случае с органом, где сила удара по клавишам практически не влияет на воспроизводимый звук.</p> <p>Настройки: 0 – 127 Начальная настройка: 64</p> <p>Параметр Offset (см. ниже) имеет значение 64:</p>
Offset (Коррекция)	<p>Этот параметр используется для увеличения или уменьшения всех значений силы удара, передаваемых на тон-генератор для текущего раздела тембра. Как показано на графиках, 64 отнято от установленного здесь значения, а результат удвоен, чтобы определить фактическую величину, по которой настраиваются передаваемые значения силы нажатия. При этом, если получающийся в результате показатель силы нажатия меньше 1, то используется значение, равное 1; таким же образом, если получающийся в результате показатель силы нажатия превышает 127, используется значение, равное 127.</p> <p>Настройки: 0 – 127 Начальная настройка: 64</p> <div><p>При глубине (см. выше) = 64 и смещении = 32</p></div> <div><p>При глубине (см. выше) = 64 и смещении = 96</p></div> <div><p>When Глубина (above) = 64 and Offset = 64</p></div>


Разделы тембра, в которых параметр Touch Sensitivity (Чувствительность к силе нажатия клавиш) был изменен по сравнению с настройками по умолчанию, отображаются со значком клавиатуры.




Изменения макета меню для параметров EG Control (Управление с помощью генератора огибающих) и Filter Control (Управление с помощью фильтра)

Сравнение старых и новых древовидных диаграмм

• V1.00, V1.10

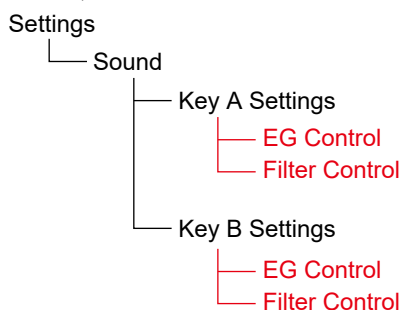

• V1.20

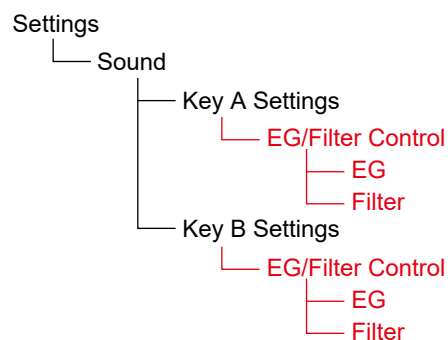

Новые звуки живого набора

YC88/YC73/YC61 V1.20

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
12	1	Modern Jazz	G2	Organ	H1	63	11	1
				Key A	-			
				Key B	-			
12	2	Soft Hymn	G2	Organ	H1	63	11	2
				Key A	-			
				Key B	-			
12	3	Prog Organ	G2	Organ	H3	63	11	3
				Key A	-			
				Key B	-			
12	4	Overdriven Org	G2	Organ	H2	63	11	4
				Key A	-			
				Key B	-			
12	5	Swish Organ	G2	Organ	H1	63	11	5
				Key A	-			
				Key B	-			
12	6	FM Organ	G2	Organ	F6	63	11	6
				Key A	-			
				Key B	-			
12	7	Bell Organ	G2	Organ	F5	63	11	7
				Key A	-			
				Key B	-			
12	8	Digitorgan	G2	Organ	F4	63	11	8
				Key A	-			
				Key B	-			
13	1	Violin Layer	G2	Organ	H3	63	12	1
				Key A	Violin			
				Key B	Slow Strings			
13	2	Hollow Drawbars	C3	Organ	H1	63	12	2
				Key A	-			
				Key B	-			
13	3	Keys of Rock	G2	Organ	H3	63	12	3
				Key A	Nashville C3			
				Key B	Wr Wide			
13	4	Rotary Piano	G2	Organ	-	63	12	4
				Key A	U1			
				Key B	C7			
13	5	At the Pub	G2	Organ	F4	63	12	5
				Key A	Musette			
				Key B	-			
13	6	Hidden Door	G2	Organ	F5	63	12	6
				Key A	Digi Pad			
				Key B	Analog Pad			
13	7	Smoky Tines	G2	Organ	F4	63	12	7
				Key A	FM Jazz Gt			
				Key B	73Rd Studio			
13	8	FM Organ Pad	G2	Organ	F5	63	12	8
				Key A	Mystic Pad			
				Key B	FM Bow RM Pad			

YC61 V1.20

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
1	1	Jazz Lead	C3	Organ	H1	63	0	1
				Key A	-			
				Key B	-			

Изменение точки разделения для звука живого набора

YC88/YC73 V1.20

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
1	5	Jazz Lead	C3	Organ	H1	63	0	5
				Key A	-			
				Key B	-			

Новый тембр

YC88/YC73/YC61 V1.20

Section	Category	Sub Category	No.	Name	Parameter Value (*)
Organ	-	-	F4	F4	149
			F5	F5	150
			F6	F6	151

Новые функции в версии УС 1.10

Корпорация Yamaha обновила микропрограмму УС, добавив в нее новые функции. В данном руководстве описаны дополнения и изменения, внесенные в руководство пользователя, поставляемое с инструментом.

- Метод настройки вибрато (СС # 1: модуляция) был изменен.
- Повышена функциональность.
- Добавлены новые звуки живого набора.
- Добавлены новые тембры.

Изменение метода настройки вибрато (СС # 1: модуляция)

Новый параметр P.Mod (связанный с модуляцией высоты звука) был добавлен к модуляции высоты звука в настройках для каждого раздела звука Live Set Sound.

Параметры рычажка модуляции P.Mod Depth и P.Mod Speed, изначально находившиеся в разделе «Контроллеры» Live Set Sound, были перемещены в раздел P.Mod.

Параметр P.Mod Initial также был добавлен в раздел P.Mod.


Относительно параметра P.Mod Initial для величины изменения P.Mod (СС # 1: модуляция) теперь можно установить значение, отличное от 0, при переключении Live Set.

Если изменить значение P.Mod Initial на значение, отличное от начального значения (0), на верхнем экране будет отображаться значок **(MOD)**.




Сравнение старых и новых древовидных диаграмм

• V1.00

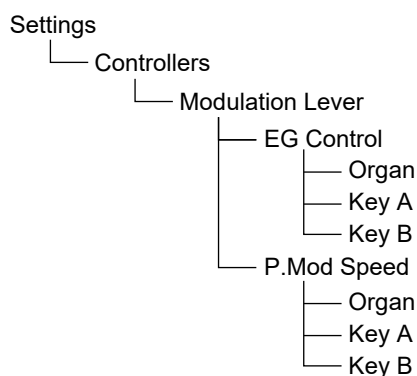


• V1.10

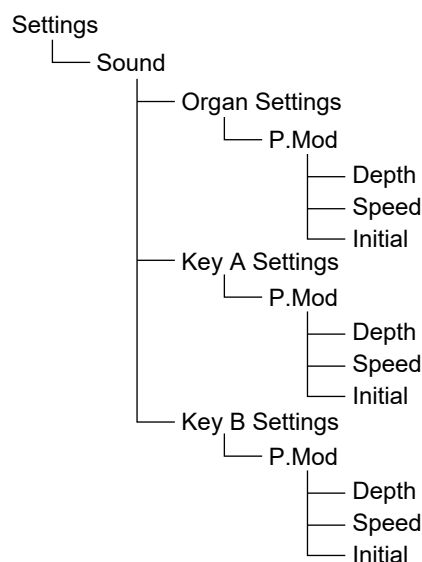

Повышение функциональности

Чтобы вызвать список тембров, нажмите и держите или дважды щелкните переключатель выбора тембра на верхнем экране.

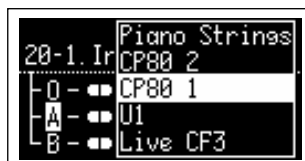

При нажатии кнопки [Enter] на экране, где отображается значение параметра, теперь происходит возврат к предыдущему уровню иерархии. Это повышает удобство настройки других параметров. Нажмите и держите кнопку [EXIT], чтобы вернуться к верхнему экрану.

ПРИМЕЧАНИЕ

На экране MENU (Меню) нажмите кнопку [MENU] (Меню), чтобы вернуться к верхнему экрану. На экране SETTINGS (Настройки) нажмите кнопку [SETTINGS] (Настройки), чтобы вернуться к верхнему экрану.

Список Live Set Sound (Звуки живого набора)

YC88 V1.0

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
1	1	Natural CFX	G2	Organ	-	63	0	1
				Key A	CFX			
				Key B	-			
1	2	Soulful Rd	G2	Organ	-	63	0	2
				Key A	78Rd			
				Key B	-			
1	3	FM EP 1	G2	Organ	-	63	0	3
				Key A	FM Piano DA			
				Key B	-			
1	4	FM Lead	G2	Organ	-	63	0	4
				Key A	FM Syn Lead 2			
				Key B	-			
1	5	Jazz Lead	G2	Organ	H1	63	0	5
				Key A	-			
				Key B	-			
1	6	Rock Organ 1	G2	Organ	H2	63	0	6
				Key A	-			
				Key B	-			
1	7	Gospel Shout!	G2	Organ	H1	63	0	7
				Key A	-			
				Key B	-			
1	8	Rex Direct	G2	Organ	F2	63	0	8
				Key A	-			
				Key B	-			
2	1	One Ear Upright	G2	Organ	-	63	1	1
				Key A	U1			
				Key B	-			
2	2	67 Trem EP	G2	Organ	-	63	1	2
				Key A	67Rd Dark			
				Key B	-			
2	3	80s Piano Layer	G2	Organ	-	63	1	3
				Key A	CFX			
				Key B	FM The EP			
2	4	Fat OB Brass	G2	Organ	-	63	1	4
				Key A	OB Brass 1			
				Key B	OB Brass 2			
2	5	Jazz Swish	G2	Organ	H1	63	1	5
				Key A	-			
				Key B	-			
2	6	Prog 1	G2	Organ	H2	63	1	6
				Key A	-			
				Key B	-			
2	7	Gospel Worship	G2	Organ	H1	63	1	7
				Key A	-			
				Key B	-			
2	8	Italian Organ 1	G2	Organ	F3	63	1	8
				Key A	-			
				Key B	-			
3	1	C7 w/Pad	G2	Organ	-	63	2	1
				Key A	C7			
				Key B	Analog Pad			
3	2	Wr Trem	G2	Organ	-	63	2	2
				Key A	Wr Bright			
				Key B	-			
3	3	FM EP+Pad 1	G2	Organ	-	63	2	3
				Key A	FM The EP			
				Key B	Lite Strings			
3	4	Motion Pad	G2	Organ	-	63	2	4
				Key A	Mystic Pad			
				Key B	Analog Pad			
3	5	Squabble	G2	Organ	H1	63	2	5
				Key A	-			
				Key B	-			

3	6	Casino Fire	G2	Organ	H2	63	2	6
				Key A	-			
				Key B	-			
3	7	H Split Ld/Ba	G2	Organ	H1	63	2	7
				Key A	-			
				Key B	-			
3	8	Church	G2	Organ	F1	63	2	8
				Key A	-			
				Key B	-			

YC73 V1.0

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
1	1	Soulful Rd	G2	Organ	-	63	0	1
				Key A	78Rd			
				Key B	-			
1	2	Natural CFX	G2	Organ	-	63	0	2
				Key A	CFX			
				Key B	-			
1	3	FM EP 1	G2	Organ	-	63	0	3
				Key A	FM Piano DA			
				Key B	-			
1	4	FM Lead	G2	Organ	-	63	0	4
				Key A	FM Syn Lead 2			
				Key B	-			
1	5	Jazz Lead	G2	Organ	H1	63	0	5
				Key A	-			
				Key B	-			
1	6	Rock Organ 1	G2	Organ	H2	63	0	6
				Key A	-			
				Key B	-			
1	7	Gospel Shout!	G2	Organ	H1	63	0	7
				Key A	-			
				Key B	-			
1	8	Rex Direct	G2	Organ	F2	63	0	8
				Key A	-			
				Key B	-			
2	1	67 Trem EP	G2	Organ	-	63	1	1
				Key A	67Rd Dark			
				Key B	-			
2	2	One Ear Upright	G2	Organ	-	63	1	2
				Key A	U1			
				Key B	-			
2	3	80s Piano Layer	G2	Organ	-	63	1	3
				Key A	CFX			
				Key B	FM The EP			
2	4	Fat OB Brass	G2	Organ	-	63	1	4
				Key A	OB Brass 1			
				Key B	OB Brass 2			
2	5	Jazz Swish	G2	Organ	H1	63	1	5
				Key A	-			
				Key B	-			
2	6	Prog 1	G2	Organ	H2	63	1	6
				Key A	-			
				Key B	-			
2	7	Gospel Worship	G2	Organ	H1	63	1	7
				Key A	-			
				Key B	-			
2	8	Italian Organ 1	G2	Organ	F3	63	1	8
				Key A	-			
				Key B	-			
3	1	Wr Trem	G2	Organ	-	63	2	1
				Key A	Wr Bright			
				Key B	-			
3	2	C7 w/Pad	G2	Organ	-	63	2	2
				Key A	C7			
				Key B	Analog Pad			
3	3	FM EP+Pad 1	G2	Organ	-	63	2	3
				Key A	FM The EP			
				Key B	Lite Strings			
3	4	Motion Pad	G2	Organ	-	63	2	4
				Key A	Mystic Pad			
				Key B	Analog Pad			
3	5	Squabble	G2	Organ	H1	63	2	5
				Key A	-			
				Key B	-			
3	6	Casino Fire	G2	Organ	H2	63	2	6
				Key A	-			
				Key B	-			
3	7	H Split Ld/Ba	G2	Organ	H1	63	2	7
				Key A	-			
				Key B	-			
3	8	Church	G2	Organ	F1	63	2	8
				Key A	-			
				Key B	-			

YC61 V1.0

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
1	1	Jazz Lead	G2	Organ	H1	63	0	1
				Key A	-			
				Key B	-			
1	2	Rock Organ 1	G2	Organ	H2	63	0	2
				Key A	-			
				Key B	-			
1	3	Gospel Shout!	G2	Organ	H1	63	0	3
				Key A	-			
				Key B	-			
1	4	Rex Direct	G2	Organ	F2	63	0	4
				Key A	-			
				Key B	-			
1	5	Soulful Rd	G2	Organ	-	63	0	5
				Key A	78Rd			
				Key B	-			
1	6	Natural CFX	G2	Organ	-	63	0	6
				Key A	CFX			
				Key B	-			
1	7	FM EP 1	G2	Organ	-	63	0	7
				Key A	FM Piano DA			
				Key B	-			
1	8	FM Lead	G2	Organ	-	63	0	8
				Key A	FM Syn Lead 2			
				Key B	-			
2	1	Jazz Swish	G2	Organ	H1	63	1	1
				Key A	-			
				Key B	-			
2	2	Prog 1	G2	Organ	H2	63	1	2
				Key A	-			
				Key B	-			
2	3	Gospel Worship	G2	Organ	H1	63	1	3
				Key A	-			
				Key B	-			
2	4	Italian Organ 1	G2	Organ	F3	63	1	4
				Key A	-			
				Key B	-			
2	5	67 Trem EP	G2	Organ	-	63	1	5
				Key A	67Rd Dark			
				Key B	-			
2	6	One Ear Upright	G2	Organ	-	63	1	6
				Key A	U1			
				Key B	-			
2	7	80s Piano Layer	G2	Organ	-	63	1	7
				Key A	CFX			
				Key B	FM The EP			
2	8	Fat OB Brass	G2	Organ	-	63	1	8
				Key A	OB Brass 1			
				Key B	OB Brass 2			
3	1	Squabble	G2	Organ	H1	63	2	1
				Key A	-			
				Key B	-			
3	2	Casino Fire	G2	Organ	H2	63	2	2
				Key A	-			
				Key B	-			
3	3	H Split Ld/Ba	G2	Organ	H1	63	2	3
				Key A	-			
				Key B	-			
3	4	Church	G2	Organ	F1	63	2	4
				Key A	-			
				Key B	-			
3	5	Wr Trem	G2	Organ	-	63	2	5
				Key A	Wr Bright			
				Key B	-			
3	6	C7 w/Pad	G2	Organ	-	63	2	6
				Key A	C7			
				Key B	Analog Pad			
3	7	FM EP+Pad 1	G2	Organ	-	63	2	7
				Key A	FM The EP			
				Key B	Lite Strings			
3	8	Motion Pad	G2	Organ	-	63	2	8
				Key A	Mystic Pad			
				Key B	Analog Pad			

YC88/YC73/YC61 V1.0

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
4	1	Clean Amp	G2	Organ	H3	63	3	1
				Key A	-			
				Key B	-			
4	2	H Split Ld/Chd	C3	Organ	H1	63	3	2
				Key A	-			
				Key B	-			
4	3	F1 Jazz	G2	Organ	F1	63	3	3
				Key A	-			
				Key B	-			
4	4	Rex Rotary	G2	Organ	F2	63	3	4
				Key A	-			
				Key B	-			
4	5	Rex Amp	G2	Organ	F2	63	3	5
				Key A	-			
				Key B	-			
4	6	Italian Organ 2	G2	Organ	F3	63	3	6
				Key A	-			
				Key B	-			
4	7	Italian Organ 3	G2	Organ	F3	63	3	7
				Key A	-			
				Key B	-			
4	8	F2 / RdBa	G2	Organ	F2	63	3	8
				Key A	78Rd			
				Key B	-			
5	1	CFX Bright	G2	Organ	-	63	4	1
				Key A	CFX			
				Key B	-			
5	2	C7	G2	Organ	-	63	4	2
				Key A	C7			
				Key B	-			
5	3	70's C7	G2	Organ	-	63	4	3
				Key A	C7			
				Key B	-			
5	4	Showbiz Upright	G2	Organ	-	63	4	4
				Key A	U1			
				Key B	-			
5	5	AP+Strings	G2	Organ	-	63	4	5
				Key A	CFX			
				Key B	Fast Strings			
5	6	Bass Stays Home	G2	Organ	-	63	4	6
				Key A	Upright Bass			
				Key B	C7			
5	7	78Rd Chorus	G2	Organ	-	63	4	7
				Key A	78Rd			
				Key B	-			
5	8	67Rd Overdrive	G2	Organ	-	63	4	8
				Key A	67Rd Bright			
				Key B	-			
6	1	Wr Dist	G2	Organ	-	63	5	1
				Key A	Wr Warm			
				Key B	-			
6	2	FM EP 2	G2	Organ	-	63	5	2
				Key A	FM The EP			
				Key B	-			
6	3	FM EP 3	G2	Organ	-	63	5	3
				Key A	FM Pf's Heart			
				Key B	-			
6	4	FM EP 4	G2	Organ	-	63	5	4
				Key A	FM Urban EP			
				Key B	FM DX EP			
6	5	FM EP 5	G2	Organ	-	63	5	5
				Key A	FM The EP			
				Key B	FM DX Road			
6	6	Magic Piano	G2	Organ	-	63	5	6
				Key A	67Rd Dark			
				Key B	FM Pf's Heart			
6	7	80s Soundtrack	G2	Organ	-	63	5	7
				Key A	78Rd			
				Key B	Analog Pad			
6	8	FM EP+Pad 2	G2	Organ	-	63	5	8
				Key A	FM Pf's Heart			
				Key B	Analog Pad			

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
7	1	Swell Backgrnd	C3	Organ	-	63	6	1
				Key A	FM Saw Pad			
				Key B	67Rd Dark			
7	2	Bass and 73Rd	G2	Organ	-	63	6	2
				Key A	Finger Bass			
				Key B	73Rd			
7	3	Analog Pad	G2	Organ	-	63	6	3
				Key A	Analog Pad			
				Key B	Noble Pad			
7	4	Fat Pad	G2	Organ	-	63	6	4
				Key A	JP Strings			
				Key B	Analog Pad			
7	5	Massive FM	G2	Organ	-	63	6	5
				Key A	FM Saw Pad			
				Key B	FM BellSquare			
7	6	Smooth Strings	G2	Organ	-	63	6	6
				Key A	FM Syn Str			
				Key B	JP Strings			
7	7	Stringy Octaves	G2	Organ	-	63	6	7
				Key A	Oct Syn Str			
				Key B	Unison Str			
7	8	Synth Brass	G2	Organ	-	63	6	8
				Key A	Synth Brass 1			
				Key B	Synth Brass 4			
8	1	Analog Lead	G2	Organ	-	63	7	1
				Key A	Classic Mini			
				Key B	-			
8	2	Expressive Lead	G2	Organ	-	63	7	2
				Key A	Sine Lead			
				Key B	Classic Mini			
8	3	Monster Lead	G2	Organ	-	63	7	3
				Key A	FM Syn Lead 1			
				Key B	FM Syn Lead 2			
8	4	Ep/Lead Split 1	G2	Organ	-	63	7	4
				Key A	73Rd			
				Key B	Soft Square			
8	5	Ep/Lead Split 2	G2	Organ	-	63	7	5
				Key A	FM DX EP			
				Key B	Mini Lead			
8	6	Pad/Lead	G2	Organ	-	63	7	6
				Key A	Analog Pad			
				Key B	Funky Mini			
8	7	Icy Split	C3	Organ	-	63	7	7
				Key A	Digi Pad			
				Key B	Mini Lead			
8	8	Sticky Bass	G2	Organ	-	63	7	8
				Key A	1o1 Bass			
				Key B	Analog Bass			
9	1	Aggressive Bass	G2	Organ	-	63	8	1
				Key A	1o1 Bass			
				Key B	Analog Bass			
9	2	Dual Bass	G2	Organ	-	63	8	2
				Key A	FM Saw Pad			
				Key B	Unison Bass			
9	3	FM Harmonic Ba	G2	Organ	-	63	8	3
				Key A	Mini Sub Bass			
				Key B	FM Tear Bass			
9	4	Syn Bell 1	G2	Organ	-	63	8	4
				Key A	Heaven Bell			
				Key B	-			
9	5	Syn Bell 2	G2	Organ	-	63	8	5
				Key A	Far Away FM			
				Key B	-			
9	6	Concerto Goldo	G2	Organ	-	63	8	6
				Key A	Slow Strings			
				Key B	Violin			
9	7	String Ensemble	G2	Organ	-	63	8	7
				Key A	Fast Strings			
				Key B	Violin			
9	8	Big Fanfare	G2	Organ	-	63	8	8
				Key A	Marcato Str			
				Key B	Brass 3			

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
10	1	Classic Gt.	G2	Organ	-	63	9	1
				Key A	Classic Gt			
				Key B	-			
10	2	Steel Gt.	G2	Organ	-	63	9	2
				Key A	Steel Gt			
				Key B	-			
10	3	Clean Gt.	G2	Organ	-	63	9	3
				Key A	Clean Gt 1			
				Key B	-			
10	4	Brass Section	G2	Organ	-	63	9	4
				Key A	Brass 1			
				Key B	-			
10	5	Brass w/Sax	G2	Organ	-	63	9	5
				Key A	Brass 1			
				Key B	Brass 2			
10	6	Upright Bass	G2	Organ	-	63	9	6
				Key A	Upright Bass			
				Key B	-			
10	7	Fingered Bass	G2	Organ	-	63	9	7
				Key A	Finger Bass			
				Key B	-			
10	8	Slap Bass	G2	Organ	-	63	9	8
				Key A	Slap Bass			
				Key B	-			

Новые дополнительные Live Set Sounds

YC88/YC73/YC61 V1.10

Page	No	Name	Split Point	Section	Voice Name	MSB	LSB	PC
11	1	Nashville C3	G2	Organ	-	63	10	1
				Key A	Nashville C3			
				Key B	-			
11	2	Early 80s Layer	G2	Organ	-	63	10	2
				Key A	Nashville C3			
				Key B	74Rd Stage			
11	3	Live CF3	G2	Organ	-	63	10	3
				Key A	Live CF3			
				Key B	-			
11	4	BigCF+Pad	G2	Organ	-	63	10	4
				Key A	Live CF3			
				Key B	Analog Pad			
11	5	73Rd Studio	G2	Organ	-	63	10	5
				Key A	73Rd Studio			
				Key B	-			
11	6	Ballad Rd Layer	G2	Organ	-	63	10	6
				Key A	73Rd Studio			
				Key B	FM Pf's Heart			
11	7	74Rd Stage	G2	Organ	-	63	10	7
				Key A	74Rd Stage			
				Key B	-			
11	8	Rotating EP	G2	Organ	-	63	10	8
				Key A	74Rd Stage			
				Key B	-			

Voice List (Список тембров)

YC88/YC73/YC61 V1.0

Section	Category	Sub Category	No.	Name	Parameter Value (*)
Organ	-	-	H1	H1	0
			H2	H2	1
			H3	H3	2
			F1	F1	3
			F2	F2	4
			F3	F3	5
Keys A/B	Piano	Grand	01	CFX	6
			02	S700	7
			03	C7	8
		Upright	06	U1	9
		CP	07	CP80 1	10
			08	CP80 2	11
		Layer	09	Piano Strings	12
			10	Piano Synth	13
	E.Piano	Rd	01	78Rd	14
			02	75Rd Funky	15
			03	73Rd	16
			04	67Rd Dark	17
			05	67Rd Bright	18
		Wr	08	Wr Warm	19
			09	Wr Bright	20
			10	Wr Wide	21
		Clavi	11	Clavi B	22
			12	Clavi S	23
			13	Harpsichord	24
		FM	14	FM Piano DA	25
			15	FM DX Road	26
			16	FM The EP	27
			17	FM DX EP	28
			18	FM Pf's Heart	29
			19	FM Urban EP	30
			20	FM PowerClavi	31
	Synth	Pad	01	FM Saw Pad	32
			02	Analog Pad	33
			03	Dark Light	34
			04	Digi Pad	35
			05	Noble Pad	36
			06	Pop Pad	37
			07	Fat Saw	38
			08	Angel Pad	39
			09	FM BellSquare	40
			10	FM Cloud Pad	41
			11	FM Bow RM Pad	42
			12	Itopia	43
			13	Mystic Pad	44
			14	Nowhere	45
			15	FM Choir	46
			16	Lite Strings	47
		Strings	17	JP Strings	48
			18	FM Syn Str	49
			19	Pop Syn Str	50
			20	Unison Str	51
			21	Oct Syn Str	52
		Brass	22	Synth Brass 1	53
			23	Synth Brass 2	54
			24	Synth Brass 3	55
			25	Synth Brass 4	56
			26	OB Brass 1	57
			27	OB Brass 2	58
			28	OB Brass 3	59
			29	FM Brass	60
			30	FM Brass Ens	61
		Lead	31	FM Syn Lead 1	62
			32	FM Syn Lead 2	63
			33	Classic Mini	64

Section	Category	Sub Category	No.	Name	Parameter Value (*)
Keys A/B	Synth	Lead	34	Mini Lead	65
			35	Funky Mini	66
			36	Sine Lead	67
			37	Square Lead	68
			38	Soft Square	69
			39	Dirty Hook	70
			40	Sync Saw Lead	71
			41	Nu Mini	72
			42	5th Lead	73
			43	Calliope Lead	74
		Bass	44	Mini Sub Bass	75
			45	Analog Bass	76
			46	1o1 Bass	77
			47	Synth Bass	78
			48	FM Tear Bass	79
			49	FM DX E.Bass	80
			50	FM BoogieBass	81
			51	FM SuperBass	82
			52	Unison Bass	83
			53	FM Owl Bass	84
		ChromPerc	54	FM Glocken	85
			55	FM Far Away	86
			56	Digi Bell	87
			57	FM Brite Comp	88
			58	Heaven Bell	89
			59	FM Tblr Bells	90
	Others	Strings	01	Slow Strings	91
			02	Marcato Str	92
			03	Fast Strings	93
			04	Tremolo Str	94
			05	Pizzicato	95
			06	Tape Strings	96
			07	Violin	97
			08	Cello	98
		Guitar	09	Classic Gt	99
			10	Steel Gt	100
			11	12Strings Gt	101
			12	FM Jazz Gt	102
			13	Clean Gt 1	103
			14	Clean Gt 2	104
			15	Clean Gt 3	105
			16	Banjo	106
			17	Sitar	107
			18	Shamisen	108
			19	Koto	109
		Brass	20	Brass 1	110
			21	Brass 2	111
			22	Brass 3	112
			23	Sf. Brass	113
			24	Trumpet	114
			25	Trombone	115
			26	Horn 1	116
			27	Horn 2	117
		Sax / Winds	28	Sax Section 1	118
			29	Sax Section 2	119
			30	Soprano Sax	120
			31	Alto Sax	121
			32	Tenor Sax	122
			33	Baritone Sax	123
			34	Jazz Flute	124
			35	Alto Flute	125
			36	Tape Flute	126
			37	Harmonica	127
			38	FM Harmonica	128
			39	Pan Flute	129

Section	Category	Sub Category	No.	Name	Parameter Value (*)
Keys A/B	Others	Sax / Winds	40	Bag Pipe	130
			41	Shakuhachi	131
		Bass	42	Upright Bass	132
			43	Finger Bass	133
			44	Pick Bass	134
			45	Fretless Bass	135
			46	Slap Bass	136
		ChromPerc	47	Glocken	137
			48	Jazz Vibes	138
			49	Marimba	139
			50	Xylophone	140
			51	Tubular Bell	141
			52	Kalimba	142
		Others	53	Accordion	143
			54	Musette	144

Дополнительные новые Voices (Тембры)

YC88/YC73/YC61 V1.10

Section	Category	Sub Category	No.	Name	Parameter Value (*)
Keys A/B	Piano	Grand	04	Nashville C3	145
			05	Live CF3	146
	E.Piano	Rd	06	73Rd Studio	147
			07	74Rd Stage	148

* Это номер, используемый для параметров Voice Number (Номер тембра).