

Additional information for audio/video connection

When AUDIO1 or AUDIO2 is selected as the input source, an analog video signal input from an external component connected to the AV1-6 or V-AUX jack can be output to the video monitor. For example, you can use this connection for an external component whose audio output is an analog signal and outputs a video signal via component jacks, such as a game console.

To connect such a component, do the following connection/setting.

Part 1: Connecting an external component

Part 2: Assigning the video input jacks to the audio input

Part 1: Connecting an external component

- Audio output jacks: Connect the audio output jacks of the external component to the AUDIO1 or AUDIO2 audio input jacks.
- Video output jacks: Connect the video output jacks of the external component to the AV1-6 or VIDEO AUX video input jacks.

Note

 Make sure that this unit and other components are unplugged from the AC wall outlets.

■ Audio connection

Output jacks on the connected source component	Input sources/jacks of this unit	
Analog audio output	AUDIO1	AUDIO
	AUDIO2	AUDIO

■ Video connection


Output jacks on the connected source component	Jacks of this unit	
Component video output	AV1 (TV)	COMPONENT VIDEO
	AV2	COMPONENT VIDEO
Composite video output	AV3 (CD)	VIDEO
	AV4	VIDEO
	AV5	VIDEO
	AV6	VIDEO
	VIDEO AUX (Front panel)	VIDEO
S-Video output	AV5	S-VIDEO*

^{*} Some models only.

Note

 If the video monitor is connected to this unit via an analog video connection (component video or composite video connection), connect the external component to this unit via the same analog connection.

Example of connection

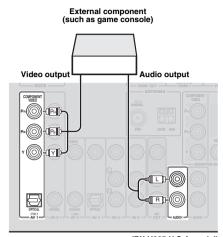

(RX-V665 U.S.A.model)

Part 2: Assigning the video input jacks to the audio input

- 1 Turn on this unit.
- Press AUDIO1 or AUDIO2 on the remote control to select the input source.
- 3 Press OPTION on the remote control. The OPTION menu appears.
- 4 Press Cursor ∆ / ∇ to display "Video Out," and press ENTER.
- 5 Press Cursor
 √ > to select the video input terminal connected to the video output jacks of the external component.
 - AV1-2 (COMPONENT VIDEO)
 - AV3-6 (VIDEO)
 - AV5 (S-VIDEO)*
 - V-AUX (VIDEO)
 - Off (no video input)
 - * Some models only.
- To end the setting, press OPTION.